## **IMPORTANT**

#### **PARTS ORDER :**

When placing an order, always state :

- Spare part ref. number
- Complete description
- Quantity
- Type of machine
- Machine serial number.
- Component identification number (mast, jib, cab, engine, etc

CAUTION:

Certain parts, or part assemblies illustrated in this catalogue are only supplied as options, and not with the standard machine.

## SYMBOLS :

From (machine, engine, date, etc.)

□ □: For (machine, engine, date, etc.) □ □ : Except for (machine, engine, date, etc.) ⊲ •: See drawing

●, ■, ▲, ★, ❀, ®, ④: Up to Ο,□, Δ, ★, ঔ, ©, @: From } machine N°, N° engine, cab, transmission, etc.

## **IMPORTANT**

## **COMMANDES DE PIECES :**

Pour passer vos commandes, préciser toujours :

- N° de pièce rechange
- Désignation complète
- Quantité
- Type de machine
- N° dans la série de la machine
- N° d'identification du composant
- (mât, flèche, cabine, moteur, etc.)

## ATTENTION:

Certaines pièces ou montages de pièces illustrés dans ce catalogue sont livrés seulement en option et non avec la machine standard.

machine N°,

N° moteur, cabine,

transmission, etc.

## SYMBOLISATION :

⊢→ : A partir de (machine, moteur, date, etc.)
⊢→ : Jusqu'à (machine, moteur, date, etc.)

□ □: Pour (machine, moteur, etc.) □ □ : Sauf pour (machine, moteur, etc.) ⊲ : Voir planche

●, ■, ▲, ★, ⊕, ℗, ④ : Jusqu'à Ο,□, Δ, ★, ☺, ℗, ◎: A partir } **BESTELLUNG VON TEILEN :** 

Bei Ihrer Bestellung bitte immer folgende Daten angeben :

- Nr. des Ersatzteiles
- komplette Bezeichnung
- Menge
- Typ der Maschine
- Seriennummer der Maschine
- \*- Identifikationsnummer des Bestandteiles
- (Mast, Ausleger, Kabine, Motor, usw.)

## ACHTUNG :

Bestimmte in diesem Katalog illustrierte Teile oder Montagen von Teilen werden ausschließlich als Option geliefert und nicht mit der Maschine in ihrer Standardausführung.

**WICHTIG** 

## SYMBOLISIERUNG :

→ : Ab (Maschine, Motor, Datum, usw.) → : Bis (Maschine, Motor, Datum, usw.)

□ □: Bei (Maschine, Motor, Datum, usw.) □ □ : Außer bei (Maschine, Motor, Datum, usw.) ◄ : siehe Tafel

●, ■, ▲, ★, ❀, ®, త: Bis Ο, □, Δ, ★, ◊, □, @: Ab Maschine N°, Motor Nr, kabine, Transmission, usw.

This manual is for information purposes only. Any reproduction, copy, representation, recording, transfer, distribution, or other, in part or in whole, in any format is prohibited. The plans, designs, views, commentaries and instructions, even the document organization that are found in this document, are the intellectual property of MANITOU BF. Any violation of the aforementioned may lead to civil and criminal prosecution. The logos as well as the visual identity of the company are the property of MANITOU BF and may not be used without express and formal authorization. All rights are reserved.

La présente brochure n'est fournie qu'à titre consultatif, toute reproduction, copie, représentation, captation, cession, distribution, ou autre, partiellement ou en totalité, sous quelque format que ce soit est interdite. Les schémas, les dessins, les vues, les commentaires les indications, l'organisation même du document qui sont rapportés dans la présente documentation, sont la propriété intellectuelle de MANITOU BF. Toute infraction à ce qui précède est susceptible d'entraîner des condamnations civiles et pénales. Les logos ainsi que l'identité visuelle de l'entreprise sont la propriété de MANITOU BF et ne peuvent être utilisés sans autorisation exprès et formelle. Tous droits réservés. Die vorliegende Broschüre dient allein zur Beratung. Nachdruck, Fotokopieren, Vervielfältigung, Darstellung, Erfassung, Überlassung, Verbreitung oder Sonstiges (ganz oder teilweise) in jeglicher Form sind verboten. Die Entwürfe, Zeichnungen, Bilder, Darstellungen, Ansichten, Kommentare, Hinweise und der Aufbau der Druckschrift selbst, die in der vorliegenden Dokumentation enthalten sind, sind geistiges Eigentum von MANITOU BF. Alle Verstöße gegen das Vorstehende können zu straf- oder zivilrechtlicher Verfolgung führen. Die Logos und Markenzeichen sowie Unternehmens- und Produktbezeichnungen sind Eigentum von MANITOU BF und dürfen ohne ausdrückliche Genehmigung nicht verwendet werden. Alle Rechte vorbehalten.

## IMPORTANTE

## IMPORTANTE

#### **PEDIDOS DE PIEZAS :**

Cuando efectúe sus pedidos, indique siempre :

- N° de pieza de recambio
- Designación completa
- Cantidad
- Tipo de máquina
- N° en la serie de la máquina
- N° de identificación del componente
- (mástil, pluma, cabina, motor, etc.)

## ATENCIÓN

Ciertas piezas o montajes de piezas ilustrados en este catálogo se suministran únicamente como opción y no con la máquina estándar.

## SÍMBOLOS:

⊢→ : A partir de (máquina, motor, fecha, etc.)
→ : Hasta (máquina, motor, fecha, etc.)

□ □: Para (máquina, motor, etc.) □ □ : Salvo para (máquina, motor, etc.) </

●, ■, ▲, ★, ⊗, ®, ⊗: Hasta ○,□, △, ★, ⊗, ®, ⊗: A partir} máquina N°, N° motor, cabina, transmisión, etc.

#### **ORDINE DI PEZZI :**

Per passare i vostri ordini, precisare sempre :

- N° pezzo di ricambio
- Descrizione completa
- Quantità
- Tipo di macchina
- N° di serie della macchina
- N° d'identificazione componente
- (rampa, braccio, cabina,motore, ecc.)

## ATTENZIONE :

Alcuni pezzi o montaggio di pezzi illustrati in questo catalogo vengono spediti solamente come optional e non con la macchina standard.

## SIMBOLI :

A partire da (macchina, motore, data, ecc.)
 Fino a (macchina, motore, data, ecc.)

□ : Per (macchina, motore, ecc.) □ : Escluso per (macchina, motore, ecc) ✓ : Vedere tavola

 macchina N°, N° motore, cabina, trasmissione, ecc.

Este folleto se ofrece a título meramente informativo y queda prohibida su reproducción, copia, representación, captación, cesión, distribución y demás, parcial o total, en el formato que sea. Los esquemas, dibujos, vistas, comentarios, indicaciones, la organización misma del documento aportado en esta documentación son propiedad intelectual de MANITOU BF. Cualquier infracción a lo antedicho puede acarrear condenas civiles y penales. Los logotipos y la identidad visual de la empresa son propiedad de MANITOU BF y no pueden utilizarse sin su autorización expresa y formaL. Reservados todos los derechos. Il presente manuale è fornito esclusivamente a titolo di consultazione; è vietata qualsiasi riproduzione, copia, rappresentazione, acquisizione, cessione, distribuzione o altro, parziale o totale, e in qualsivoglia formato. Gli schemi, i disegni, le viste, i commenti, le indicazioni e l'organizzazione stessa del documento, riportati nella presente documentazione, sono proprietà intellettuale di MANITOU BF. Qualsiasi violazione a quanto riportato sopra è passibile di condanna civile e penale. I loghi e l'identità visiva dell'azienda sono di proprietà di MANITOU BF e non possono essere utilizzati senza previa autorizzazione espressa e formale. Tutti i diritti sono riservati.

## Contents

## GENERAL INSTRUCTIONS AND SAFETY NOTICE

GENERAL INSTRUCTIONS AND SAFETY NOTICE	4
_ADHESIVE SIGNS	
_ADHESIVE SIGNS 8AB1619 - CAB (Details) (307768MOD)	1
8AB1620 - CAB (Details) (307768MOD)	
12AA670 - ADHESIVE (647121)	
12AA671 - ADHESIVE (647121)	
12AA808 - ADHESIVE (647121)	
12AA809 - ADHESIVE (647121)	
	N
FILTERS-BELT	
BP234 - GEAR BOX (DETAILS) (258799MOD)	7
AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)	
AP1917 - FUEL CIRCUIT (271255MOD)	
2AA276 - FILTERS AND BELTS (647121)	
2AA277 - FILTERS AND BELTS (647121)	
4AA1224 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA1225 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA1229 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AC357 - FUEL CIRCUIT (647121)	
4AC358 - FUEL CIRCUIT (647121)	
4AC384 - FUEL CIRCUIT (647121)	
4AC385 - FUEL CIRCUIT (647121)	
AP2249 - ENGINE ADAPTATION (647121)	
AP2250 - ENGINE ADAPTATION (647121)	
FRAME - BODY	
10AA1190 - HYDRAULIC (Principal circuit) (647121)	
10AA1191 - HYDRAULIC (Principal circuit) (647121)	
10AE1534 - HYDRAULIC (Boom circuit) (647121)	
10AE1535 - HYDRAULIC (647121)	
10AE1536 - HYDRAULIC (Lifting - Telescope circuit) (647121)	
10AE1537 - HYDRAULIC (Compensation - Tilting - Attachment circuit) (647121)	

10AG329 - HYDRAULIC (Levelling system circuit) (647121)	28
11CB1330 - ELECTRICITY (Details) (647121)	29
11CB1331 - ELECTRICITY (Details) (647121)	30
4AA1226 - ENGINE - TRANSMISSION ADAPTATION (647121)	31
4AA1413 - ENGINE - TRANSMISSION ADAPTATION (647121)	32
4AA1414 - ENGINE - TRANSMISSION ADAPTATION (647121)	33
4AA897 - ENGINE - TRANSMISSION ADAPTATION (647121)	34

_ENGINE BONNET	
	35
9AA784 - BODY (647121)	
9AB168 - SOUND PROOF BODY (647121)	
9AB172 - SOUND PROOF BODY (647121)	
9AB196 - BODY (647121)	
JADI90 DODT (047121)	
_COUNTERWEIGHT	
6AA762 - FRAME - COUNTERWEIGHT (647121)	
6AA763 - FRAME - COUNTERWEIGHT (647121)	
_ADJUSTABLE DRAW HOOK 6AA650 - FRAME - COUNTERWEIGHT (647121)	1
6AA650 - FRAME - COUNTERWEIGHT (647121)	
	L
_MUD GUARD (FENDER)	
9AA634 - BODY (647121)	
9AA785 - BODY (647121)	
9AA786 - BODY (647121)	
_SOUND PROOFING	
8AA980 - CAB ADAPTATION (647121)	
9AA635 - BODY (647121)	
9AB168 - SOUND PROOF BODY (647121)	
9AB172 - SOUND PROOF BODY (647121)	
9AB196 - BODY (647121)	
DRIVER CAB	
8AA980 - CAB ADAPTATION (647121)	See nage 46
8AA981 - CAB ADAPTATION (647121)	
TANK	
4AC357 - FUEL CIRCUIT (647121)	See 16
4AC358 - FUEL CIRCUIT (647121)	
9AA635 - BODY (647121)	
9AB168 - SOUND PROOF BODY (647121)	
9AB172 - SOUND PROOF BODY (647121)	See page 38
	_
9AA634 - BODY (647121)	
9AA785 - BODY (647121)	
9AA786 - BODY (647121)	See page 45

## ELECTRICITY

AP1913 - ALTERNATOR (271255MOD)	48
AP1915 - STATER MOTOR (271255MOD)	49
11CB1624 - ELECTRICITY (Details) (647121)	
11CB1625 - ELECTRICITY (Details) (647121)	51
11CB1626 - ELECTRICITY (Details) (647121)	
11CB1627 - ELECTRICITY (Details) (647121)	
11CB1628 - ELECTRICITY (Details) (647121)	54
11CB1629 - ELECTRICITY (Details) (647121)	
11CC343 - ELECTRICITY (Cab structure) (647121)	
11CC369 - ELECTRICITY (Cab structure) (647121)	57
11CD230 - ELECTRICITY (Engine - Transmission) (647121)	58
11CD231 - ELECTRICITY (Engine - Transmission) (647121)	59
A.	
_Electronic unit - ECU	
11CC316 - ELECTRICITY (Cab structure) (647121)	60
_CIRCUIT - HARNESS 8AD212 - HEATING CIRCUIT (289909MOD)	
8AD212 - HEATING CIRCUIT (289909MOD)	61
8AD439 - COMPARTMENT (Air-conditioning) (307768MOD)	62
10AA1039 - HYDRAULIC (Principal circuit) (647121)	
10EA285 - HYDRAULIC (Details) (647121)	
11AA1653 - ELECTRIC CIRCUIT (647121)	
11AA1654 - ELECTRIC CIRCUIT (647121)	66
11AA1655 - ELECTRIC CIRCUIT (647121)	67
11AA1656 - ELECTRIC CIRCUIT (647121)	
11AA1657 - ELECTRIC CIRCUIT (647121)	
11AA1658 - ELECTRIC CIRCUIT (647121)	
11AA1659 - ELECTRIC CIRCUIT (647121)	
11AA1813 - ELECTRIC CIRCUIT (647121)	
11AA1814 - ELECTRIC CIRCUIT (647121)	
11AA1816 - ELECTRIC CIRCUIT (647121)	
11CA134 - ELECTRICITY (Details plate relay and Fuses) (647121)	
11CA140 - ELECTRICITY (Details plate relay and Fuses) (647121)	
11CB1333 - ELECTRICITY (Details) (647121)	
11CB1334 - ELECTRICITY (Details) (64/121)	
04/121)	δU

# \_LIGHTING - SIGNALING

8AB1186 - CAB (DETAILS) (289909MOD)	)	81
8AB1416 - CAB (DETAILS) (307767MOD	)	82

8AB1623 - CAB (Details) (307768MOD)	83
11AA1653 - ELECTRIC CIRCUIT (647121)	
11AA1654 - ELECTRIC CIRCUIT (647121)	page 66
11AA1655 - ELECTRIC CIRCUIT (647121)	page 67
11CB1330 - ELECTRICITY (Details) (647121)	page 29
11CB1331 - ELECTRICITY (Details) (647121)	page 30
11CB1332 - ELECTRICITY (Details) (647121)	84

## \_SWITCH

8AB1186 - CAB (DETAILS) (289909MOD)	
8AD212 - HEATING CIRCUIT (289909MOD)	See page 61
8AB1416 - CAB (DETAILS) (307767MOD)	
8AD429 - HEATING CIRCUIT (307767MOD)	
8AB1622 - CAB (Details) (307768MOD)	
8AB1623 - CAB (Details) (307768MOD)	
8AD439 - COMPARTMENT (Air-conditioning) (307768MOD)	
10EA285 - HYDRAULIC (Details) (647121)	
11AA1656 - ELECTRIC CIRCUIT (647121)	
11CC316 - ELECTRICITY (Cab structure) (647121)	
6BB283 - PEDALS - LINKAGE (647121)	
6BB284 - PEDALS - LINKAGE (647121)	

## \_REAR PLUG

6BB284 - PEDALS - LINKAGE (647121)		
_REAR PLUG 11AA1655 - ELECTRIC CIRCUIT (647121)	550	
_SAFETY SYSTEM	00)	

## \_SAFETY SYSTEM

11CA134 - ELECTRICITY (Details plate relay and Fuses) (647121)	See pag	je 76
11CB1330 - ELECTRICITY (Details) (647121)	. See pag	je 29
11CB1331 - ELECTRICITY (Details) (647121)		
11CB1332 - ELECTRICITY (Details) (647121)	. See pag	je 84
11CB1333 - ELECTRICITY (Details) (647121)	. See pag	je 78
11CB1334 - ELECTRICITY (Details) (647121)	. See pag	je 79
6BA345 - BRAKE CIRCUIT (647121)	See pag	je 80
6BB283 - PEDALS - LINKAGE (647121)	See pag	je 87
6BB284 - PEDALS - LINKAGE (647121)	See pag	je 88
 SELECTOR - MANIPULATOR		
	~	60

## \_SELECTOR - MANIPULATOR

10AA1039 - HYDRAULIC (Principal circuit) (647121)	See page 63
10EA285 - HYDRAULIC (Details) (647121)	See page 64
11CB1332 - ELECTRICITY (Details) (647121)	See page 84
11CC316 - ELECTRICITY (Cab structure) (647121)	See page 60
6BB283 - PEDALS - LINKAGE (647121)	See page 87
6BB284 - PEDALS - LINKAGE (647121)	

AXLE ASSEMBLY - AXLE

AX2805 - FRONT AXLE (647121)	
_REAR	$\sim$
AX1931 - REAR AXLE CASING (281546MOD)	90
AX1932 - REAR AXLE DIFFERENTIAL (281546MOD)	91
AX1933 - REAR AXLE REDUCTION GEAR (281546MOD)	
AX1934 - OIL BATH DISC BRAKE - REAR AXLE (281546MOD)	
AX1935 - REAR AXLE STEERING SYSTEM (281546MOD)	
3AA396 - WHEELS (647121)	
AX2730 - REAR AXLE (647121)	
······································	A.
_FRONT	and the second se
AX1920 - FRONT AXLE CASING (281545MOD)	
AX1921 - FRONT AXLE DIFFERENTIAL (281545MOD)	
AX1922 - FRONT AXLE REDUCTION GEAR (281545MOD)	
AX1923 - OIL BATH DISC BRAKE - FRONT AXLE (281545MOD)	
AX1924 - FRONT AXLE STEERING SYSTEM (281545MOD)	
3AA396 - WHEELS (647121)	
AX2731 - FRONT AXLE (647121)	102
	)
_WHEELS ~~~	
_WHEELS 3AA396 - WHEELS (647121)	
HYDRAULIC	
HYDRAULIC 6BA344 - TRAILER BRAKE CIRCUIT (647121)	
10AA1190 - HYDRAULIC (Principal circuit) (647121)	
10AA1191 - HYDRAULIC (Principal circuit) (647121)	
10AE1537 - HYDRAULIC (Compensation - Tilting - Attachment circuit) (647121)	
11AA1657 - ELECTRIC CIRCUIT (647121)	
6BA345 - BRAKE CIRCUIT (647121)	
ATTACHMENT	
10AE1377 - HYDRAULIC (Jib circuit) (647121)	
ACUMULATOR	
10AA1039 - HYDRAULIC (Principal circuit) (647121)	
10BA466 - HYDRAULIC (Steering circuit) (647121)	
$\sim$	
COMPENSATION	

LEVELLING	A Company and the second se
LEVELLING 10AG329 - HYDRAULIC (Levelling system circuit) (647121)	
STEERING	OY
	See page
10BA529 - HYDRAULIC (Steering circuit) (647121)	
10BA530 - HYDRAULIC (Steering circuit) (647121)	
	O'
_LIFTING	
10AE1376 - HYDRAULIC (Lifting - Telescope circuit) (647121)	
17AA53 - LUBRIFICATION (647121)	
	1
_CENTRALI SED GREASI NG	
17AA69 - LUBRIFICATION (647121)	
17AA105 - LUBRIFICATION (647121)	
_TILTING	
10AE1377 - HYDRAULIC (Jib circuit) (647121)	
10AE1534 - HYDRAULIC (Boom circuit) (647121)	
10AE1535 - HYDRAULIC (647121)	See pag
_MAIN	
10AA1041 - HYDRAULIC (Principal circuit) (647121)	
TESTOP - (647121)	
_COOLI NG SYSTEM AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)	Coo 10
4AA1229 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4441229 - LINGINE - TRANSPILSSION ADAFTATION (04/121)	
_TELESCOPING	
10AE1376 - HYDRAULIC (Lifting - Telescope circuit) (647121)	See nade
10AE1377 - HYDRAULIC (Jib circuit) (647121)	
10AE1378 - HYDRAULIC (Compensation - Jib feed circuit) (647121)	
10AE1534 - HYDRAULIC (Boom circuit) (647121)	

4AA1229 - ENGINE - TRANSMISSION ADAPTATION (647121)	See page	e 15
_DETAIL	4	
AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)		ge 8
AX1924 - FRONT AXLE STEERING SYSTEM (281545MOD)		-
AX1935 - REAR AXLE STEERING SYSTEM (281546MOD)		
10AA1038 - HYDRAULIC (Principal circuit) (647121)		
10AA1039 - HYDRAULIC (Principal circuit) (647121)		
10AA1040 - HYDRAULIC (Principal circuit) (647121)		
10AE1377 - HYDRAULIC (Jib circuit) (647121)		
10BA466 - HYDRAULIC (Steering circuit) (647121)		
10DA369 - VALVE BANK (647121)		
10EA360 - HYDRAULIC (Details) (647121)		
TESTOP - (647121)		
_VALVE BANK	474	
10BA466 - HYDRAULIC (Steering circuit) (647121)	See nage	105
10DA369 - VALVE BANK (647121)		
10DA371 - VALVE BANK (647121)		
11AA1657 - ELECTRIC CIRCUIT (647121)		
6BA345 - BRAKE CIRCUIT (647121)		
		200
10AA1039 - HYDRAULIC (Principal circuit) (647121)	See nage	- 63
10EA285 - HYDRAULIC (Details) (647121)		
_TANK		
10AA1038 - HYDRAULIC (Principal circuit) (647121)	See nage	115
10AA1040 - HYDRAULIC (Principal circuit) (647121)		
10AA1190 - HYDRAULIC (Principal circuit) (647121)		
TESTOP - (647121)		
	000 page	
_RAM		
10AE1537 - HYDRAULIC (Compensation - Tilting - Attachment circuit) (647121)	See page	e 27
COMPENSATION		
10AE1378 - HYDRAULIC (Compensation - Jib feed circuit) (647121)	See page	106
10CB48 - HYDRAULIC (Compensation cylinder) (647121)		
10CB76 - HYDRAULIC (Compensation cylinder) (647121)		
10CB77 - HYDRAULIC (Compensation cylinder) (647121)		
LEVELLING		
10AG329 - HYDRAULIC (Levelling system circuit) (647121)	See nage	e 28
		. =•

## \_\_STEERI NG

LIFTING	No.
10CA447 - HYDRAULIC (Lifting cylinder) (647121)	
	1.
TILTING	
10CF90 - HYDRAULIC - CYLINDER OF LEVELLING SYSTEM (647121)	
TELESCOPING	5
	See page 110
	See page 26
10CC182 - HYDRAULIC (Telescope cylinder) (647121)	
TELESCOPIC BOOM	
5ВА887 - ВООМ (647121)	
_DETAIL 5BA793 - JIB (647121)	
5BA793 - JIB (647121)	
5BA793 - JIB (647121)	See page 140
$\sim$	
_SIMULTANEOUS TELESCOPING	

ENGINE

ENGINE UNIT         BP234 - GEAR BOX (DETAILS) (258799MOD)         See page 7           AP1902 - CVLINDER BLOCK (271255MOD)         142           AP1903 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)         143           AP1904 - CVLINDER HEAD (271255MOD)         144           AP1905 - ROCKER LEVER SHAFT (271255MOD)         144           AP1906 - TIMING GEAR AND CAMSHAFT (271255MOD)         146           AP1907 - OIL SUMP - LUBRICATING OIL PUMP (271255MOD)         146           AP1908 - ROCKER LEVER COVER AND BREATHER (271255MOD)         147           AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)         148           AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)         148           AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)         148           AP1910 - TURBOCHARGER (DETAILS) (271255MOD)         150           AP1914 - FLY WHEEL (271255MOD)         151           AP1915 - TURBOCHARGER (DETAILS) (271255MOD)         151           AP1916 - TURBOCHARGER (DETAILS) (271255MOD)         151           AP1916 - TURBOCHARGER (DETAILS) (271255MOD)         152           11CB1331 - ELECTRICITY (Details) (647121)         See page 29           11CB1331 - ELECTRICITY (Details) (647121)         See page 30           4AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)         See page 14
AP1902 - CYLINDER BLOCK (271255MOD)       142         AP1903 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)       143         AP1904 - CYLINDER HEAD (271255MOD)       144         AP1905 - ROCKER LEVER SHAFT (271255MOD)       144         AP1906 - TIMING GEAR AND CAMSHAFT (271255MOD)       145         AP1906 - TIMING GEAR AND CAMSHAFT (271255MOD)       146         AP1907 - OIL SUMP - LUBRICATING OIL PUMP (271255MOD)       147         AP1908 - ROCKER LEVER COVER AND BREATHER (271255MOD)       147         AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)       148         AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)       149         AP1914 - FLY WHEEL (271255MOD)       149         AP1914 - FLY WHEEL (271255MOD)       150         AP1916 - TURBOCHARGER (DETAILS) (271255MOD)       151         AP13103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)       152         11CB1331 - ELECTRICITY (Details) (647121)       See page 29         11CB1331 - ELECTRICITY (Details) (647121)       See page 30         4AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)       See page 14         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       154         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       155
AP1903 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)       143         AP1904 - CYLINDER HEAD (271255MOD)       144         AP1905 - ROCKER LEVER SHAFT (271255MOD)       145         AP1906 - TIMING GEAR AND CAMSHAFT (271255MOD)       145         AP1907 - OIL SUMP - LUBRICATING OIL PUMP (271255MOD)       146         AP1909 - OIL SUMP - LUBRICATING OIL PUMP (271255MOD)       147         AP1908 - ROCKER LEVER COVER AND BREATHER (271255MOD)       147         AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)       148         AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)       149         AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)       149         AP1914 - FLY WHEEL (271255MOD)       149         AP1914 - FUY WHEEL (271255MOD)       150         AP1913 - DISTONS, CONNECTING ROBS AND CRANKSHAFT (271255MOD)       152         11CB1330 - ELECTRICITY (Details) (647121)       152         11CB1331 - ELECTRICITY (Details) (647121)       152         11CB1331 - ELECTRICITY (Details) (647121)       153         4A1227 - ENGINE - TRANSMISSION ADAPTATION (647121)       153         4A1228 - ENGINE - TRANSMISSION ADAPTATION (647121)       154         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       154
AP1904 - CYLINDER HEAD (271255MOD)       144         AP1905 - ROCKER LEVER SHAFT (271255MOD)       145         AP1906 - TIMING GEAR AND CAMSHAFT (271255MOD)       146         AP1907 - OIL SUMP - LUBRICATING OIL PUMP (271255MOD)       147         AP1908 - ROCKER LEVER COVER AND BREATHER (271255MOD)       147         AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)       148         AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)       149         AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)       149         AP1914 - FLY WHEEL (271255MOD)       149         AP1915 - TURBOCHARGER (DETAILS) (271255MOD)       150         AP1916 - TURBOCHARGER (DETAILS) (271255MOD)       152         11CB1330 - PLECTRICITY (Details) (647121)       5ee page 29         11CB1331 - ELECTRICITY (Details) (647121)       5ee page 30         4AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)       5ee page 14         4AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)       153         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       154         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       155
AP1905 - ROCKER LEVER SHAFT (271255MOD)       145         AP1906 - TIMING GEAR AND CAMSHAFT (271255MOD)       146         AP1907 - OIL SUMP - LUBRICATING OIL PUMP (271255MOD)       147         AP1908 - ROCKER LEVER COVER AND BREATHER (271255MOD)       147         AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)       148         AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)       148         AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)       See page 8         AP1910 - TURBOCHARGER (DETAILS) (271255MOD)       150         AP1916 - TURBOCHARGER (DETAILS) (271255MOD)       150         AP1916 - TURBOCHARGER (DETAILS) (271255MOD)       151         AP3103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)       152         11CB1330 - ELECTRICITY (Details) (647121)       See page 29         11CB1331 - ELECTRICITY (Details) (647121)       See page 30         4AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)       153         4AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)       153         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       154
AP1906 - TIMING GEAR AND CAMSHAFT (271255MOD)146AP1907 - OIL SUMP - LUBRICATING OIL PUMP (271255MOD)147AP1908 - ROCKER LEVER COVER AND BREATHER (271255MOD)148AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)148AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)149AP1914 - FLY WHEEL (271255MOD)150AP1916 - TURBOCHARGER (DETAILS) (271255MOD)150AP1916 - TURBOCHARGER (DETAILS) (271255MOD)151AP3103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)15211CB1330 - ELECTRICITY (Details) (647121)5ee page 3914A1227 - ENGINE - TRANSMISSION ADAPTATION (647121)5ee page 144AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)1534AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)1544AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)155
AP1907 - OIL SUMP - LUBRICATING OIL PUMP (271255MOD)147AP1908 - ROCKER LEVER COVER AND BREATHER (271255MOD)148AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)See page 8AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)149AP1914 - FLY WHEEL (271255MOD)150AP1916 - TURBOCHARGER (DETAILS) (271255MOD)150AP1916 - TURBOCHARGER (DETAILS) (271255MOD)151AP3103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)15211CB1330 - ELECTRICITY (Details) (647121)See page 2911CB1331 - ELECTRICITY (Details) (647121)See page 304AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)534AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)1544AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)155
AP1908 - ROCKER LEVER COVER AND BREATHER (271255MOD)148AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)See page 8AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)149AP1914 - FLY WHEEL (271255MOD)150AP1916 - TURBOCHARGER (DETAILS) (271255MOD)151AP3103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)15211CB1330 - ELECTRICITY (Details) (647121)See page 2911CB1331 - ELECTRICITY (Details) (647121)See page 304AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)584AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)1534AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)155
AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)See page 8AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)149AP1914 - FLY WHEEL (271255MOD)150AP1916 - TURBOCHARGER (DETAILS) (271255MOD)151AP3103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)15211CB1330 - ELECTRICITY (Details) (647121)See page 2911CB1331 - ELECTRICITY (Details) (647121)See page 304AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)See page 144AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)1534AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)1544AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)155
AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)149AP1914 - FLY WHEEL (271255MOD)150AP1916 - TURBOCHARGER (DETAILS) (271255MOD)151AP3103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)15211CB1330 - ELECTRICITY (Details) (647121)See page 2911CB1331 - ELECTRICITY (Details) (647121)See page 304AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)584AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)1534AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)1544AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)155
AP1914 - FLY WHEEL (271255MOD)150AP1916 - TURBOCHARGER (DETAILS) (271255MOD)151AP3103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)15211CB1330 - ELECTRICITY (Details) (647121)See page 2911CB1331 - ELECTRICITY (Details) (647121)See page 304AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)See page 144AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)1534AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)155
AP1916 - TURBOCHARGER (DETAILS) (271255MOD)       151         AP3103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)       152         11CB1330 - ELECTRICITY (Details) (647121)       See page 29         11CB1331 - ELECTRICITY (Details) (647121)       See page 30         4AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)       See page 14         4AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)       153         4AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)       154         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       155
AP3103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)       152         11CB1330 - ELECTRICITY (Details) (647121)       See page 29         11CB1331 - ELECTRICITY (Details) (647121)       See page 30         4AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)       See page 14         4AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)       153         4AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)       154         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       155
AP3103 - PISTONS, CONNECTING RODS AND CRANKSHAFT (271255MOD)       152         11CB1330 - ELECTRICITY (Details) (647121)       See page 29         11CB1331 - ELECTRICITY (Details) (647121)       See page 30         4AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)       See page 14         4AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)       153         4AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)       154         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       155
11CB1331 - ELECTRICITY (Details) (647121)See page 304AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)See page 144AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)1534AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)1544AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)155
4AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)See page 144AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)1534AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)1544AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)155
4AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)       153         4AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)       154         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       155
4AA1228 - ENGINE - TRANSMISSION ADAPTATION (647121)       153         4AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)       154         4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)       155
4AA1415 - ENGINE - TRANSMISSION ADAPTATION (647121)
4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)
4AA1418 - ENGINE - TRANSMISSION ADAPTATION (647121)
AP2249 - ENGINE ADAPTATION (647121)
AP2250 - ENGINE ADAPTATION (647121)
_COMPLETE
AP2249 - ENGINE ADAPTATION (647121)
AP2250 - ENGINE ADAPTATION (647121)
_TIMING GEAR - LUBRICATION
AP1905 - ROCKER LEVER SHAFT (271255MOD)
AP1906 - TIMING GEAR AND CAMSHAFT (271255MOD)
AP1907 - OIL SUMP - LUBRICATING OIL PUMP (271255MOD)
4AA1418 - ENGINE - TRANSMISSION ADAPTATION (647121)
ELECTRICITY
AP1913 - ALTERNATOR (271255MOD)
AP1915 - STATER MOTOR (271255MOD)
11AA1658 - ELECTRIC CIRCUIT (647121)

11AA1658 - ELECTRIC CIRCUIT (647121)	See page 70
11AA1659 - ELECTRIC CIRCUIT (647121)	
11CB1330 - ELECTRICITY (Details) (647121)	. See page 29

11CD230 - ELECTRICITY (Engine - Transmission) (647121)         11CD231 - ELECTRICITY (Engine - Transmission) (647121)	
$11CD251 - EECTRICITT (Engine - Italistilission) (04/121) \dots \dots$	
_INTAKE SYSTEM - EXHAUST	
	See page
AP1912 - EXHAUST MANIFOLD (271255MOD)	
4AA1224 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA1225 - ENGINE - TRANSMISSION ADAPTATION (647121)	
FUEL SUPPLY SYSTEM	
AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)	See nac
AP1917 - FUEL CIRCUIT (271255MOD)	
11AA1658 - ELECTRIC CIRCUIT (647121)	1
11AA1659 - ELECTRIC CIRCUIT (647121)	
4AA1229 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AC357 - FUEL CIRCUIT (647121)	
4AC358 - FUEL CIRCUIT (647121)	
4AC384 - FUEL CIRCUIT (647121)	1.0
4AC385 - FUEL CIRCUIT (647121)	
ELECTRICAL SYSTEM	
AP1913 - ALTERNATOR (271255MOD)	See nage
AP1915 - STATER MOTOR (271255MOD)	
11AA1658 - ELECTRIC CIRCUIT (647121)	
11AA1659 - ELECTRIC CIRCUIT (647121)	
11CB1330 - ELECTRICITY (Details) (647121)	
11CB1331 - ELECTRICITY (Details) (647121)	
11CD230 - ELECTRICITY (Engine - Transmission) (647121)	
11CD231 - ELECTRICITY (Engine - Transmission) (647121)	
AP1909 - LUBRICATING OIL FILTER AND INTEGRAL OIL COOLER (271255MOD)	See nac
AP1910 - CYLINDER HEAD COVER AND WATER OUTLET CONNECTIONS (271255MOD)	
AP1911 - WATER PUMP (271255MOD)	
4AA1226 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA1227 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4A1229 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA1230 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA1230 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA1413 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA1413 - ENGINE - TRANSMISSION ADAPTATION (647121)	

4AA1416 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA1417 - ENGINE - TRANSMISSION ADAPTATION (647121)	See page 155
4AA1418 - ENGINE - TRANSMISSION ADAPTATION (647121)	See page 156
4AA705 - ENGINE - TRANSMISSION ADAPTATION (647121)	
4AA897 - ENGINE - TRANSMISSION ADAPTATION (647121)	See page 34
4AC358 - FUEL CIRCUIT (647121)	See page 17
AP2250 - ENGINE ADAPTATION (647121)	
	191
EDALS	4

## PEDALS

	Y
6BA344 - TRAILER BRAKE CIRCUIT (647121)	
6BA345 - BRAKE CIRCUIT (647121)	See page 80
6BA383 - BRAKE CIRCUIT (647121)	
6BB316 - PEDALS - LINKAGE (647121)	
6BB317 - PEDALS - LINKAGE (647121)	
_HAND BRAKE	
6BA122 - HANDBRAKE (647121)	
6BB283 - PEDALS - LINKAGE (647121)	
6BB284 - PEDALS - LINKAGE (647121)	
6BB316 - PEDALS - LINKAGE (647121)	
6BB317 - PEDALS - LINKAGE (647121)	
_ACCELEARATOR PEDAL	
_ACCELLARATOR FEDAL 6BB283 - PEDALS - LINKAGE (647121)	See nage 87
6BB284 - PEDALS - LINKAGE (647121)	
BRAKE PEDAL	
	See page 80
6BB316 - PEDALS - LINKAGE (647121)	
6BB317 - PEDALS - LINKAGE (647121)	
0BB317 - PEDALS - LINKAGE (04/121)	See page 165
	0 103
6BA344 - TRAILER BRAKE CIRCUIT (647121)	
DRIVER CAB	

## DI


CAB_(289909MOD)		
8AB1182 - CAB (DETAILS) (289909MOD)	)1	167
	)	168
8AB1184 - CAB (Details) (289909MOD)		169


8AB1185 - CAB (DETAILS) (289909MOD)	
8AB1186 - CAB (DETAILS) (289909MOD)	See page 81
8AD212 - HEATING CIRCUIT (289909MOD)	See page 61
CAB_(307767MOD)	
8AB1412 - CAB (DETAILS) (307767MOD)	
8AB1413 - CAB (DETAILS) (307767MOD)	
8AB1414 - CAB (Details) (307767MOD)	
8AB1415 - CAB (DETAILS) (307767MOD)	
8AB1416 - CAB (DETAILS) (307767MOD)	See page 82
8AD212 - HEATING CIRCUIT (307767MOD)	
8AD429 - HEATING CIRCUIT (307767MOD)	See page 85
Les and the second s	
CAB_(307768MOD)	
8AB1619 - CAB (Details) (307768MOD)	See page 1
8AB1620 - CAB (Details) (307768MOD)	
8AB1621 - CAB (Details) (307768MOD)	
8AB1622 - CAB (Details) (307768MOD)	
8AB1623 - CAB (Details) (307768MOD)	
8AD439 - COMPARTMENT (Air-conditioning) (307768MOD)	
	·····
САВ	
_CAB 8AA1074 - SEAT (647121)	
8AA1074 - SEAT (647121)	
BAA1074 - SEAT (647121) 8AA1215 - CAB ADAPTATION (647121) 8AA1216 - CAB ADAPTATION (647121)	
8AA1074 - SEAT (647121)	
BAA1074 - SEAT (647121)         BAA1215 - CAB ADAPTATION (647121)         BAA1216 - CAB ADAPTATION (647121)         BAA981 - CAB ADAPTATION (647121)         HEATER - ALR CONDUCTIONING	
BAA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)	
BAA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)	
BAA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)	
BAA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)	
BAA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)	
8AA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)	
8AA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)	183 
8AA1074 - SEAT (647121)         8AA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)         -HEATER - AI R CONDITIONING         8AD364 - HEATING CIRCUIT (647121)         8AD365 - HEATING CIRCUIT (647121)         8AD460 - HEATING CIRCUIT (647121)         8AD461 - HEATING CIRCUIT (647121)         8AD461 - HEATING CIRCUIT (647121)         8AD461 - HEATING CIRCUIT (647121)	183 184 184 184 185 185 186 187 187 188 
8AA1074 - SEAT (647121)         8AA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)         8AD364 - HEATING CIRCUIT (647121)         8AD365 - HEATING CIRCUIT (647121)         8AD460 - HEATING CIRCUIT (647121)         8AD461 - HEATING CIRCUIT (647121)         8AD461 - HEATING CIRCUIT (647121)         11AA1653 - ELECTRIC CIRCUIT (647121)         11AA1654 - ELECTRIC CIRCUIT (647121)	183 184 184 184 185 185 186 187 187 188 188 
8AA1074 - SEAT (647121)         8AA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)	183 184 184 184 185 185 185 186 187 188 187 188 
8AA1074 - SEAT (647121)         8AA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)	183 184 184 184 185 185 185 186 187 188 188 See page 65 See page 66 See page 68 See page 60
8AA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)         9AD364 - HEATING CIRCUIT (647121)         8AD365 - HEATING CIRCUIT (647121)         8AD460 - HEATING CIRCUIT (647121)         8AD461 - HEATING CIRCUIT (647121)         8AD461 - HEATING CIRCUIT (647121)         9AD461 - HEATING CIRCUIT (647121)      <	183         184         184         See page 47         185         185         186         187         188         See page 65         See page 66         See page 68         See page 60         See page 56
8AA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)	183         184         184         See page 47         185         185         186         187         188         See page 65         See page 66         See page 68         See page 60         See page 56         See page 57
8AA1074 - SEAT (647121)         8AA1215 - CAB ADAPTATION (647121)         8AA1216 - CAB ADAPTATION (647121)         8AA981 - CAB ADAPTATION (647121)         9AD364 - HEATING CIRCUIT (647121)         8AD365 - HEATING CIRCUIT (647121)         8AD460 - HEATING CIRCUIT (647121)         8AD461 - HEATING CIRCUIT (647121)         8AD461 - HEATING CIRCUIT (647121)         9AD461 - HEATING CIRCUIT (647121)         9AD461 - HEATING CIRCUIT (647121)         11AA1653 - ELECTRIC CIRCUIT (647121)         11AA1654 - ELECTRIC CIRCUIT (647121)         11AA1655 - ELECTRIC CIRCUIT (647121)         11AA1656 - ELECTRIC CIRCUIT (647121)         11AA1656 - ELECTRIC CIRCUIT (647121)         11AA1657 - ELECTRIC CIRCUIT (647121)         11AA1656 - ELECTRIC CIRCUIT (647121)         11CC316 - ELECTRIC CIRCUIT (647121)         11CC343 - ELECTRICITY (Cab structure) (647121)	183         184         184         See page 47         185         185         186         187         188         See page 65         See page 66         See page 68         See page 60         See page 56         See page 46


**TRANSMISSION** 


_PROPSHAFT	1	
BP305 - CARDAN COUPLING GEAR BOX - FRONT AXLE (295107MOD)	·····	
BP305 - CARDAN COUPLING GEAR BOX - FRONT AXLE (295107MOD)BP294 - CARDAN COUPLING GEAR BOX - REAR AXLE (295108MOD)	<u>v</u> `	
BP342 - CARDAN COUPLING ENGINE - ANGLE RETURN (299862MOD)	·····	191
_TRANSFER BOX	4	
BP322 - GEAR BOX AND CONVERTER (647121)		
_GEAR BOX BP203 - ELECTRICAL CONTROL VALVE (258799MOD) BP234 - GEAR BOX (DETAILS) (258799MOD) BP235 - GEAR BOX (MECHANISM DETAILS - GEAR) (258799MOD) BP322 - GEAR BOX AND CONVERTER (647121)		
BP234 - GEAR BOX (DETAILS) (258799MOD)		See page 7
BP235 - GEAR BOX (MECHANISM DETAILS - GEAR) (258799MOD)		
BP322 - GEAR BOX AND CONVERTER (647121)	·····	See page 192
ANGLE RETURN BP109 - BEVEL DRIVE (222758MOD)	A S	
$D(109-DLvLCDLvL(222730POD)\ldots$	67	


B BOO 550 B

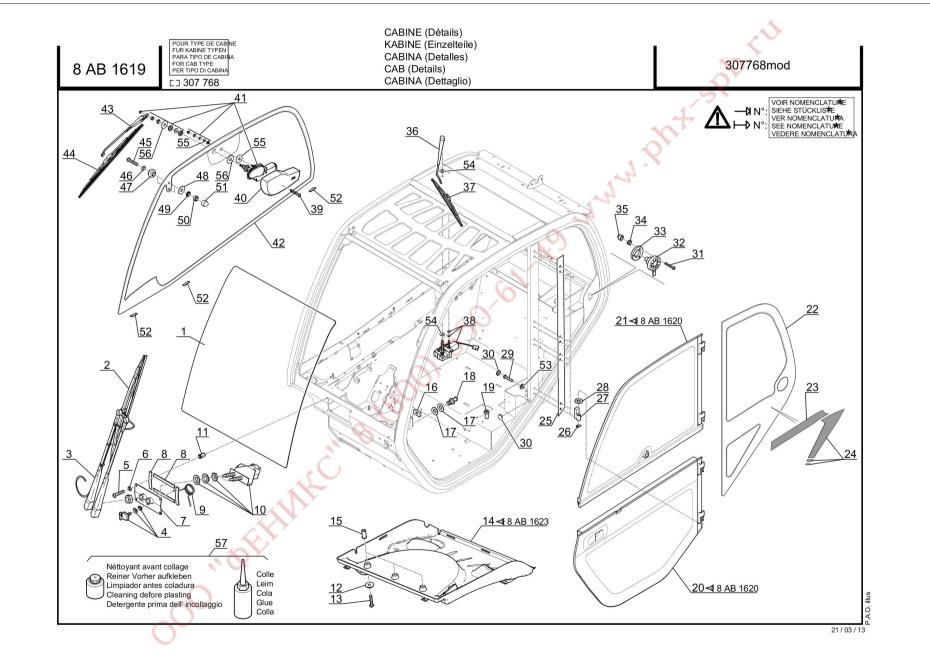


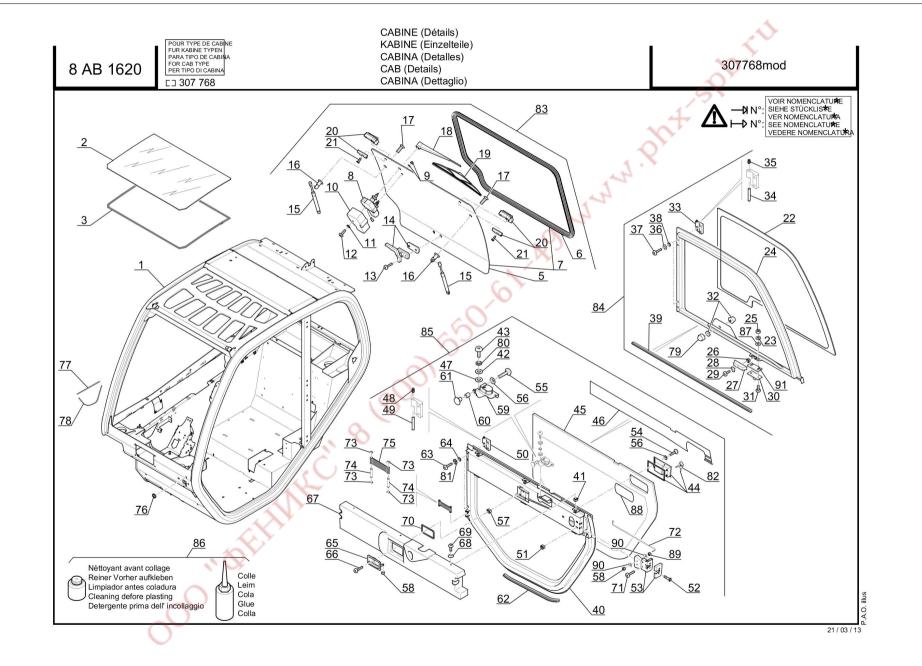


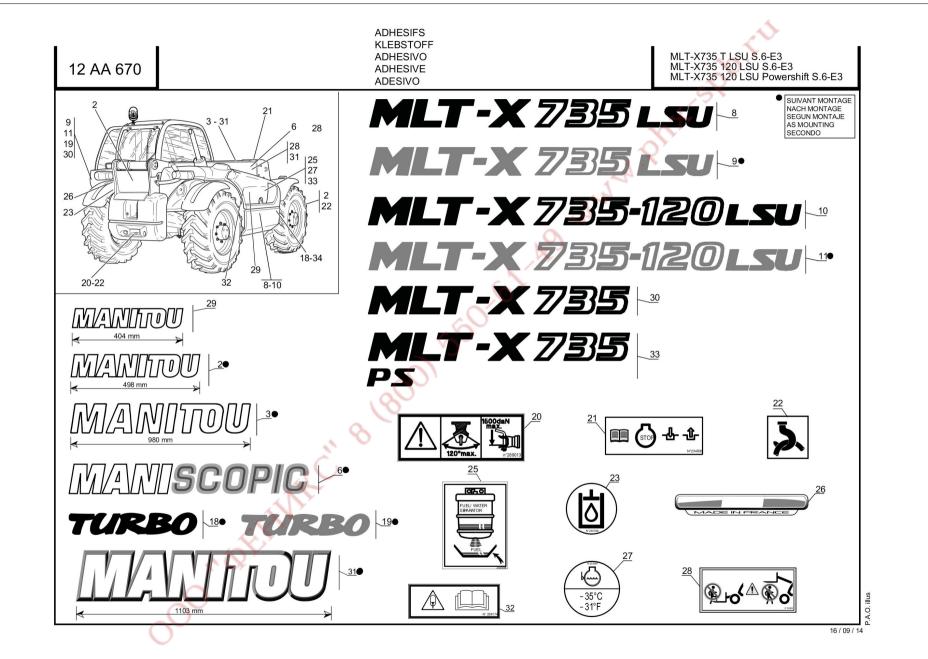


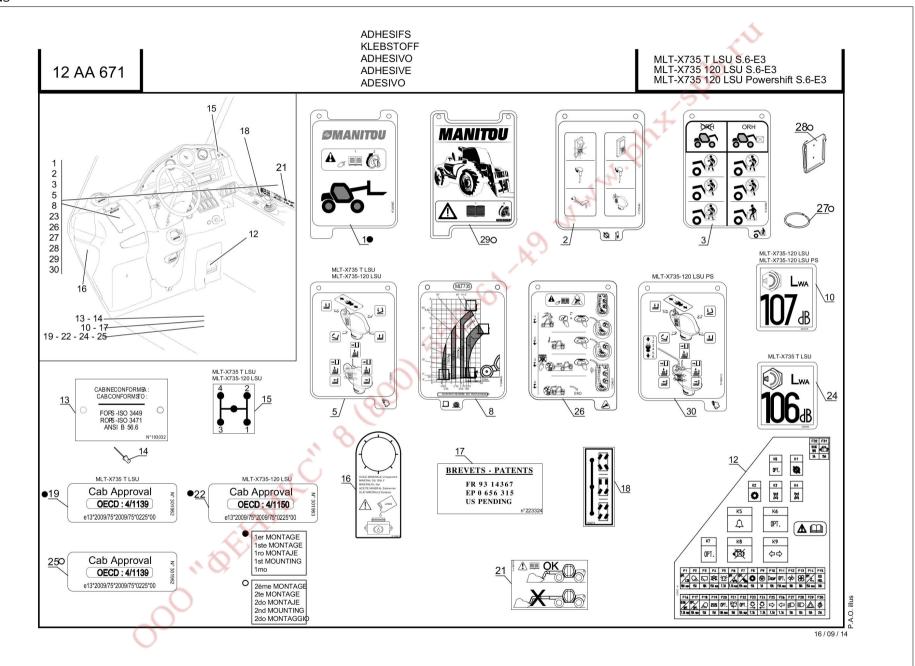


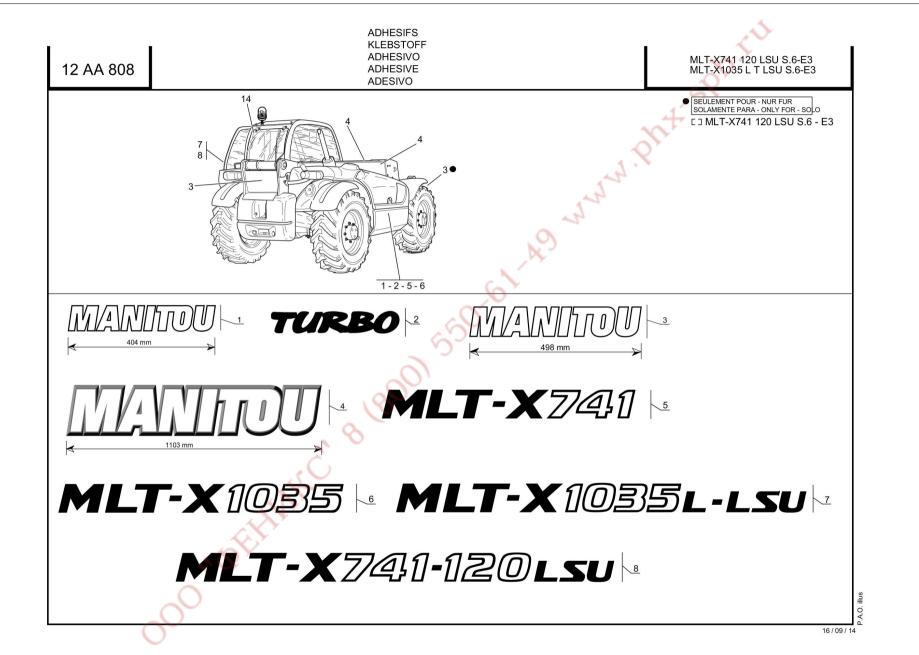


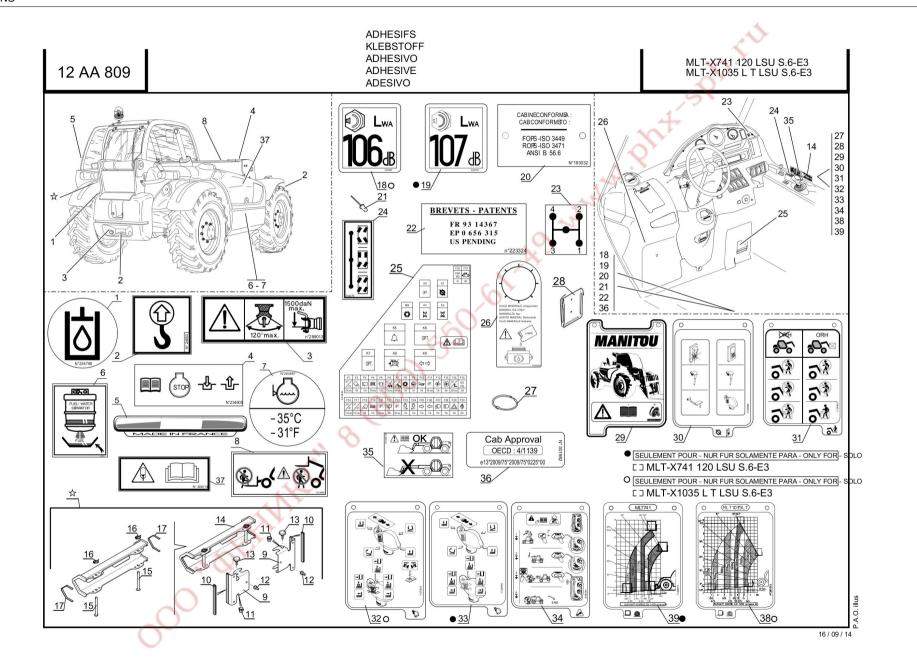


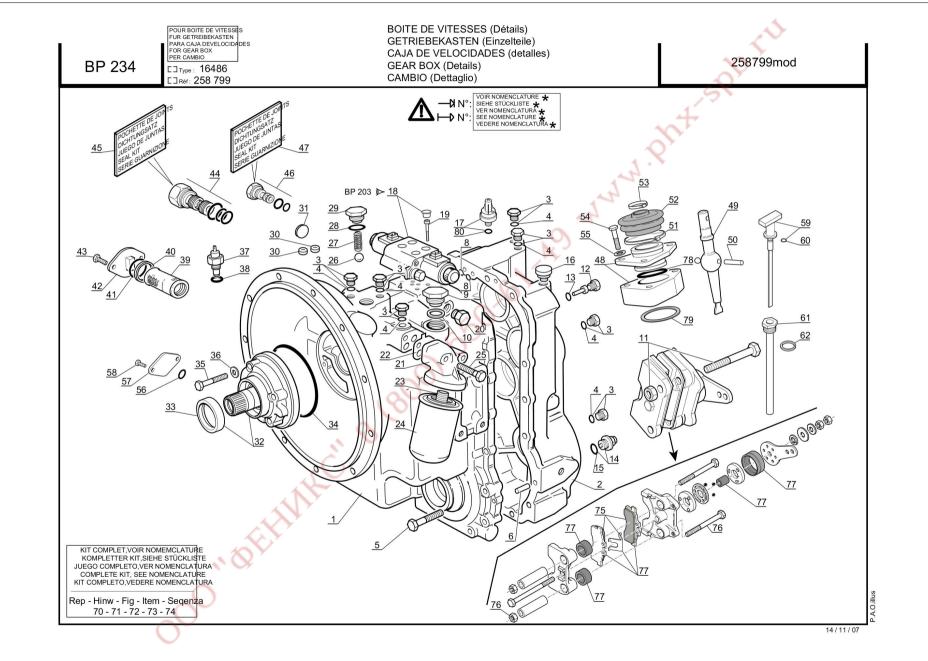


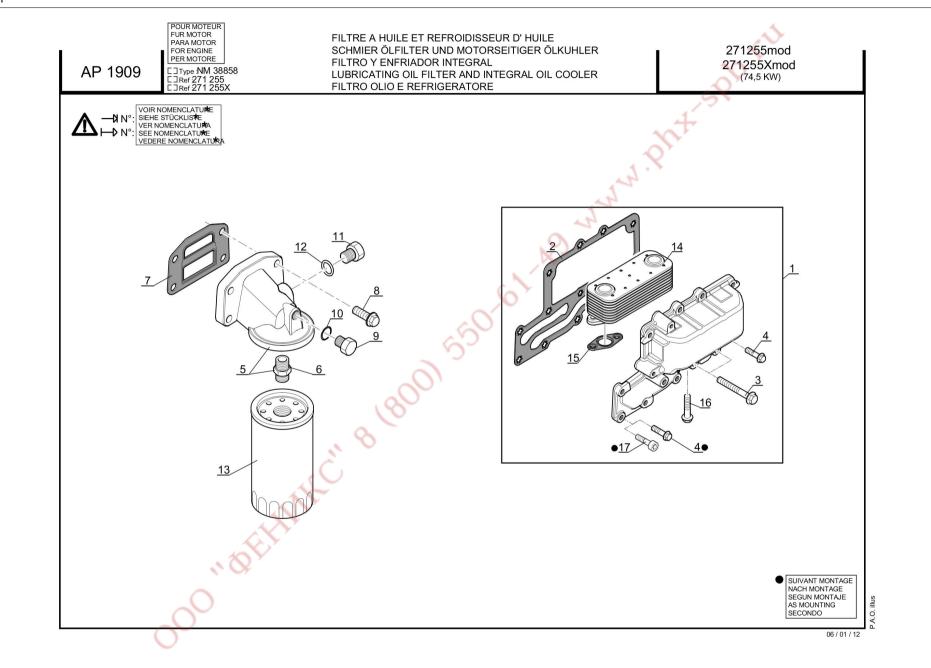


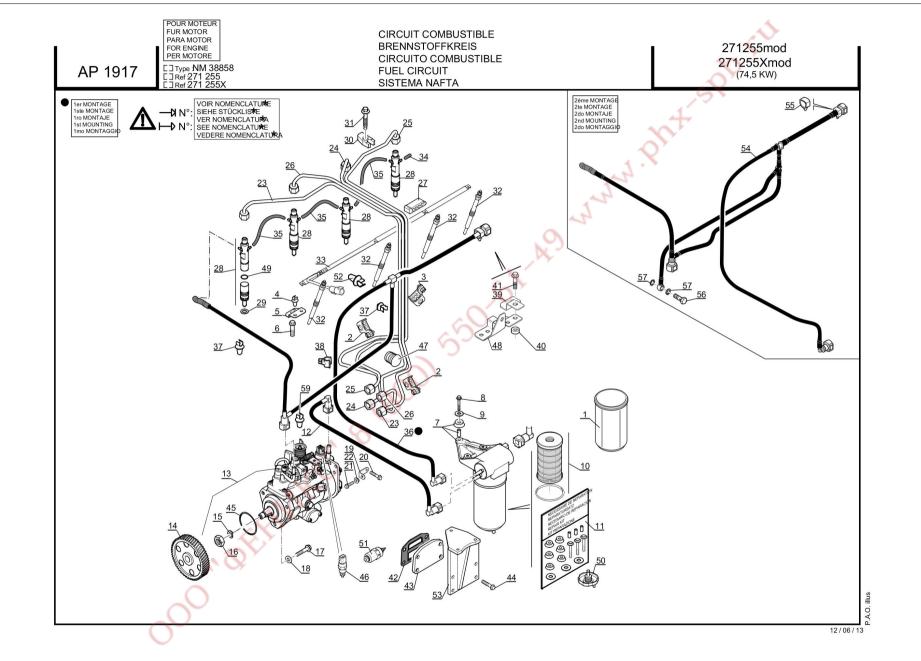


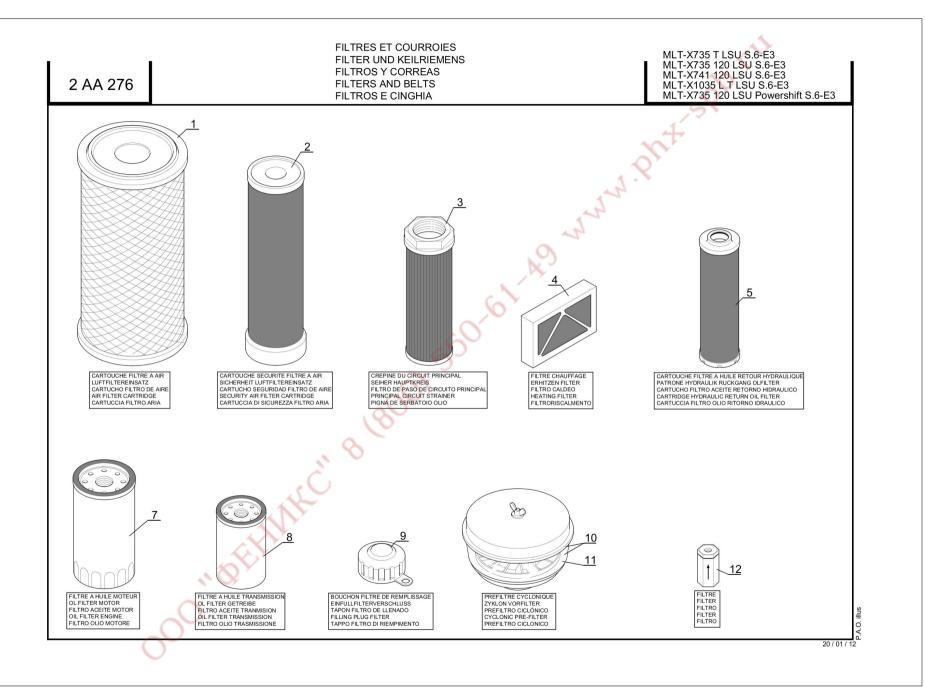

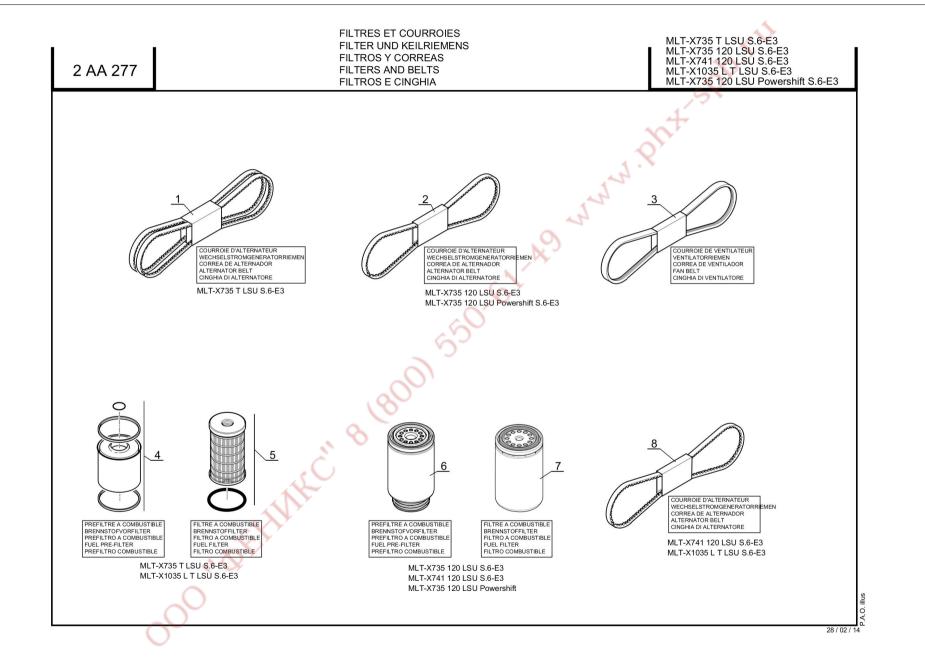


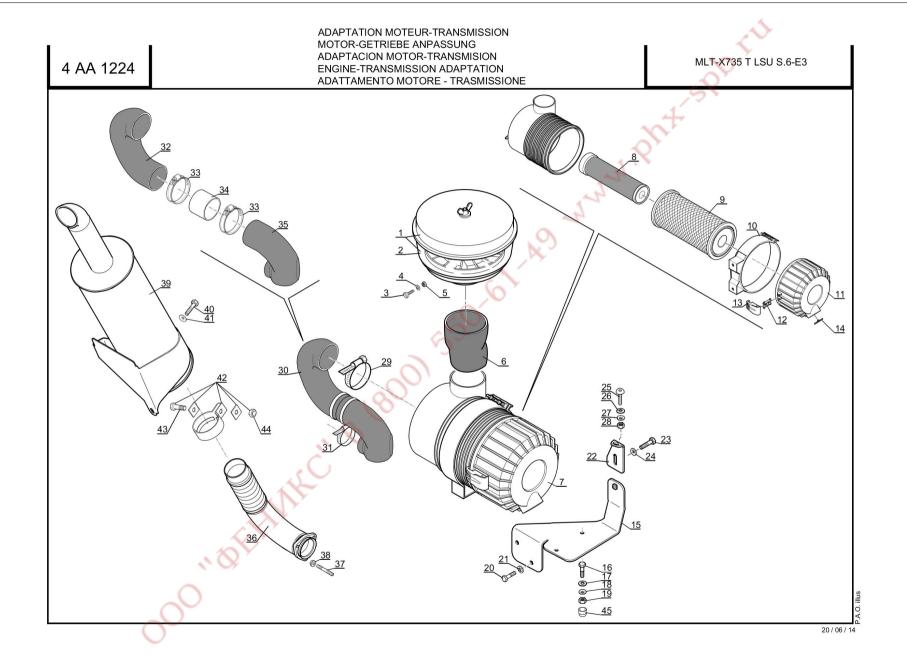

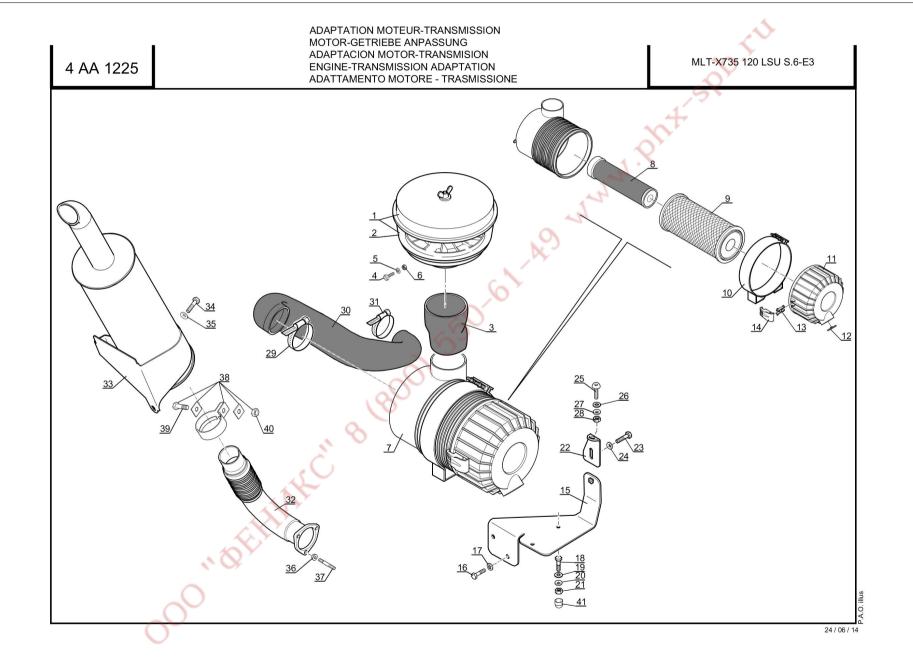


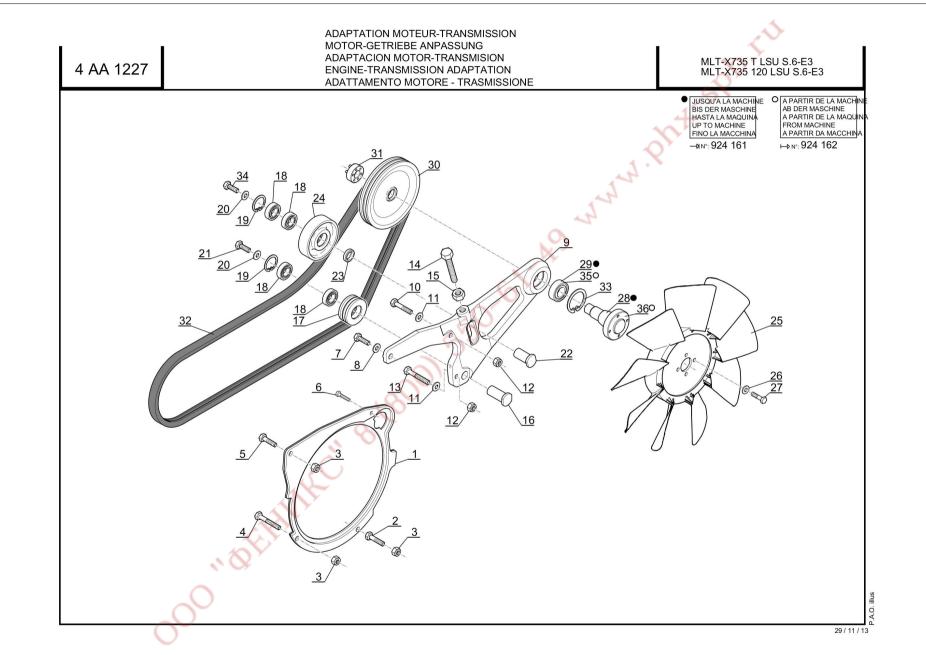


## FILTERS-BELT

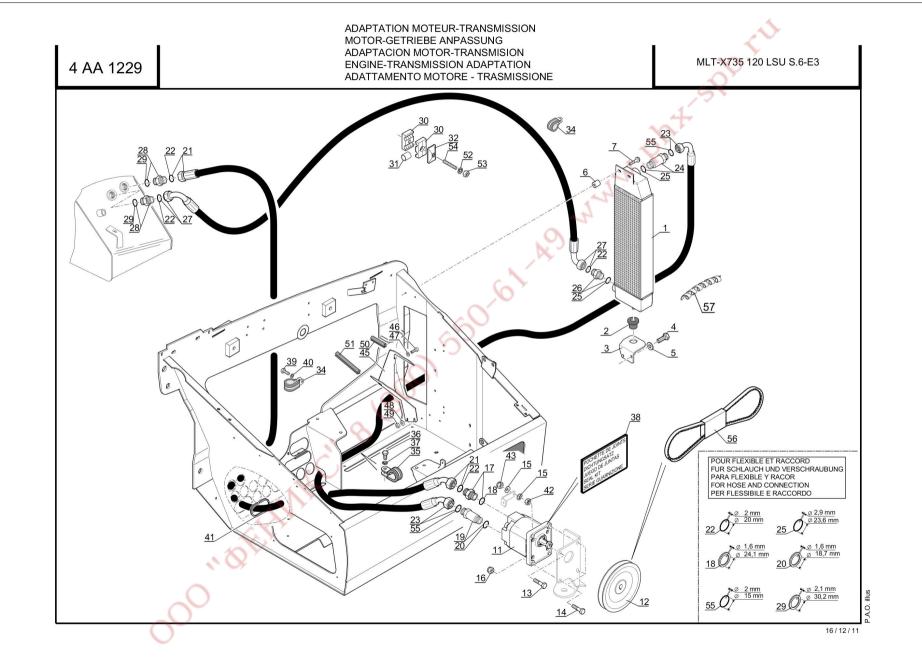





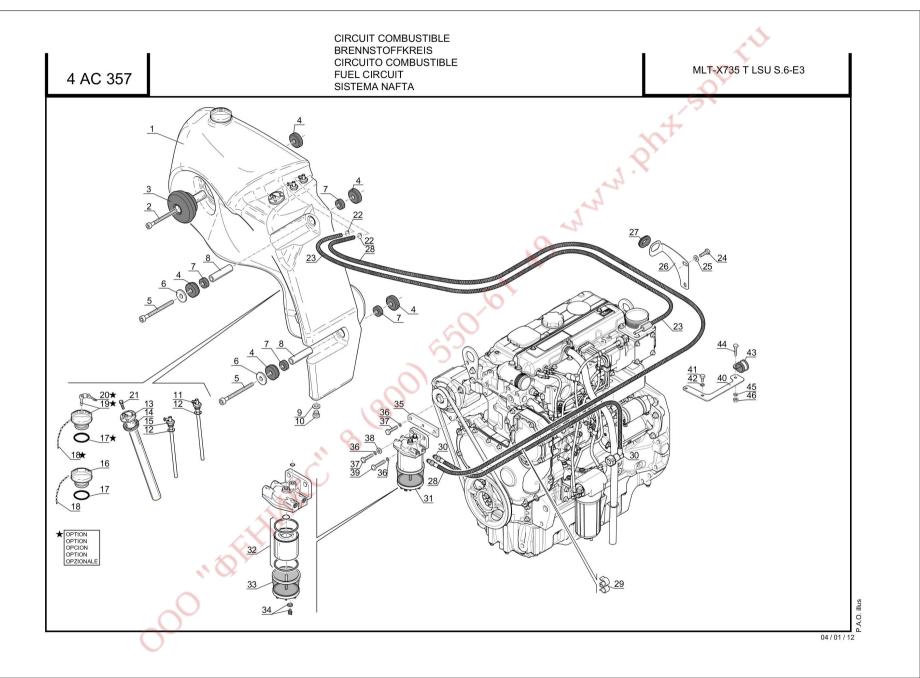


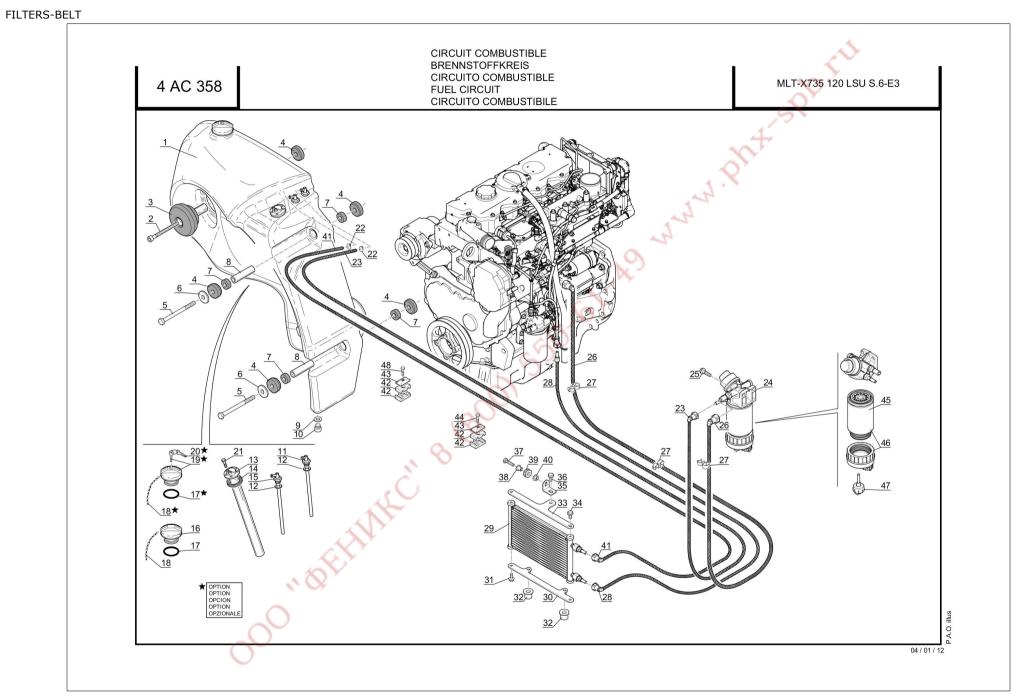




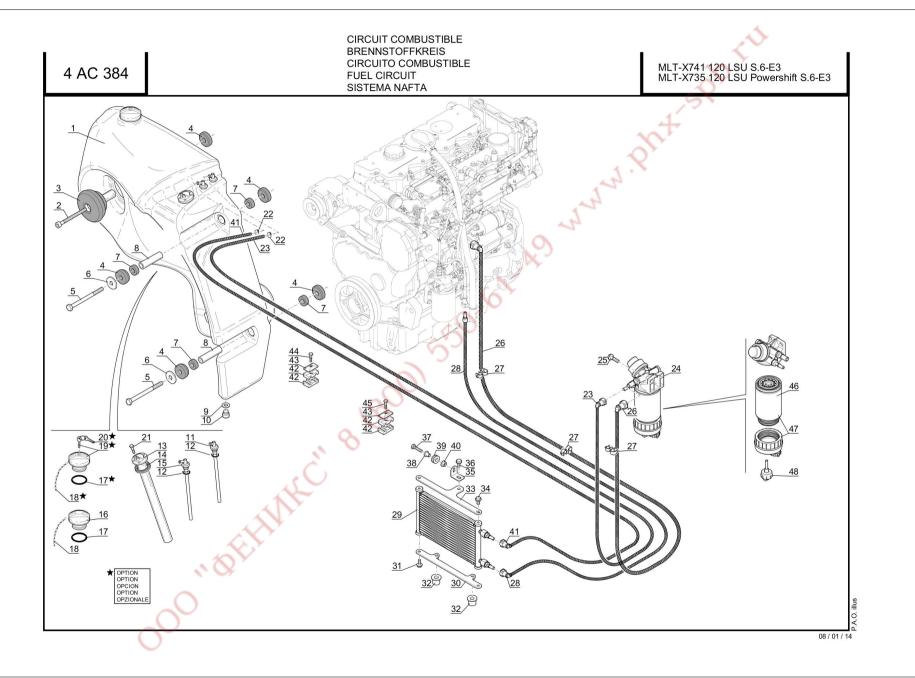


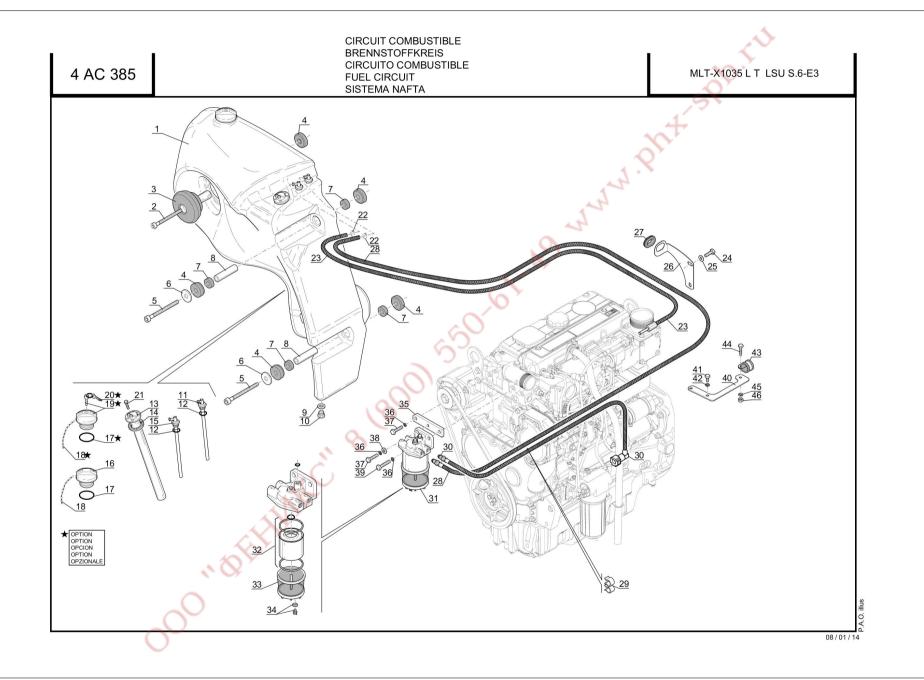


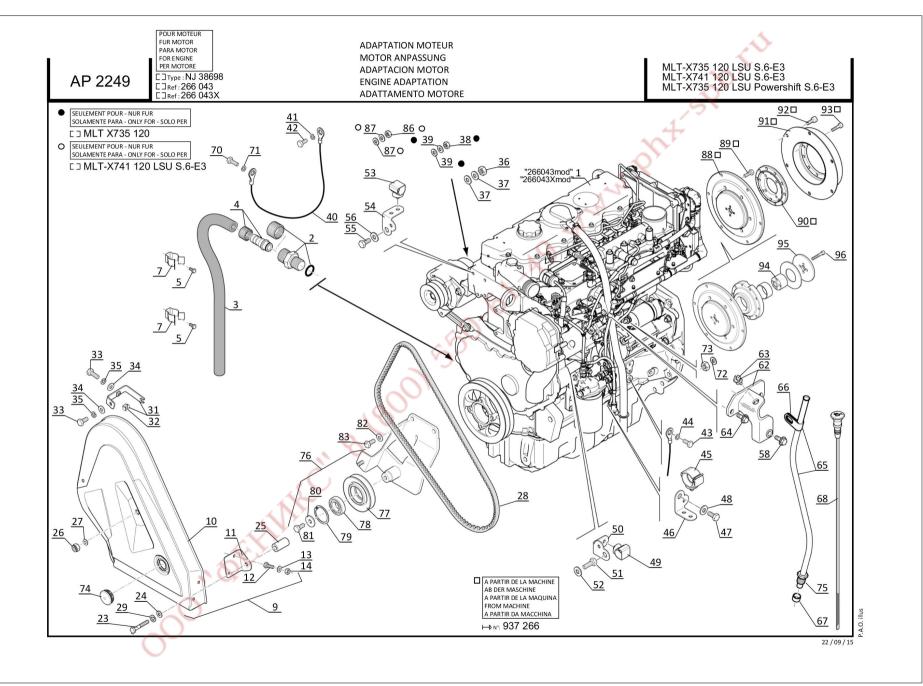


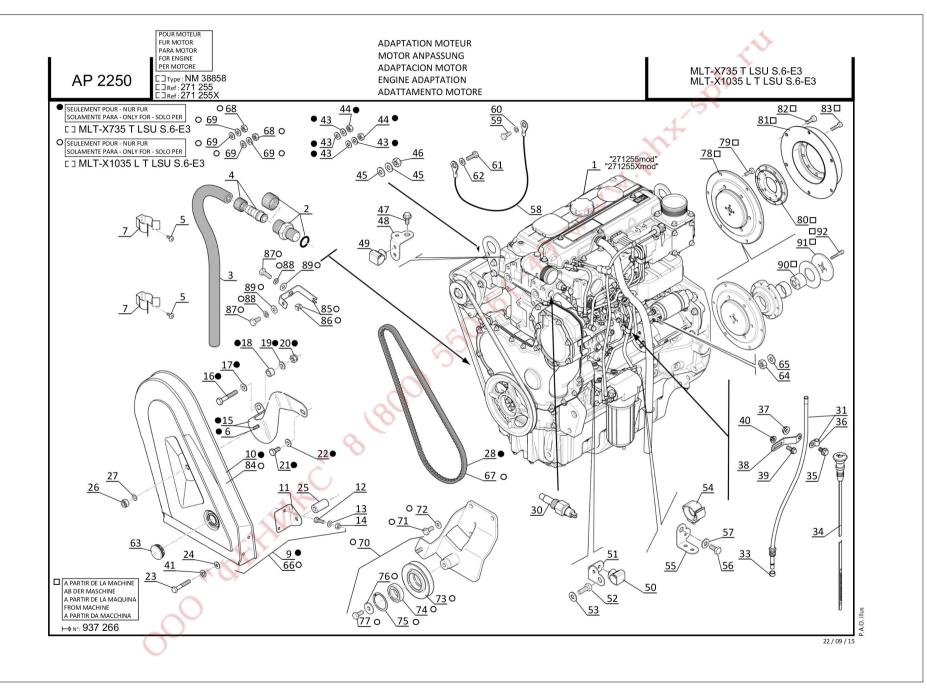





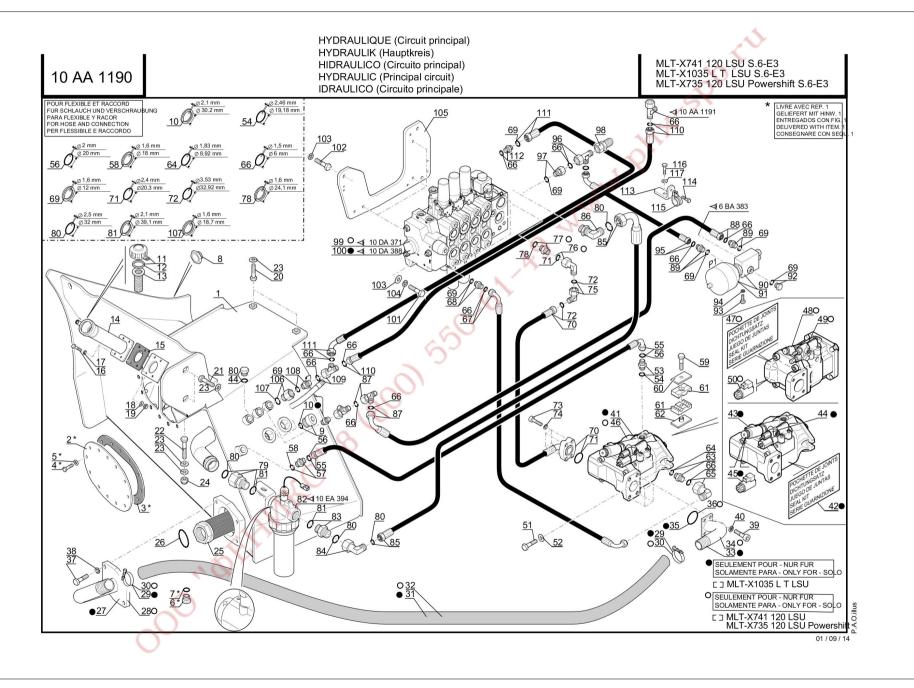


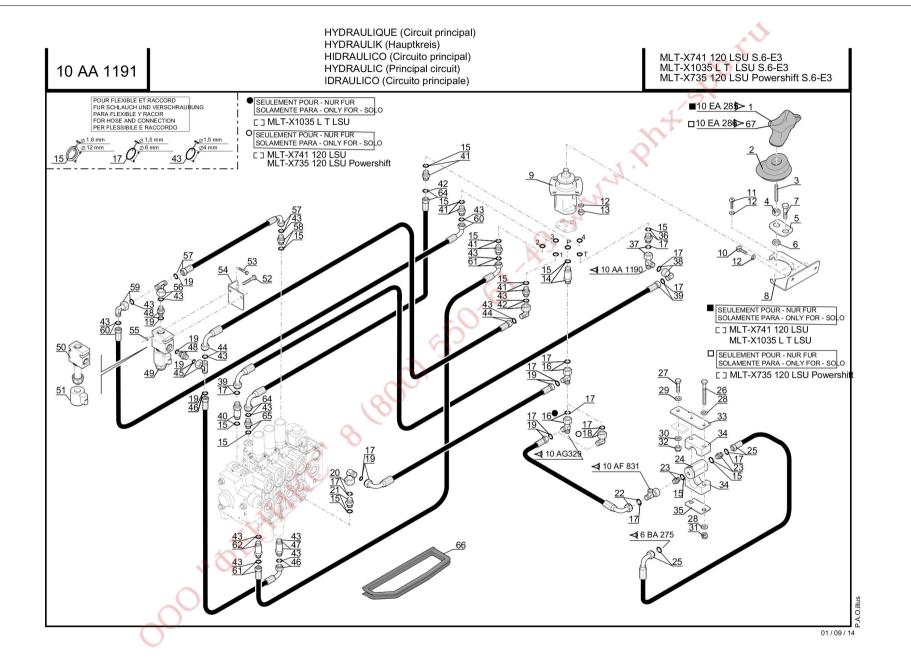


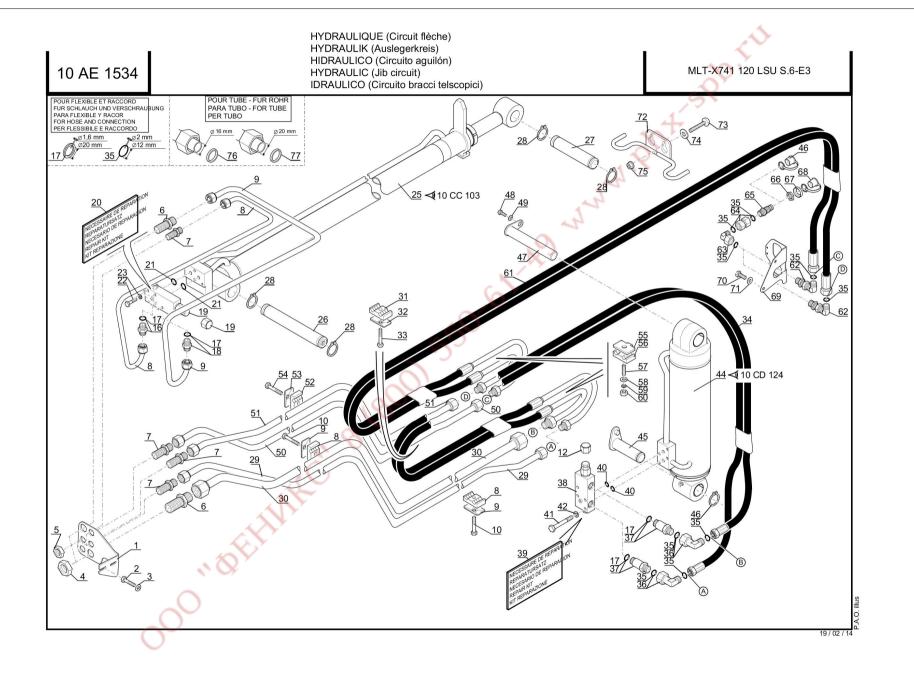


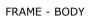


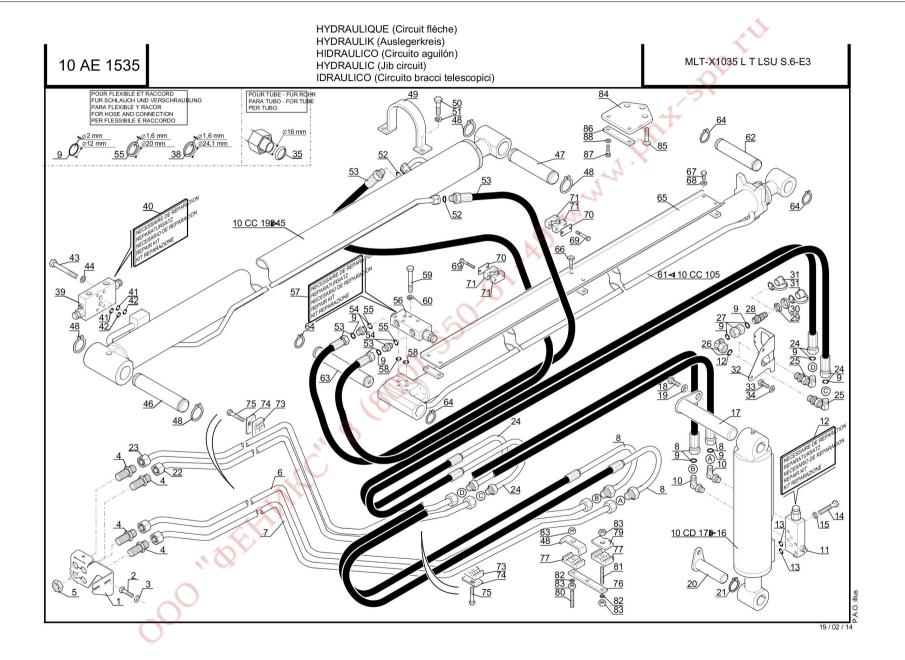


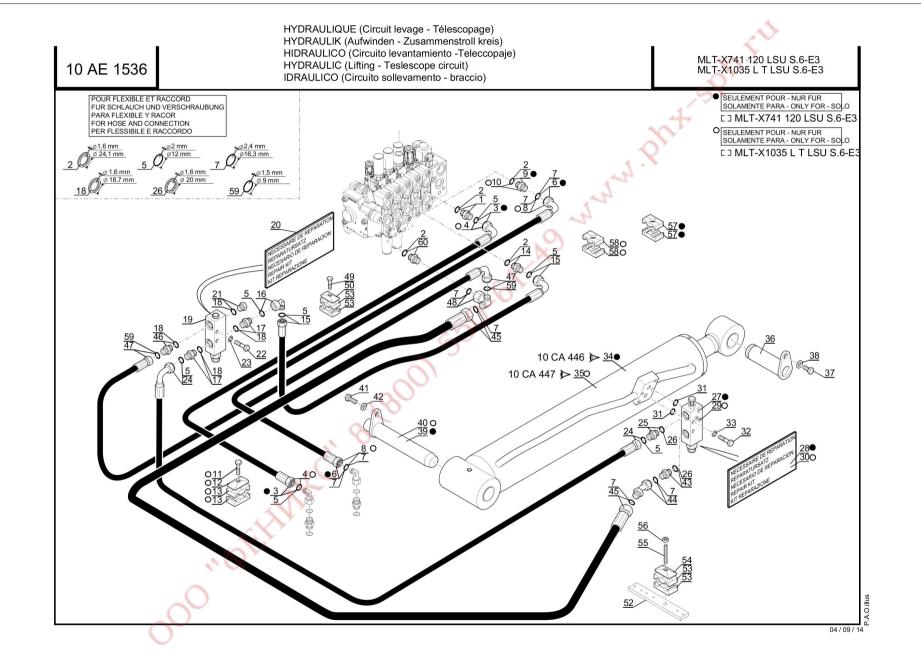


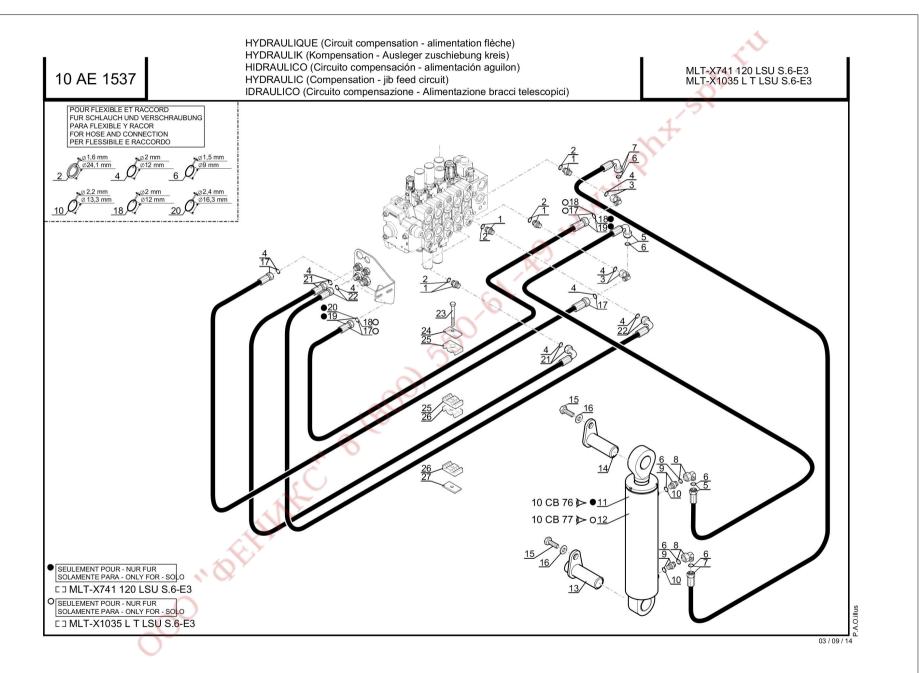


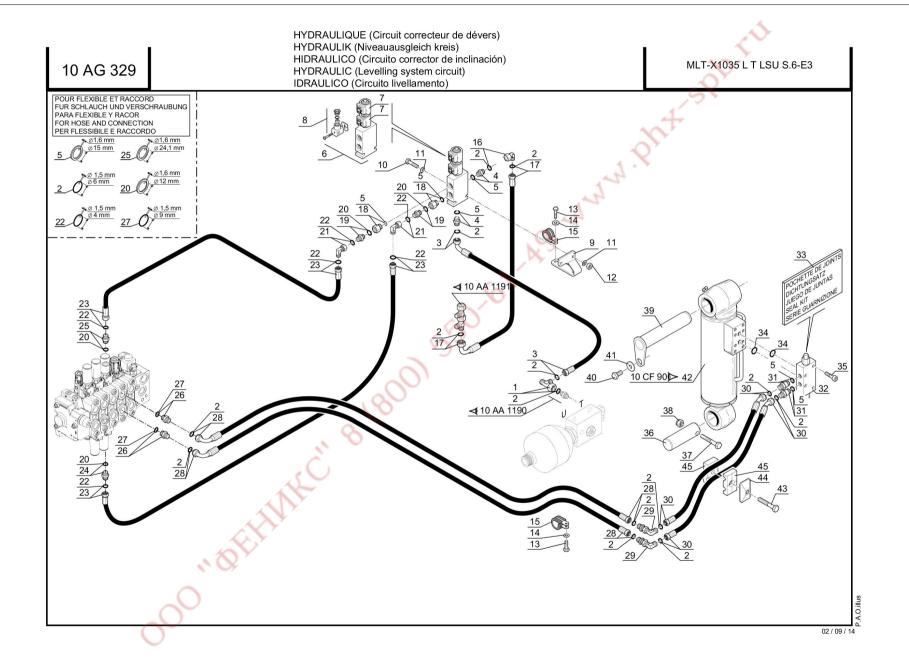


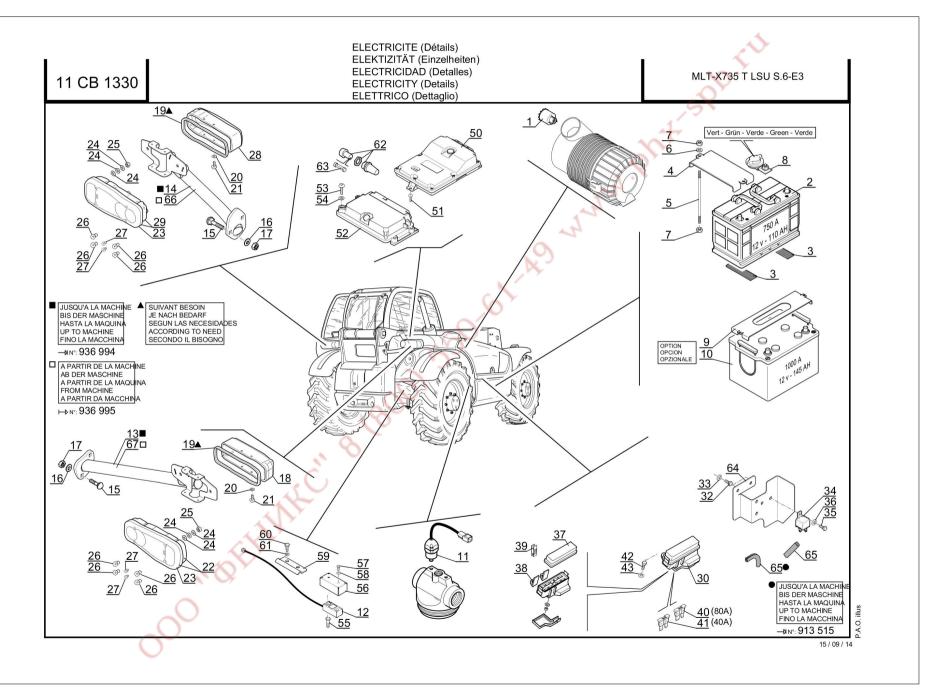


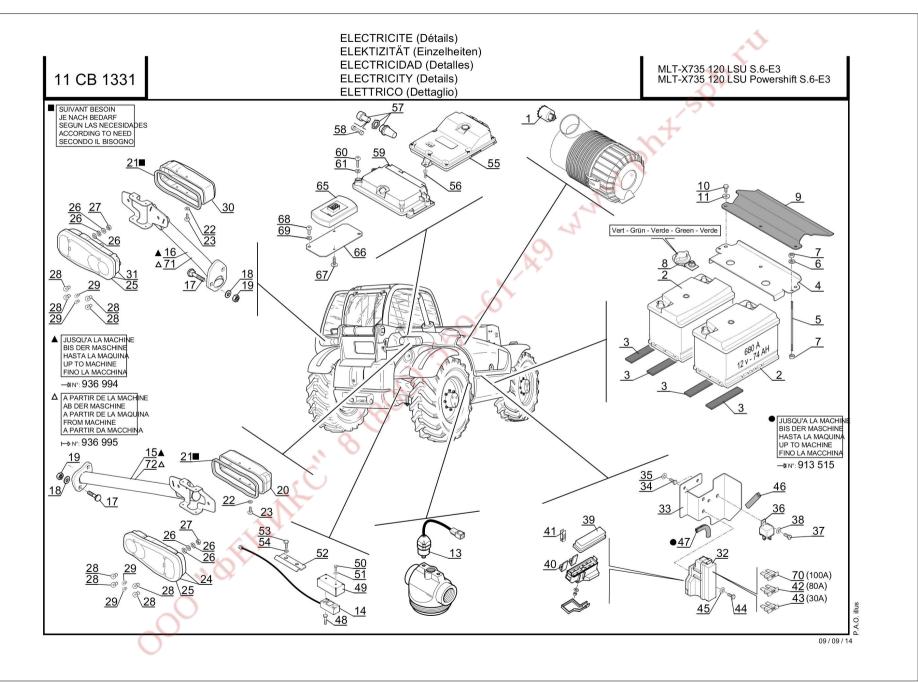


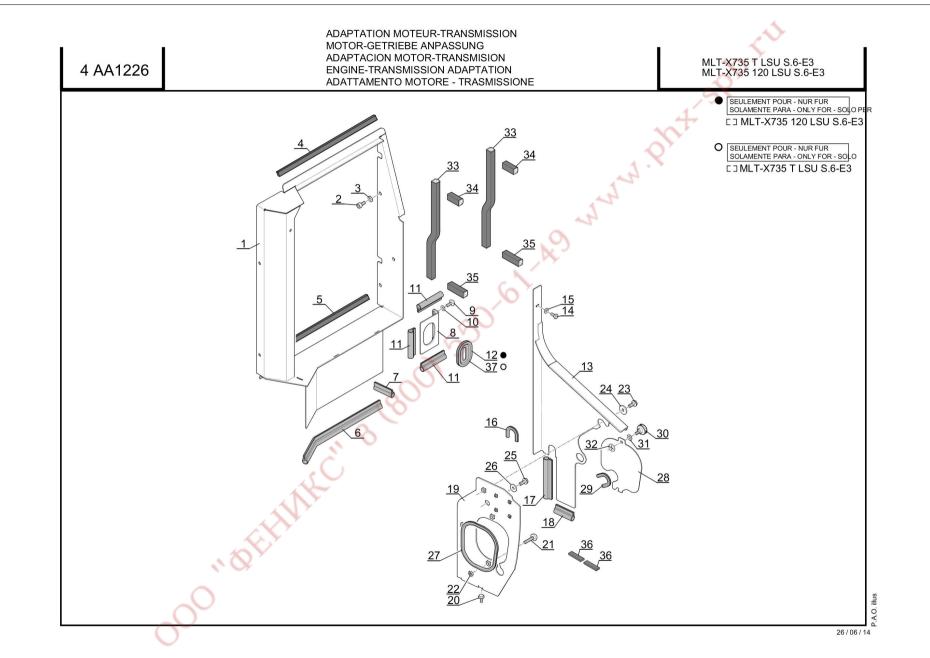


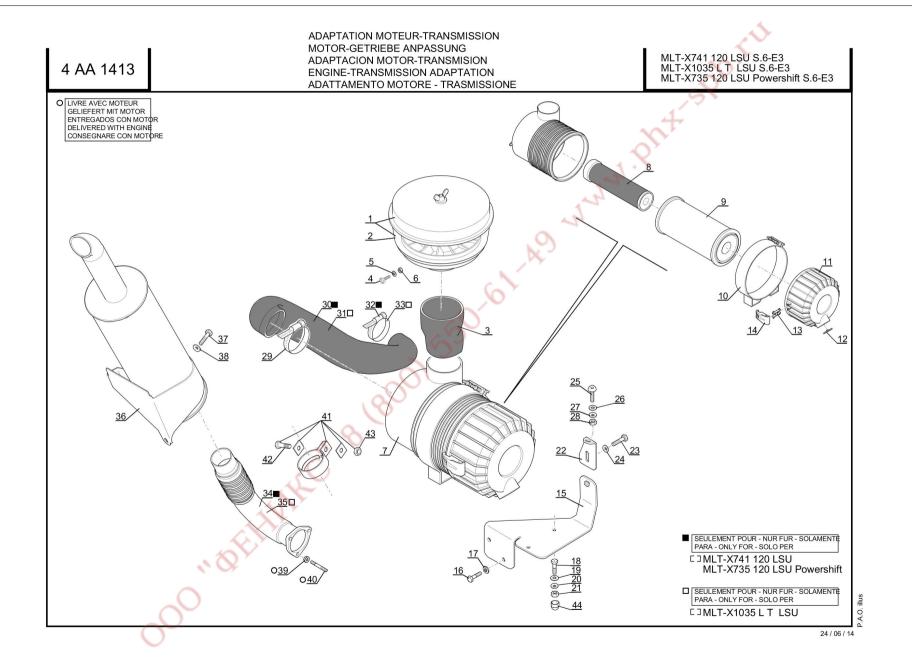


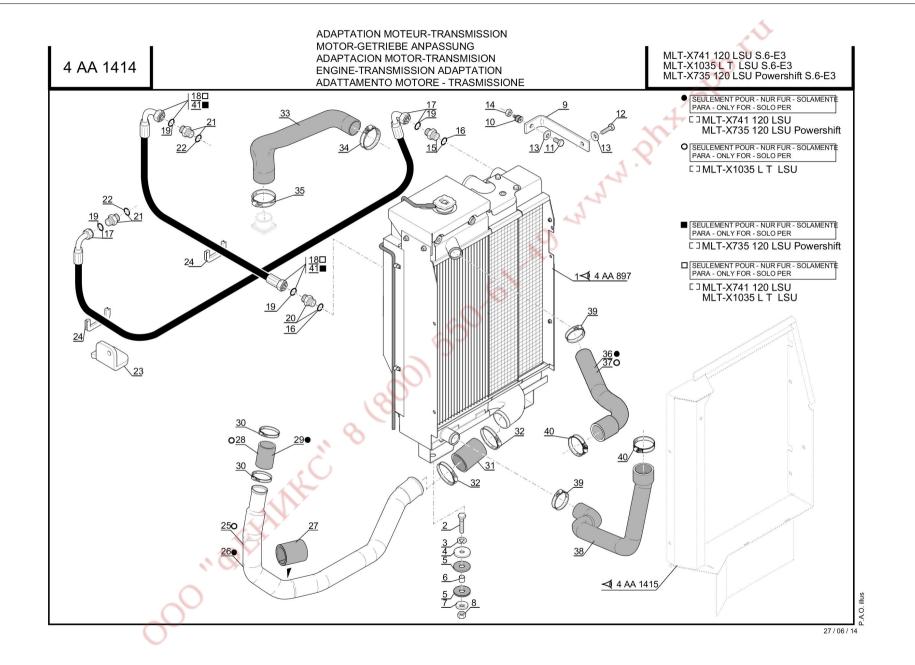


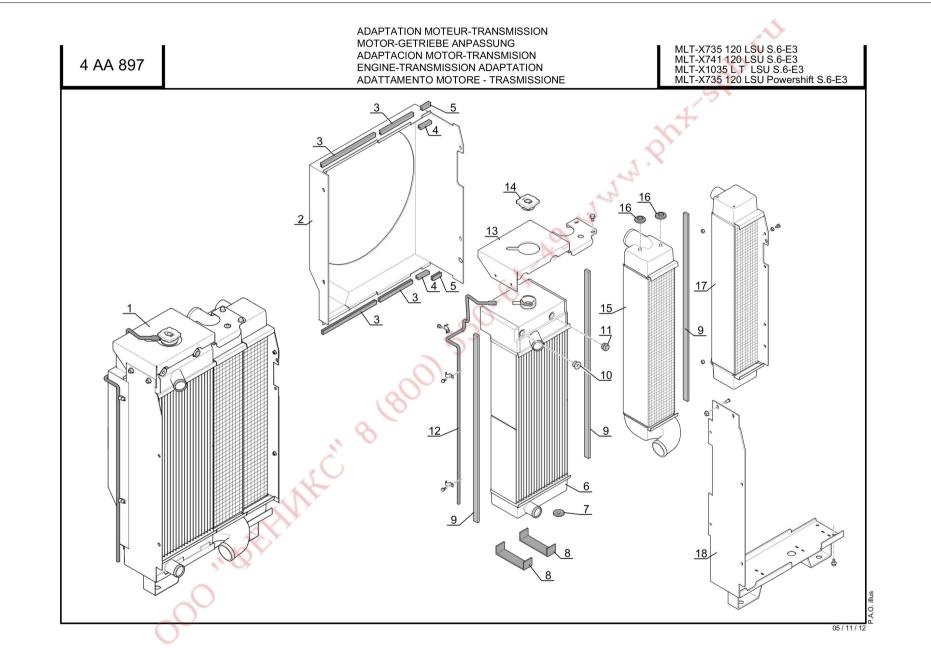

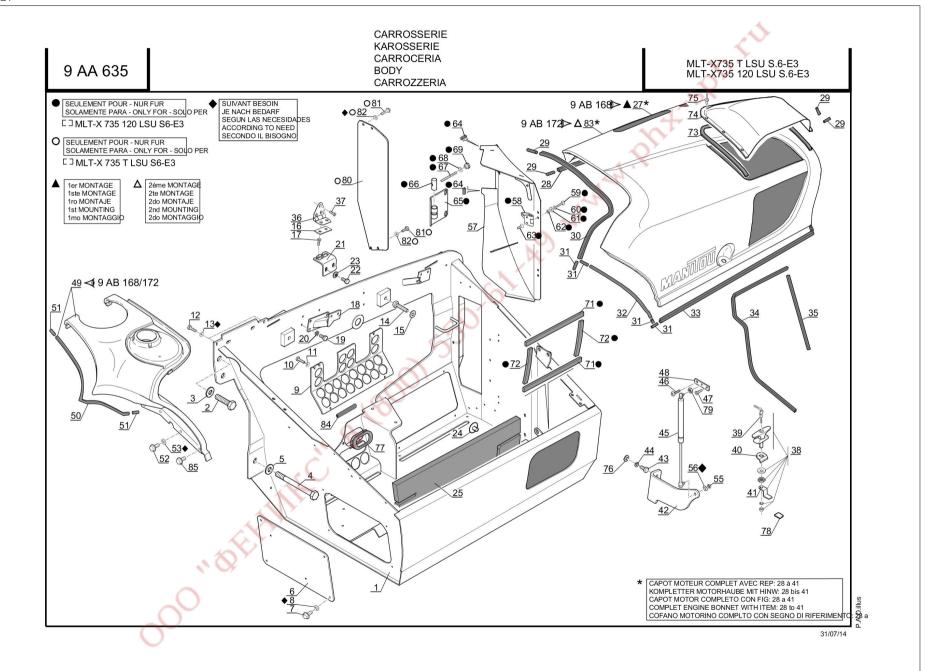


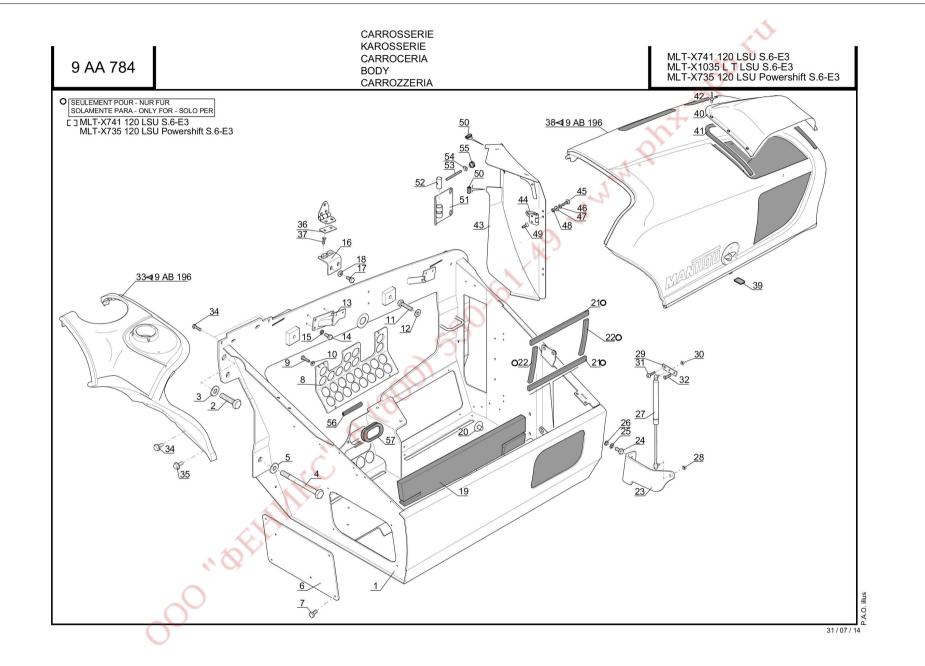

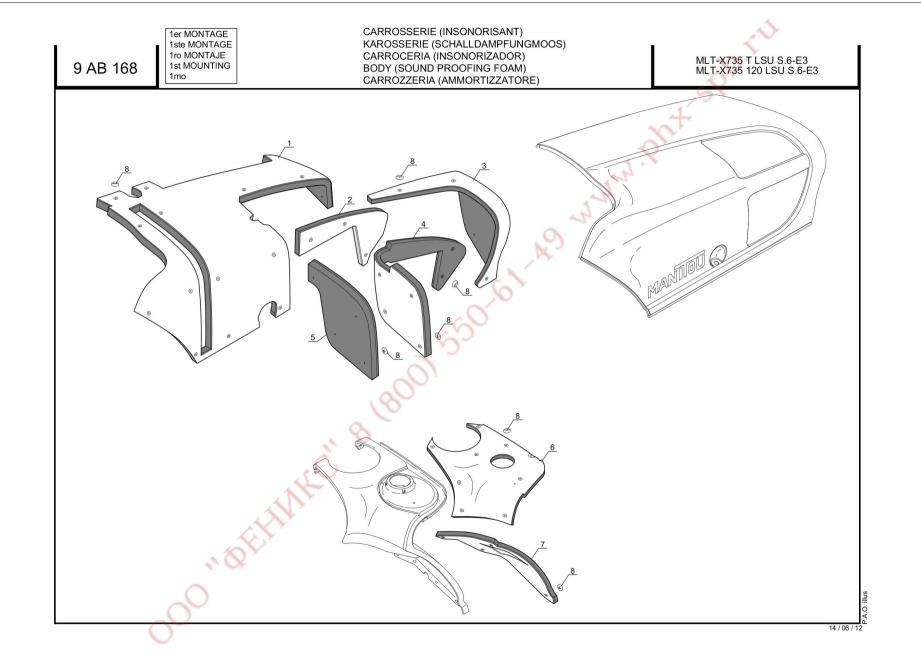


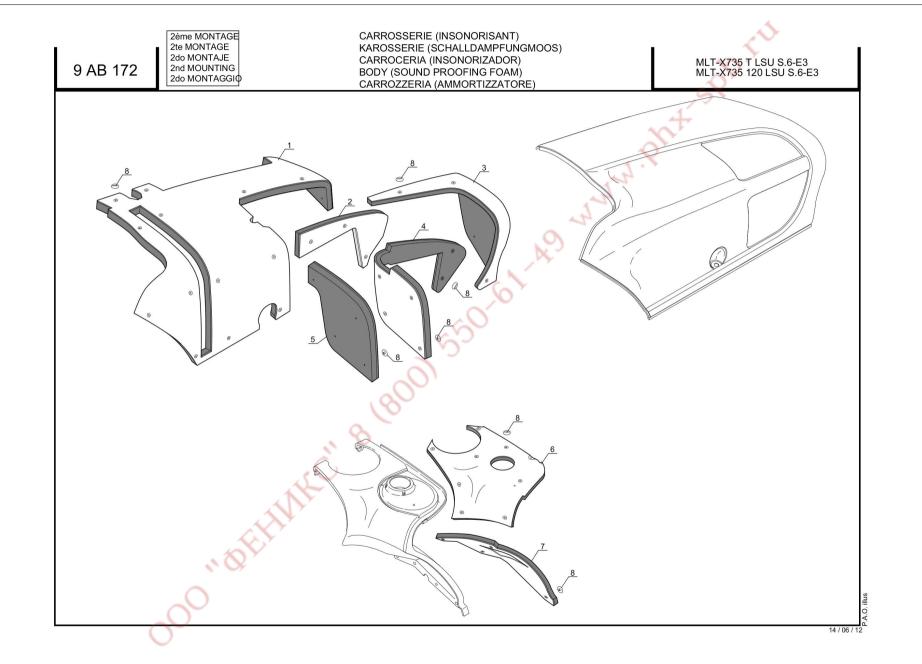




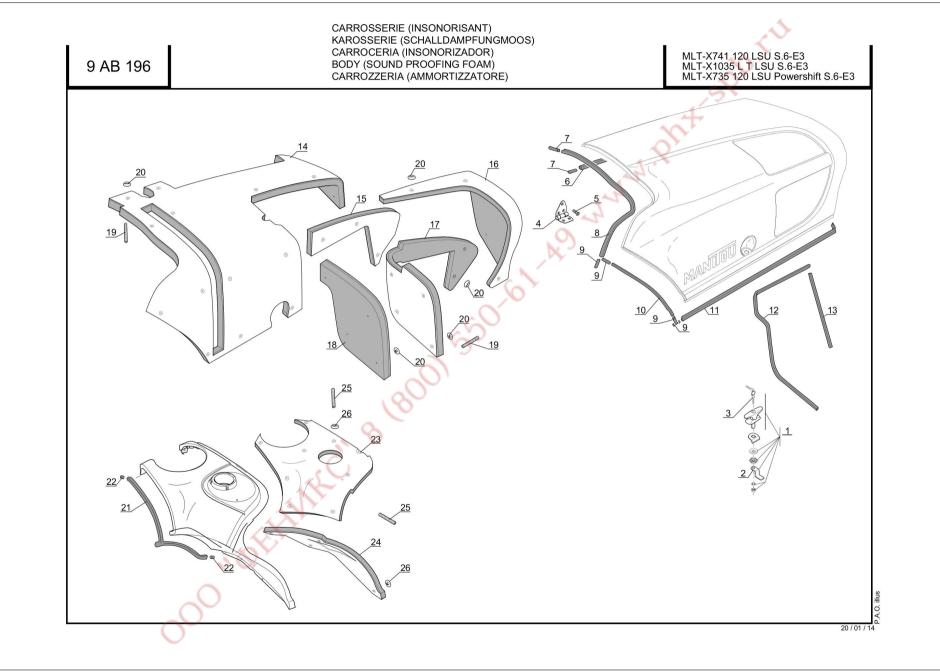


# \_COUNTERWEIGHT

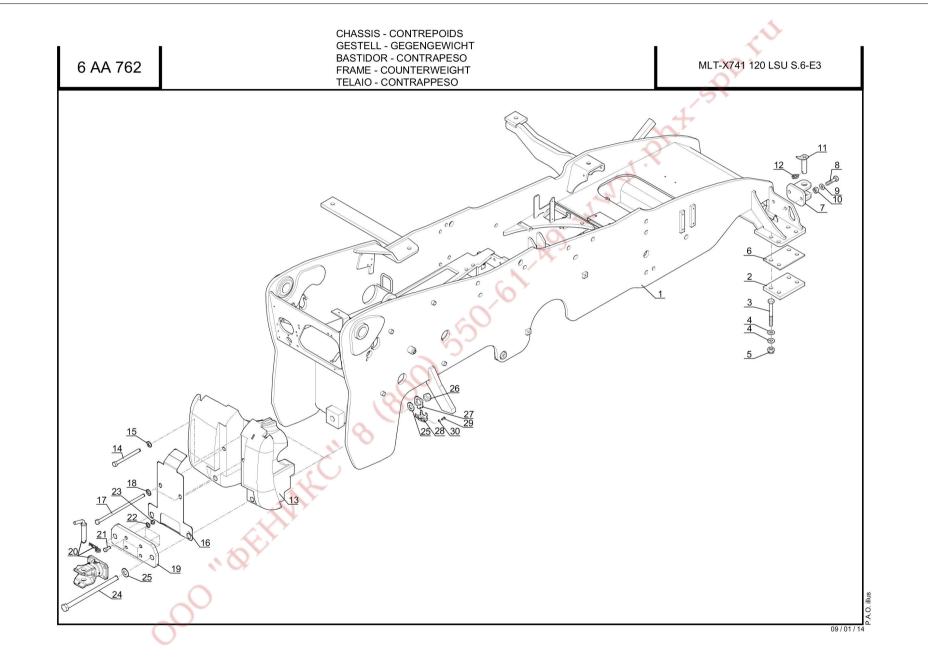


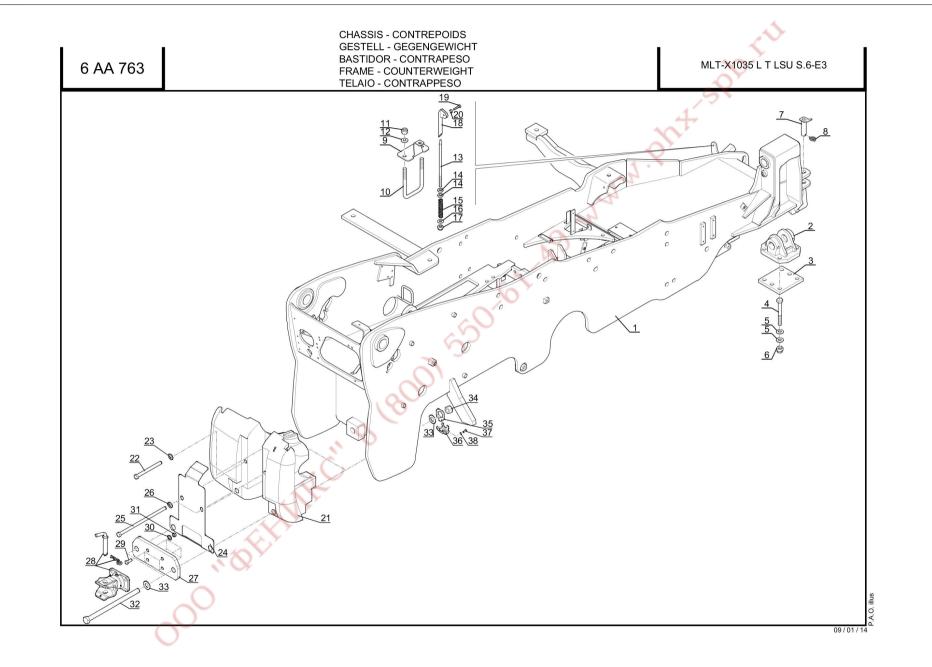



## ADJUSTABLE DRAW HOOK

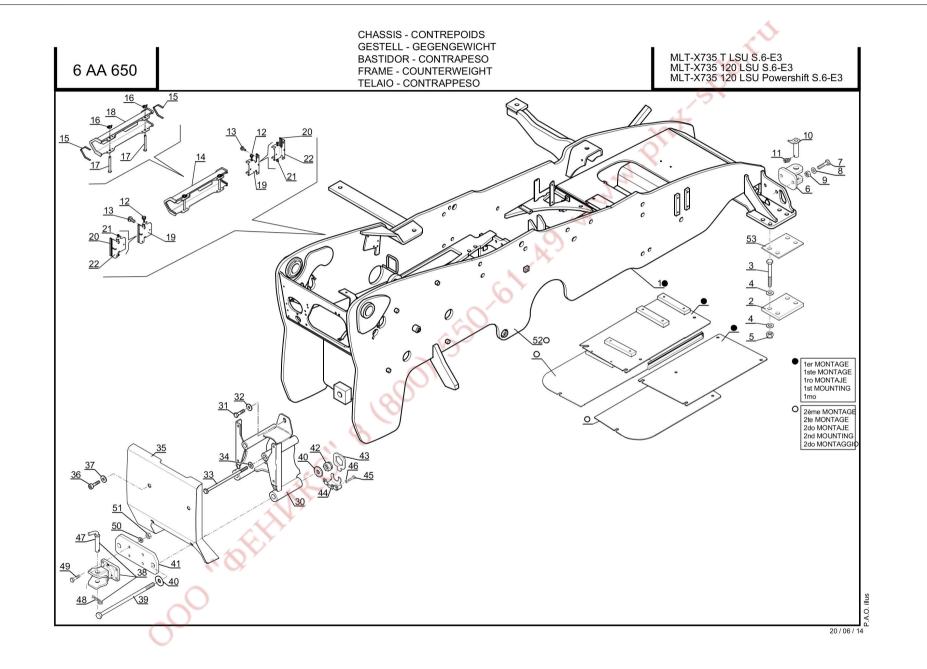


# \_MUD GUARD (FENDER)

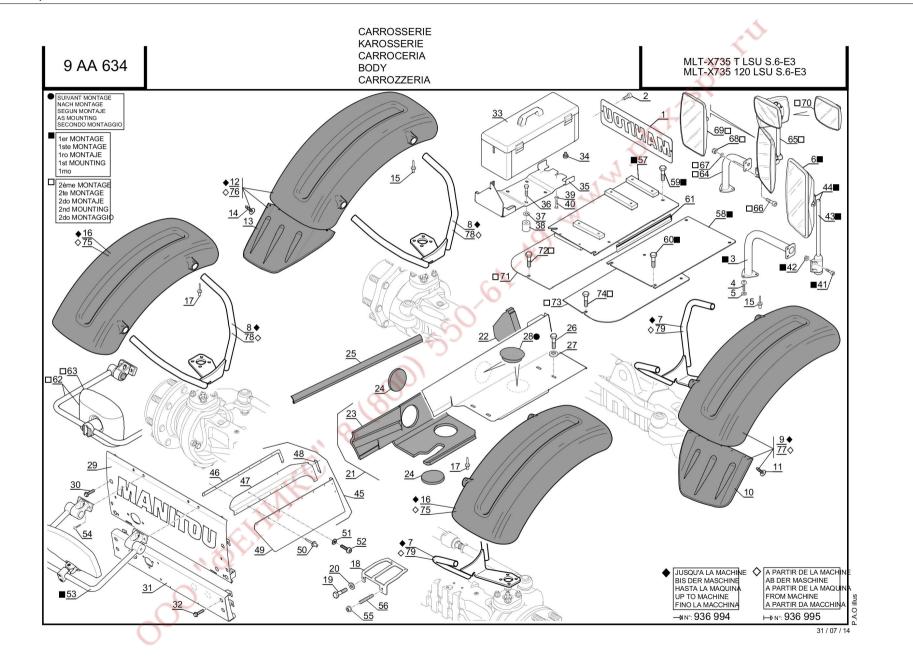


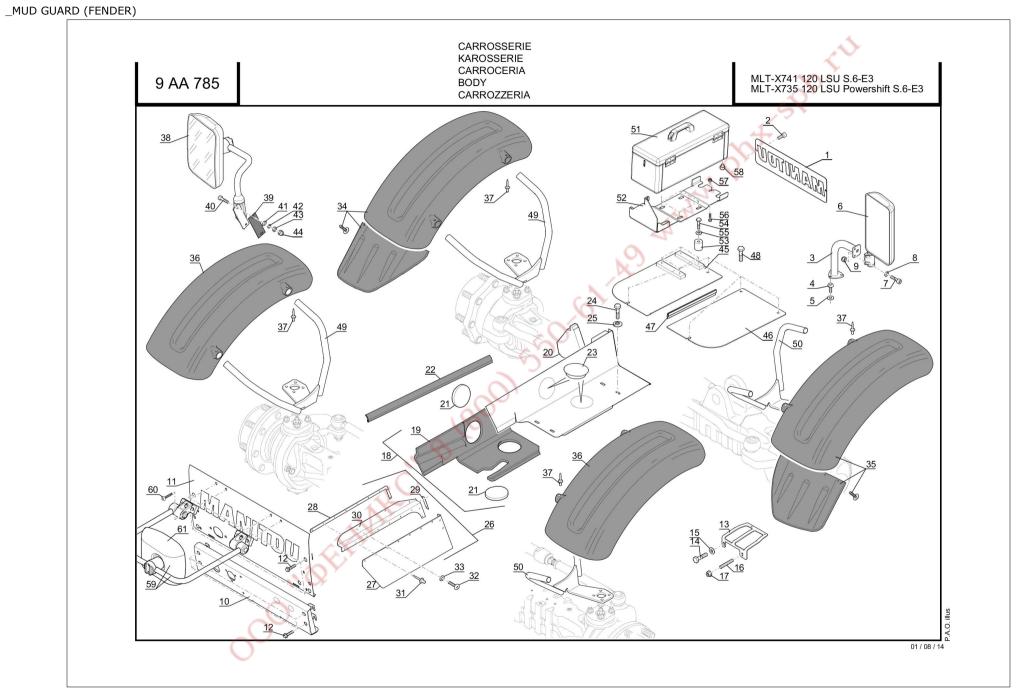


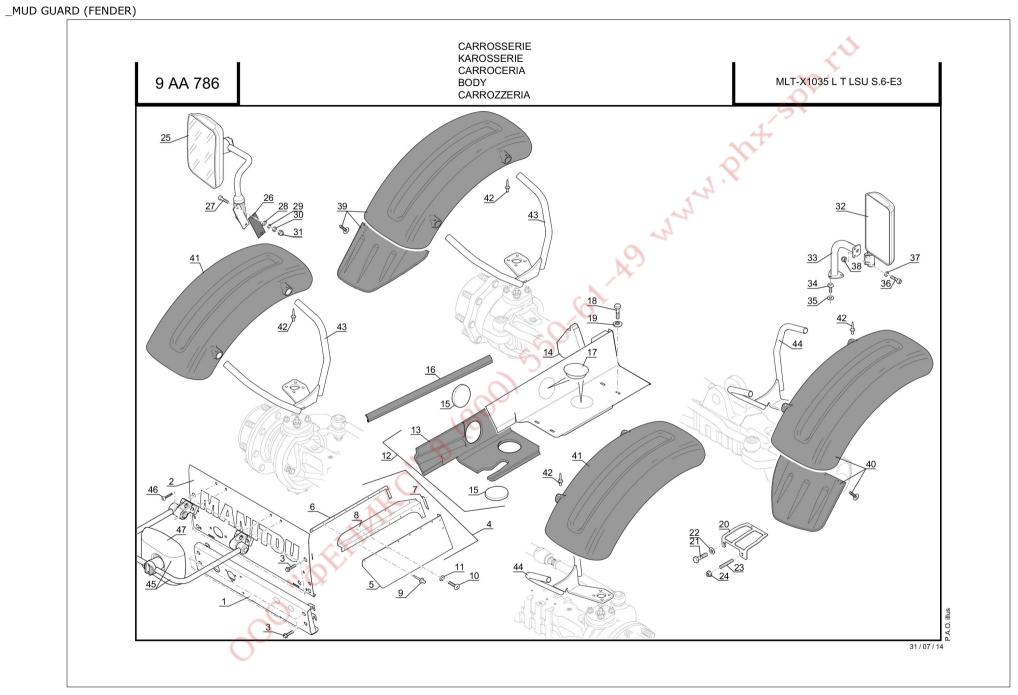



### SOUND PROOFING

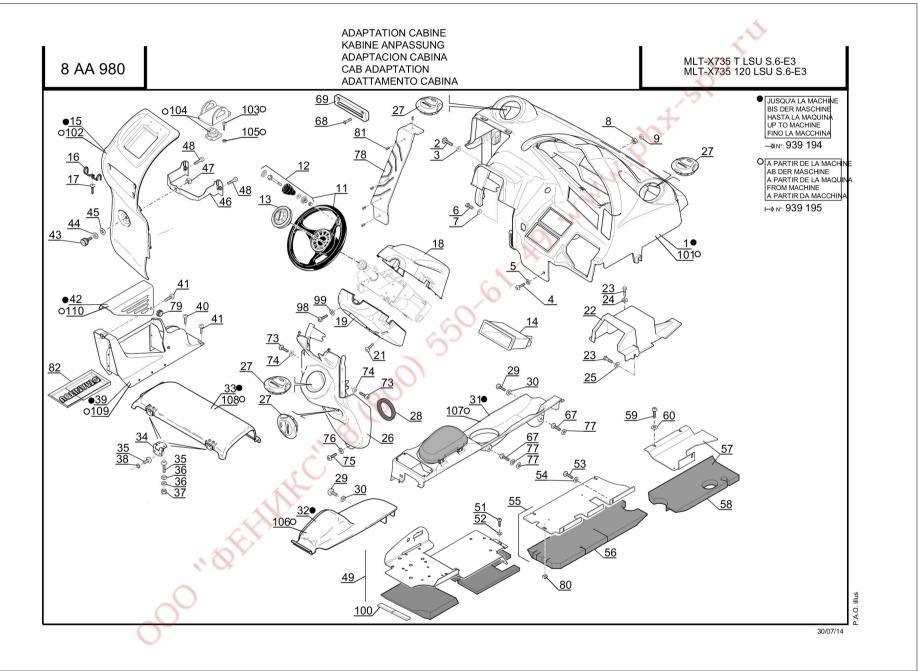


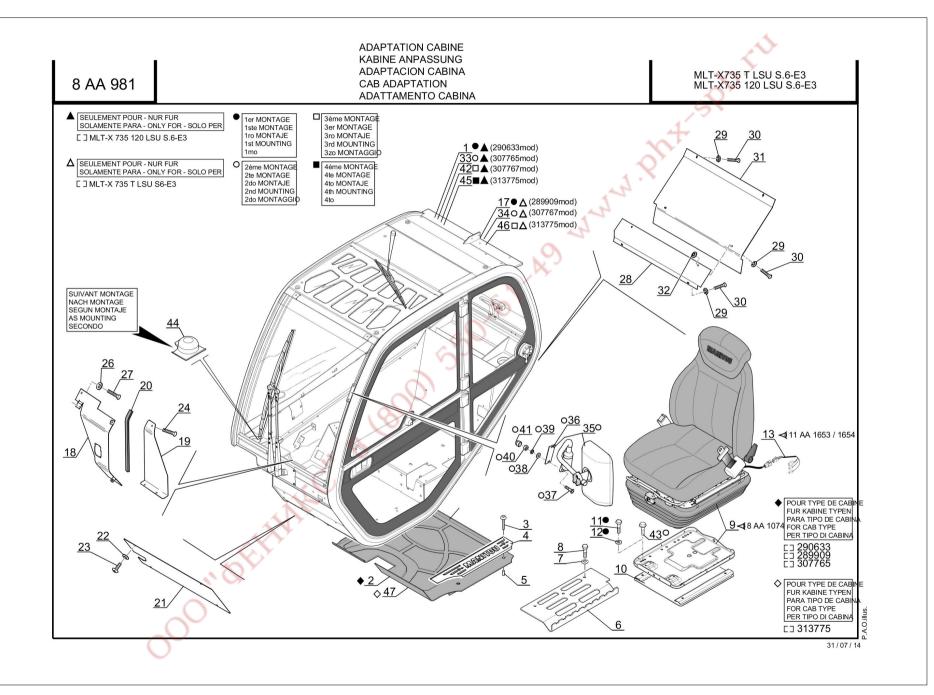


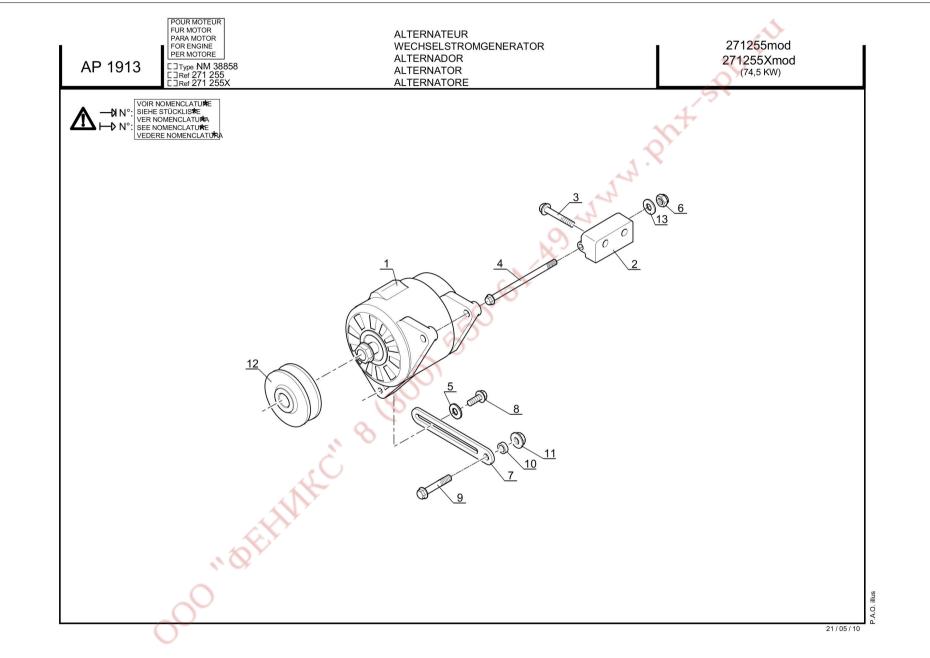


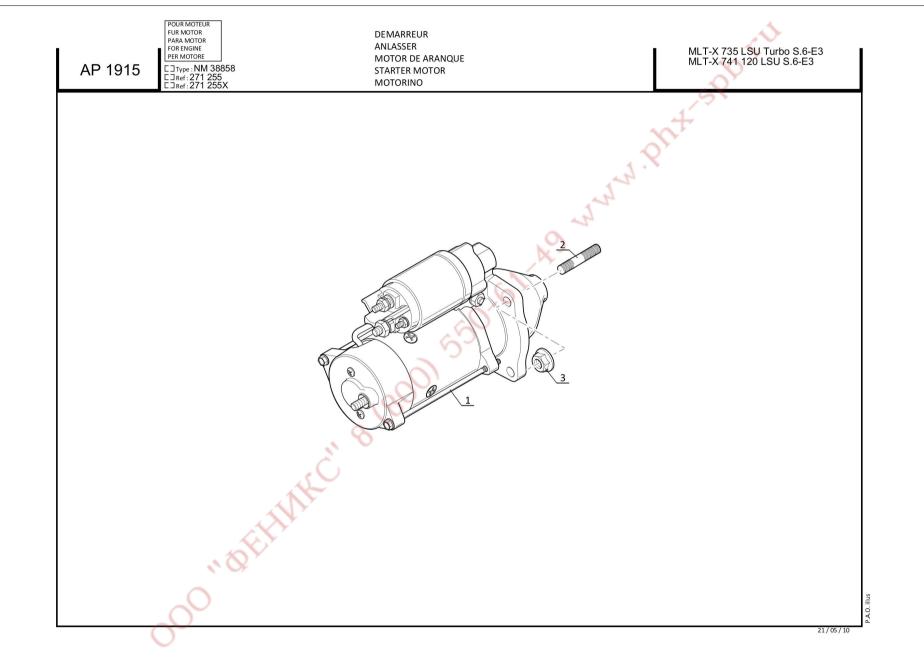


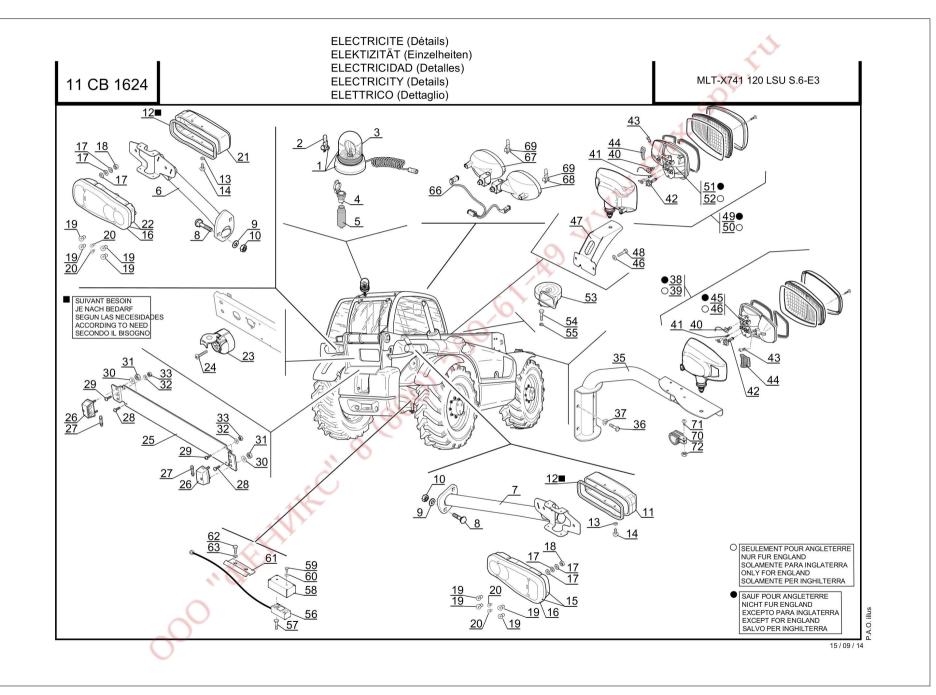


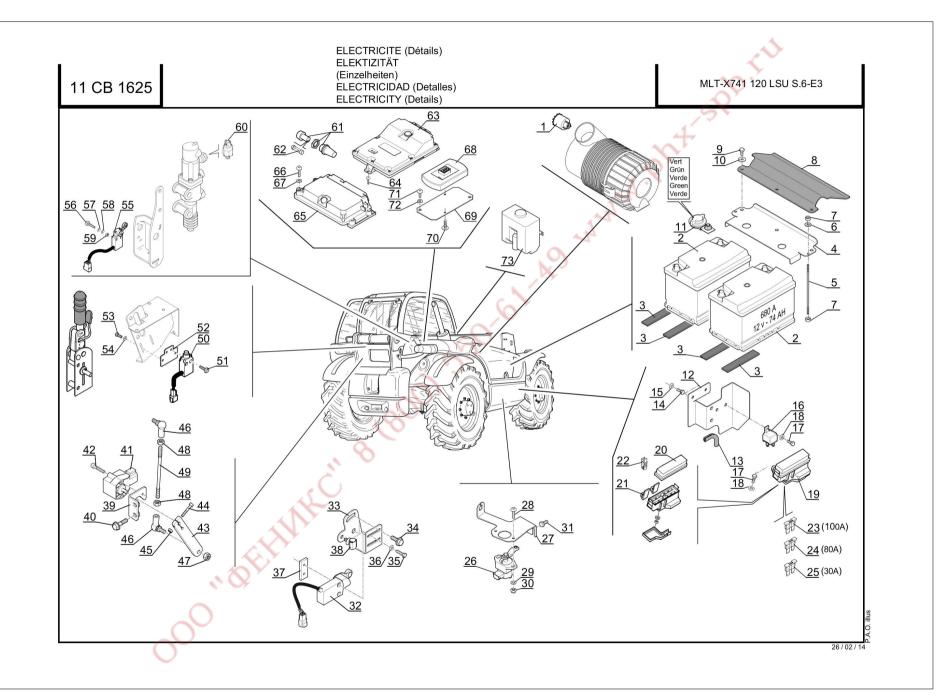


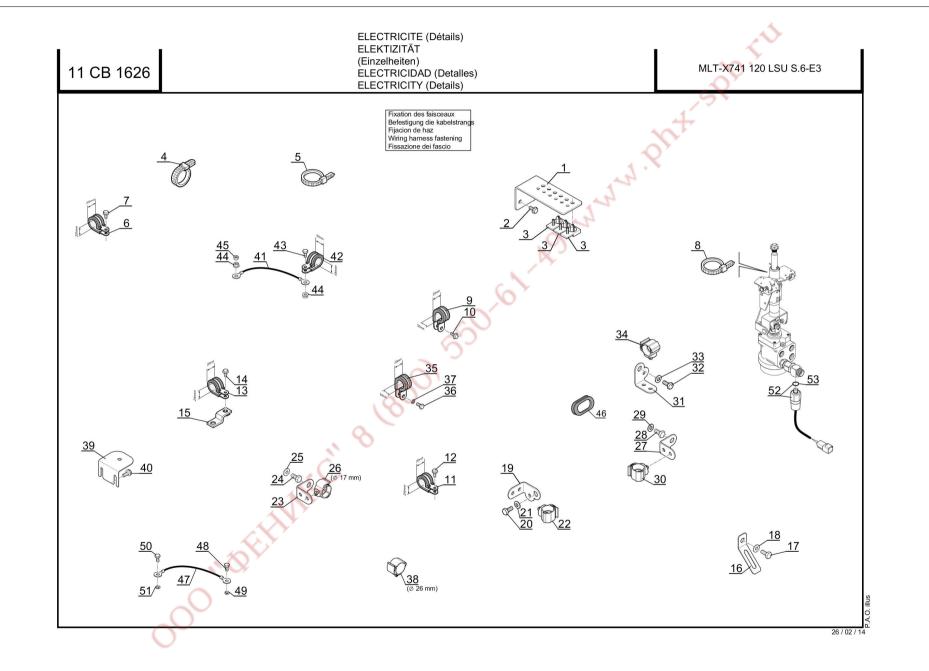


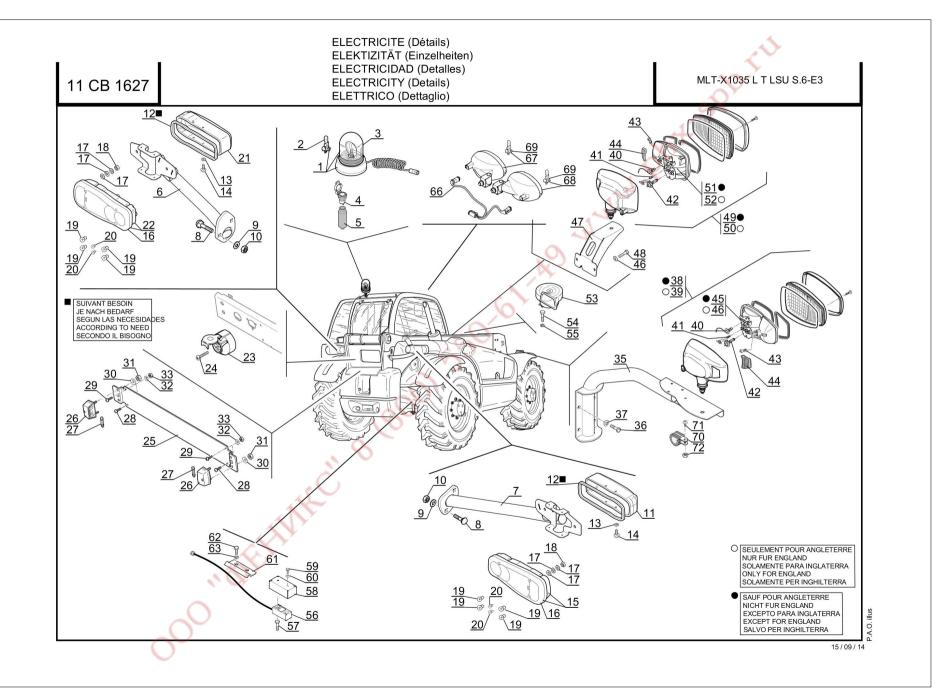


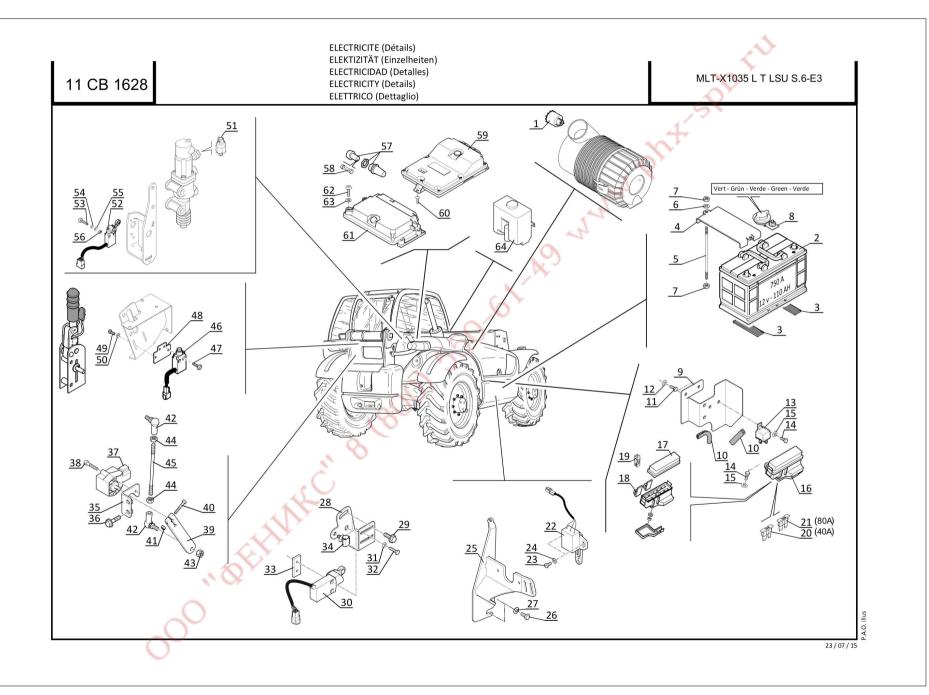


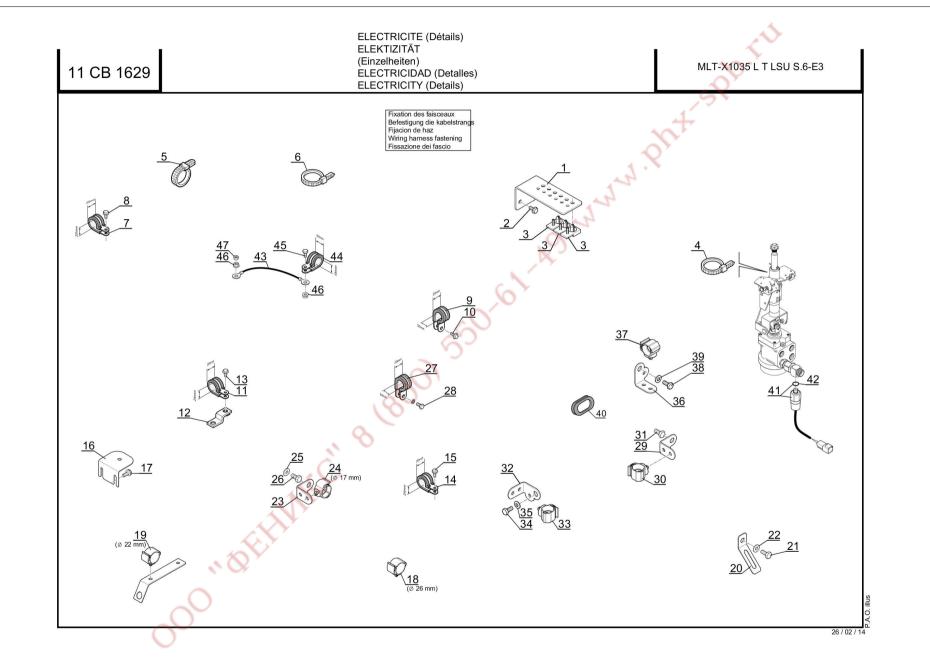


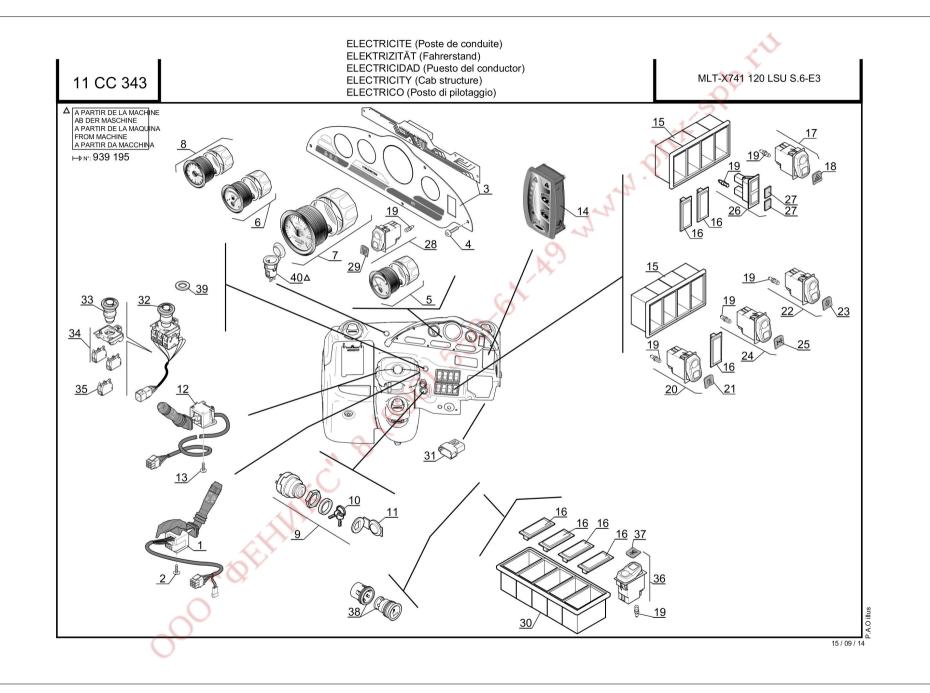


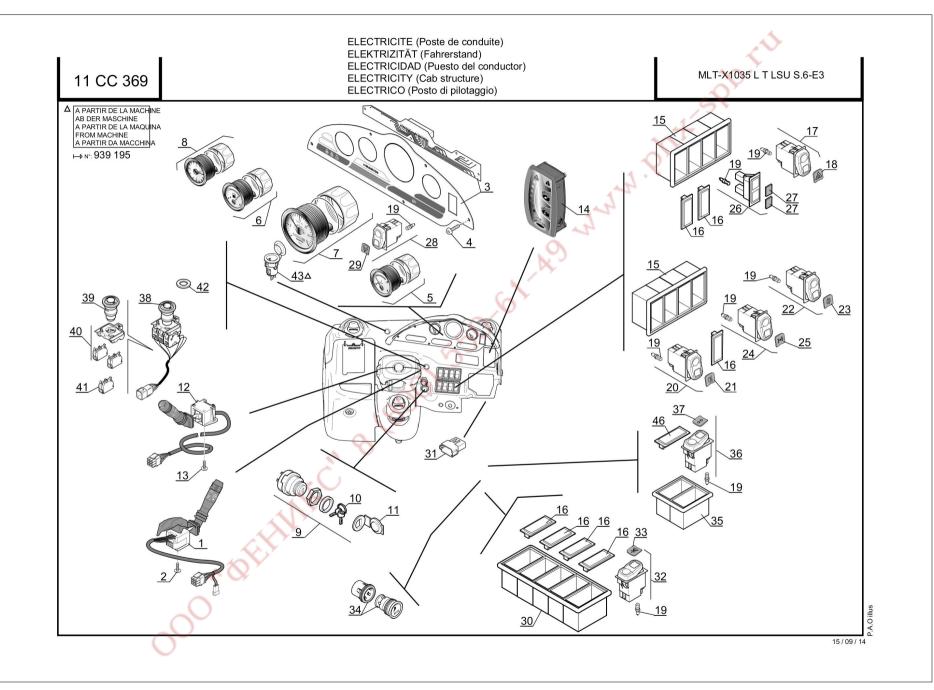


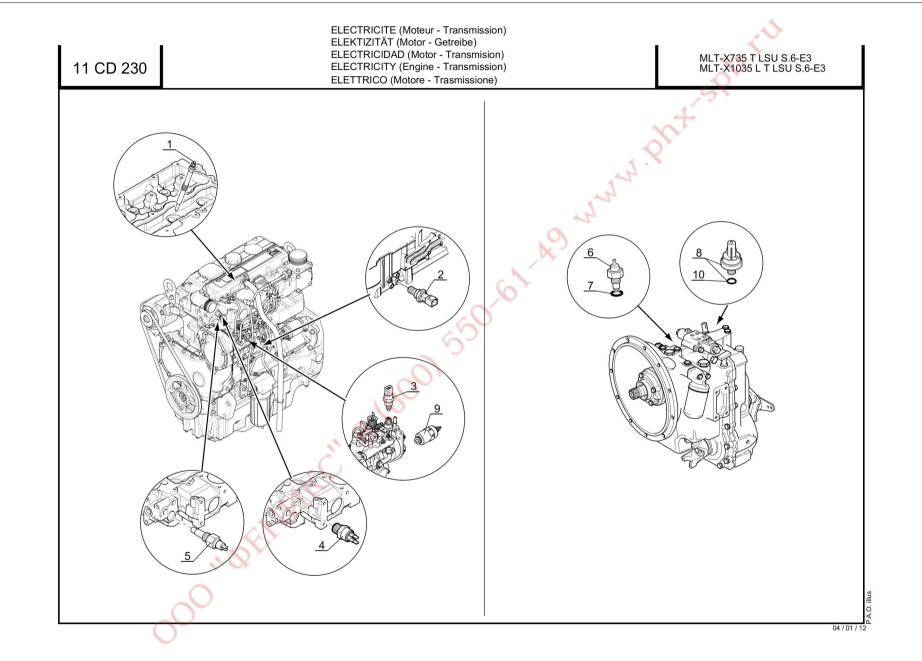


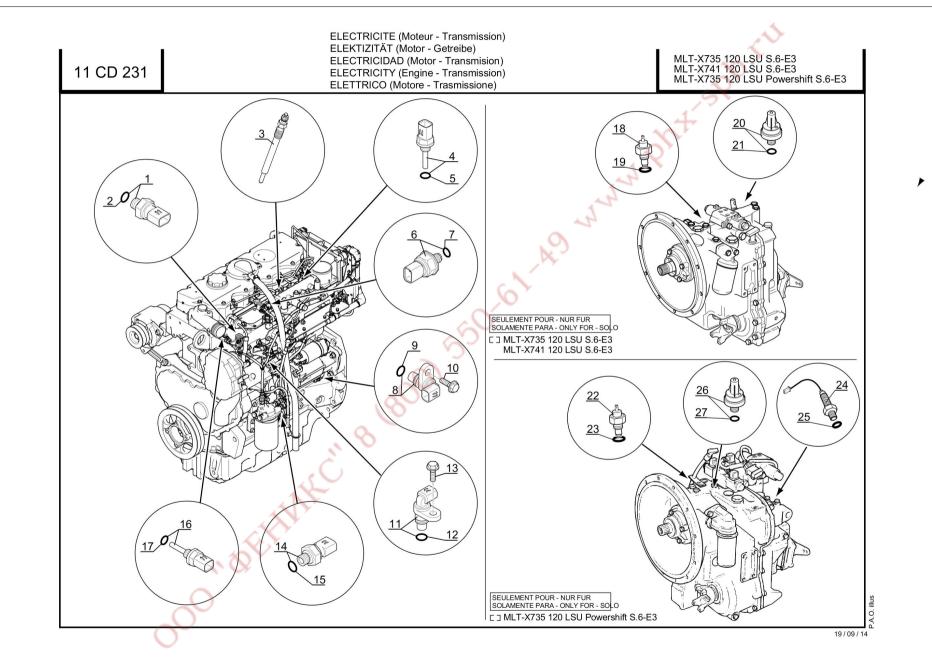

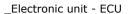


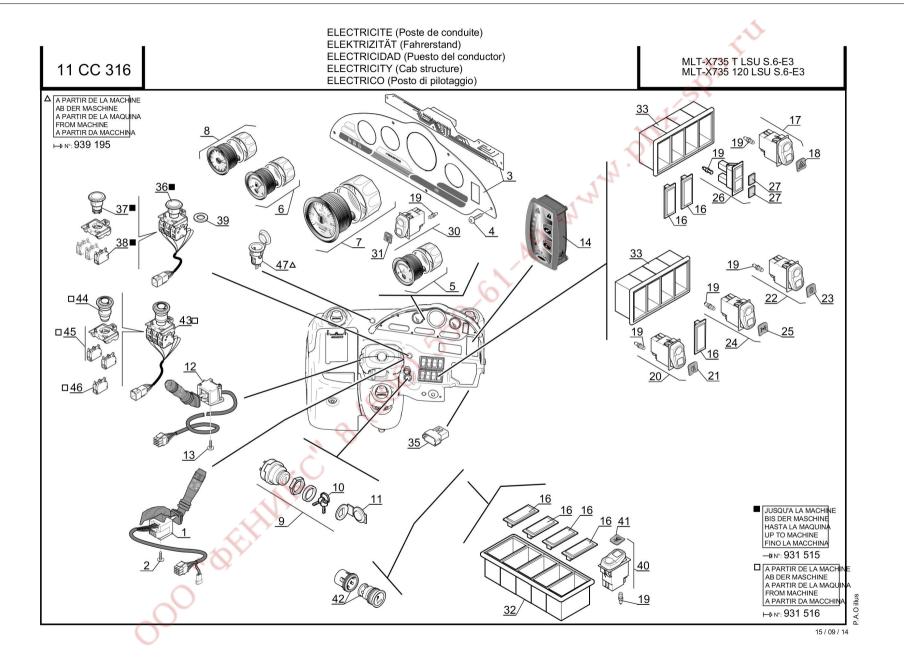


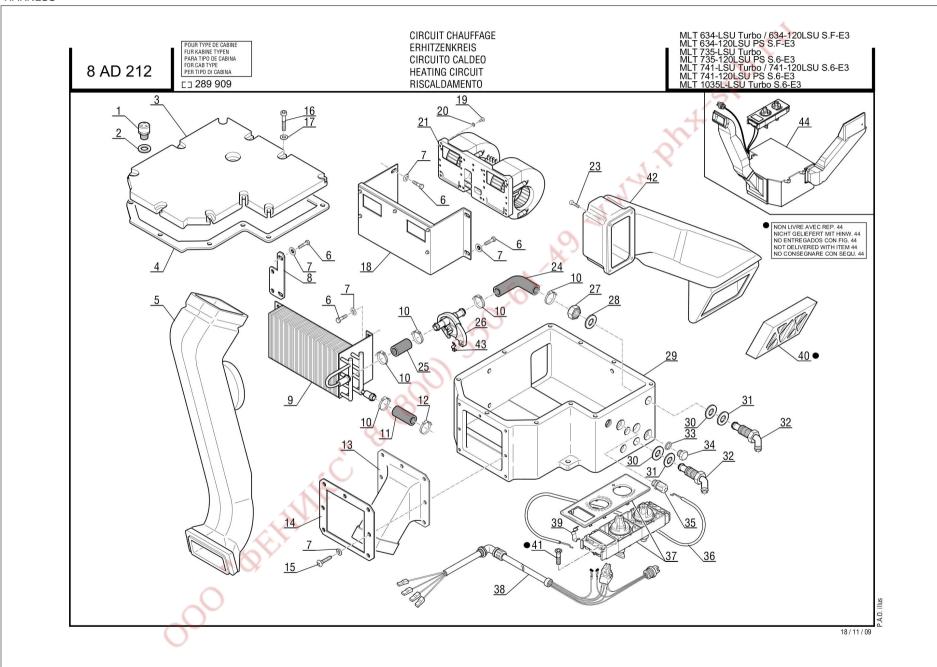


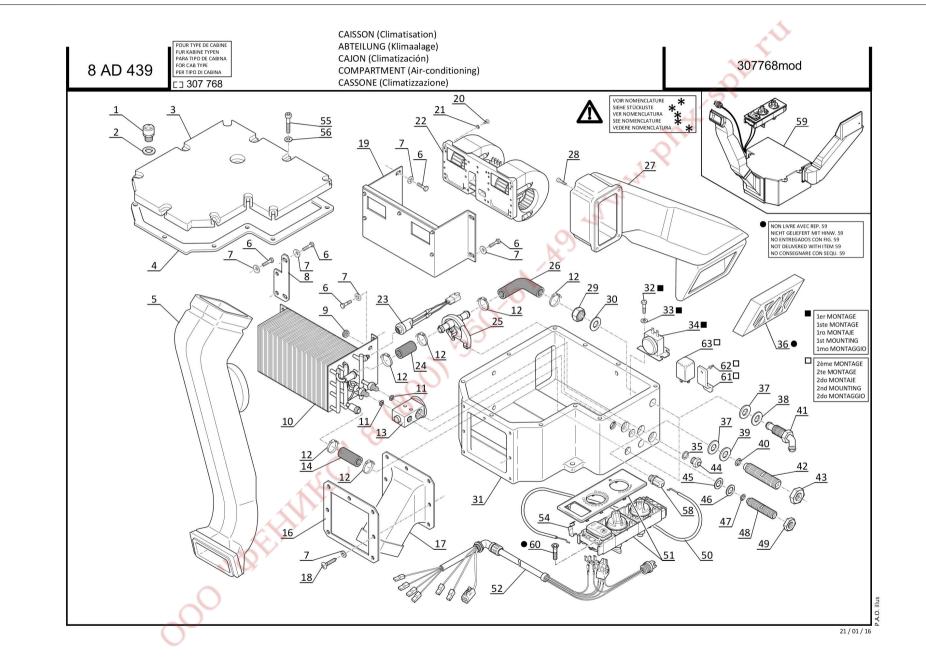



CIRCUIT - HARNESS

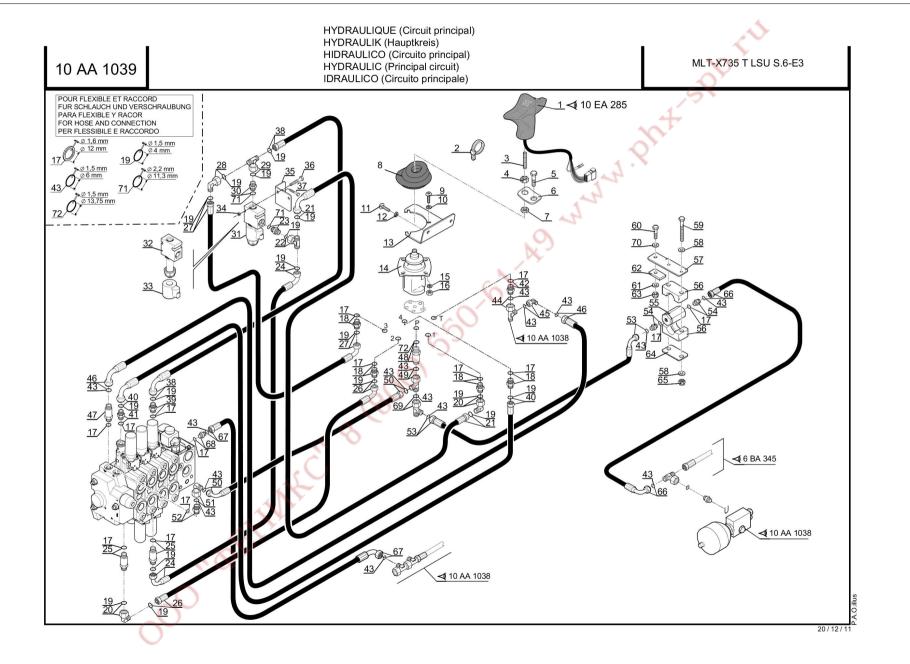

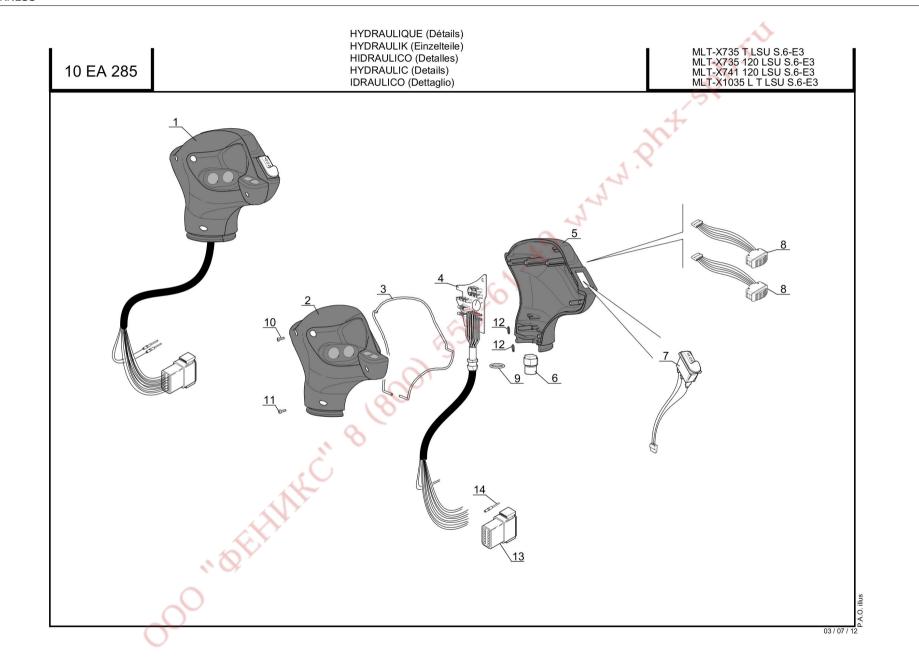


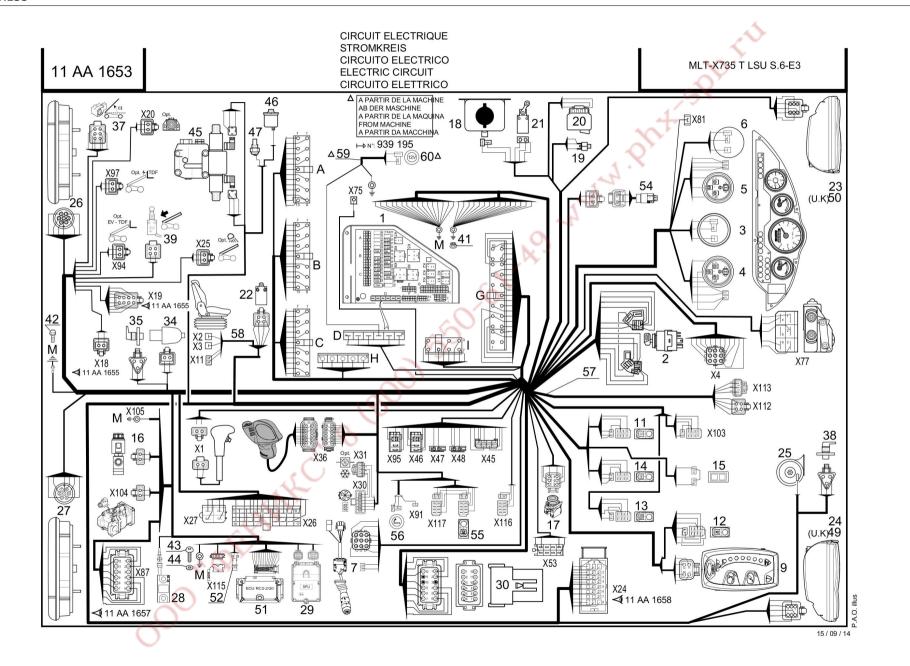


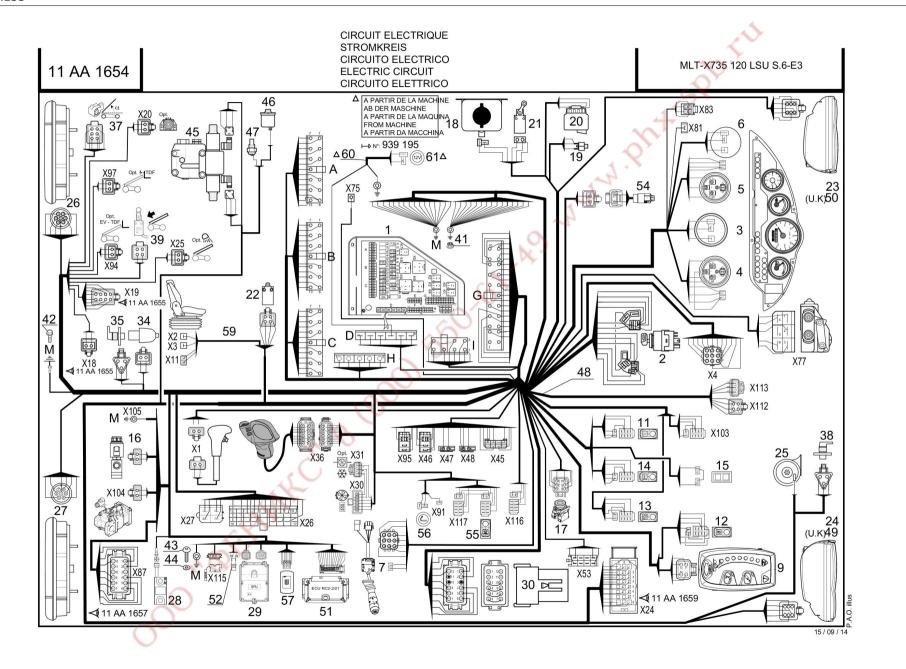


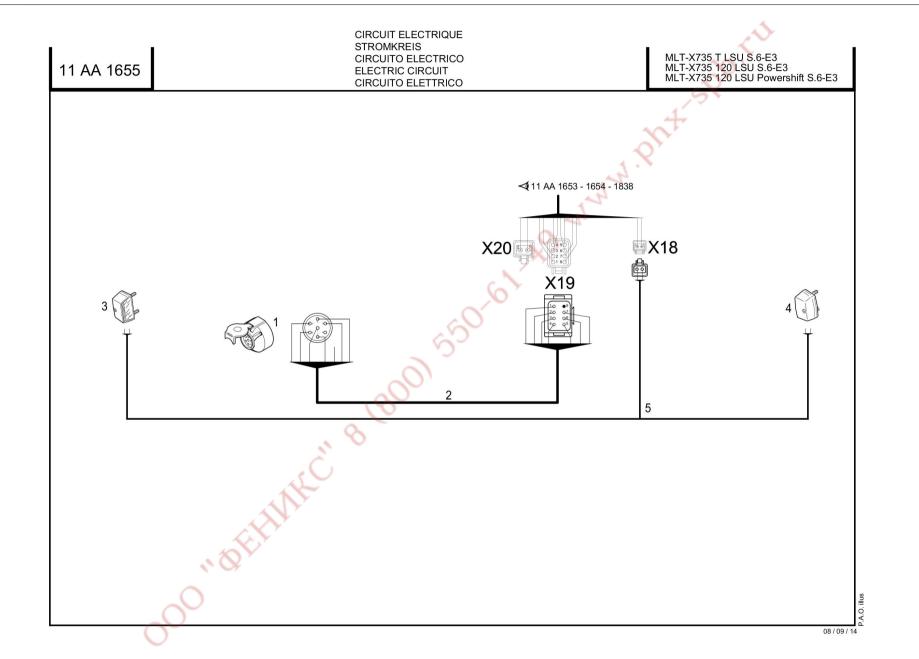



CIRCUIT - HARNESS

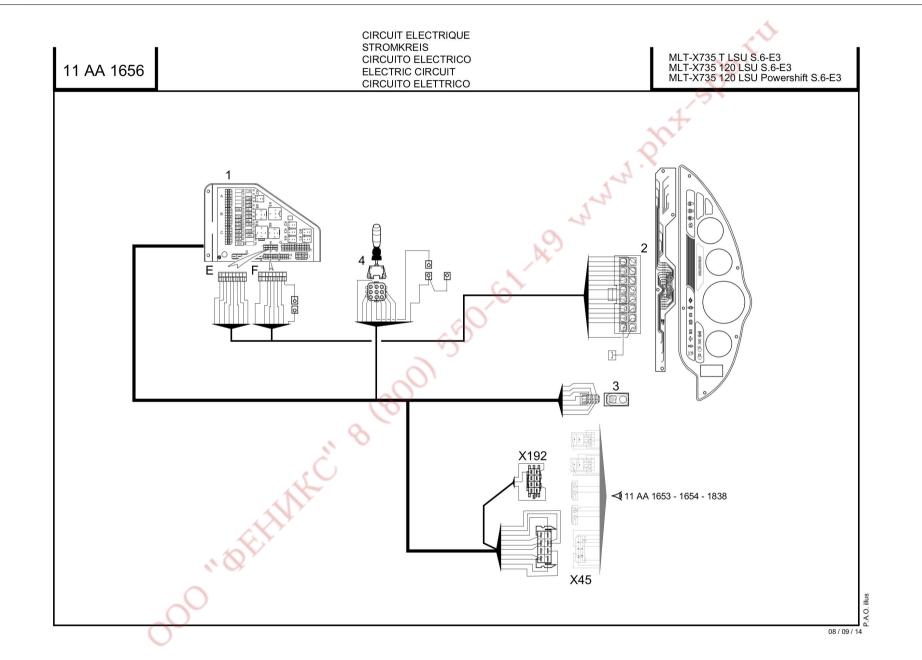


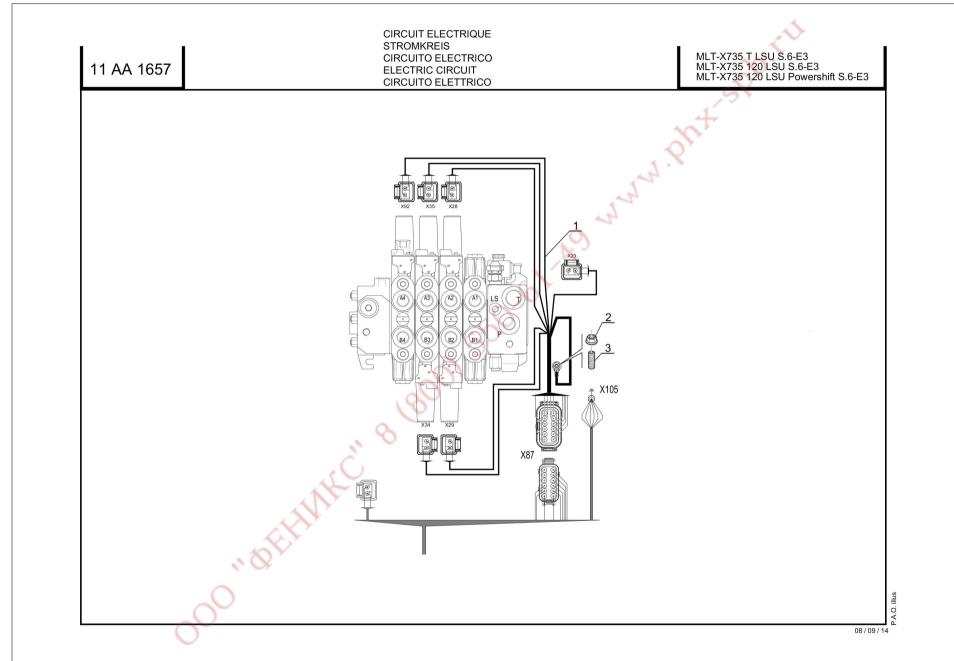


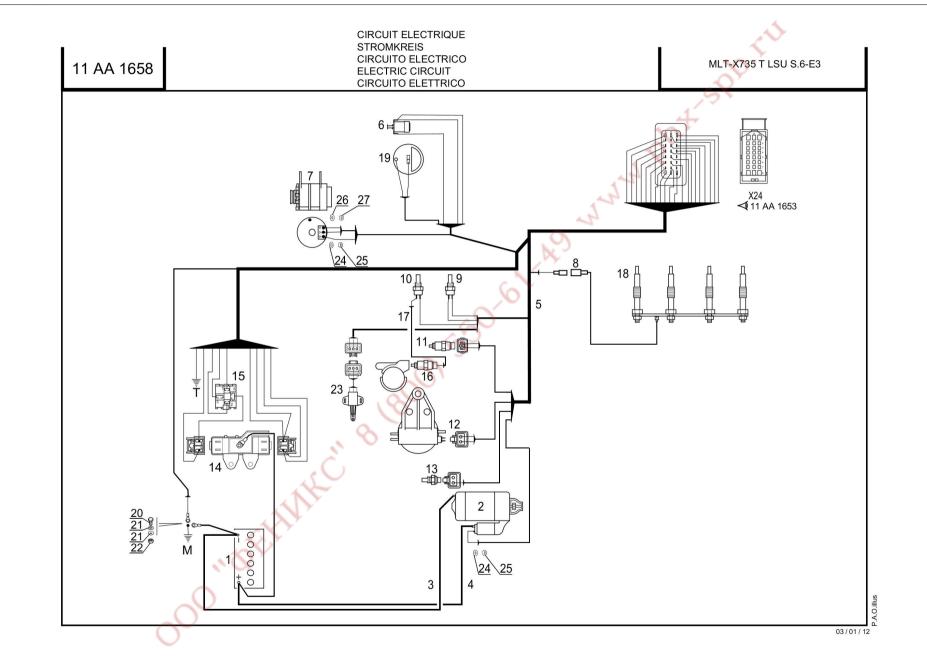

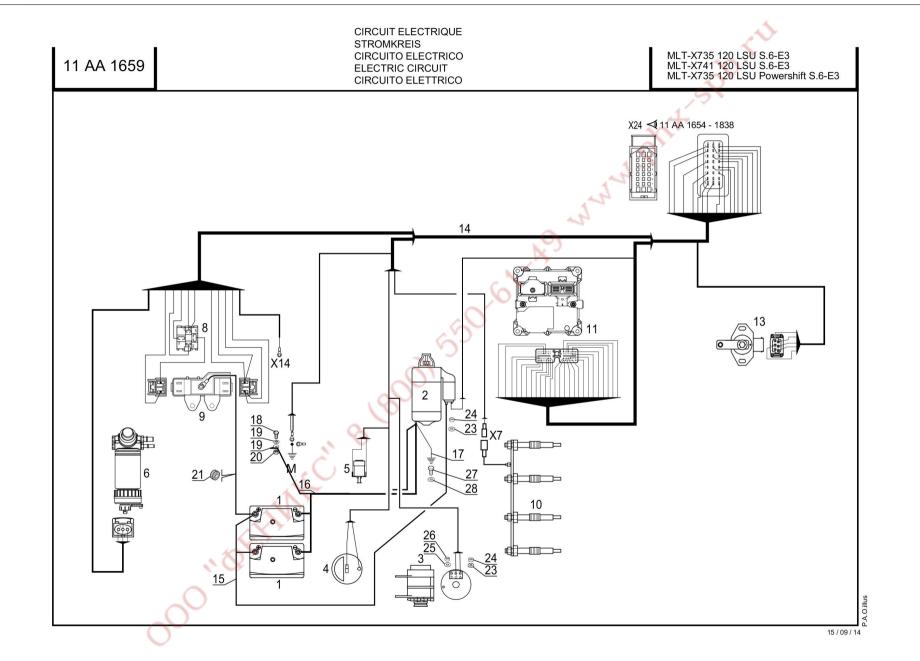


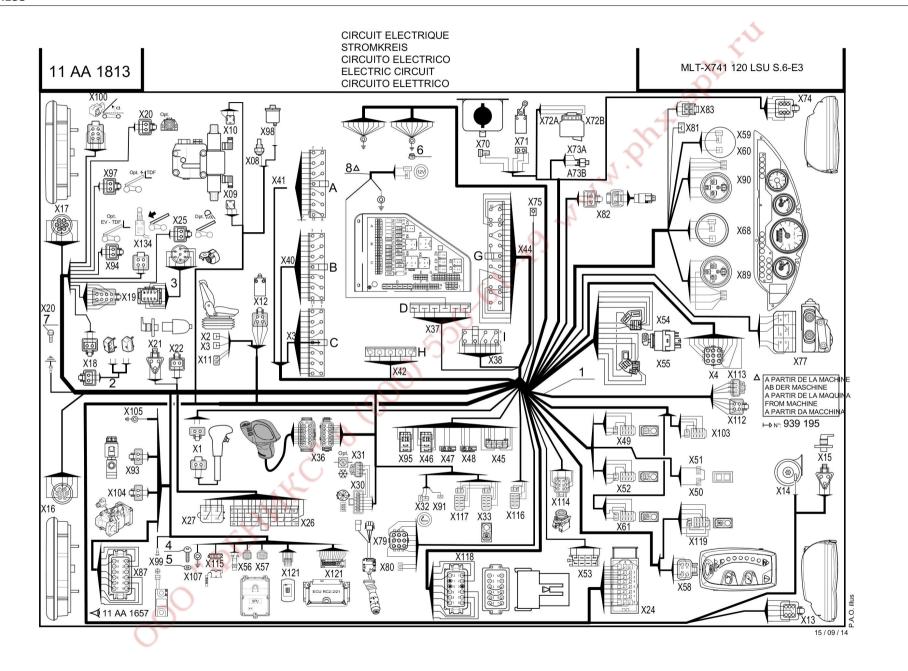

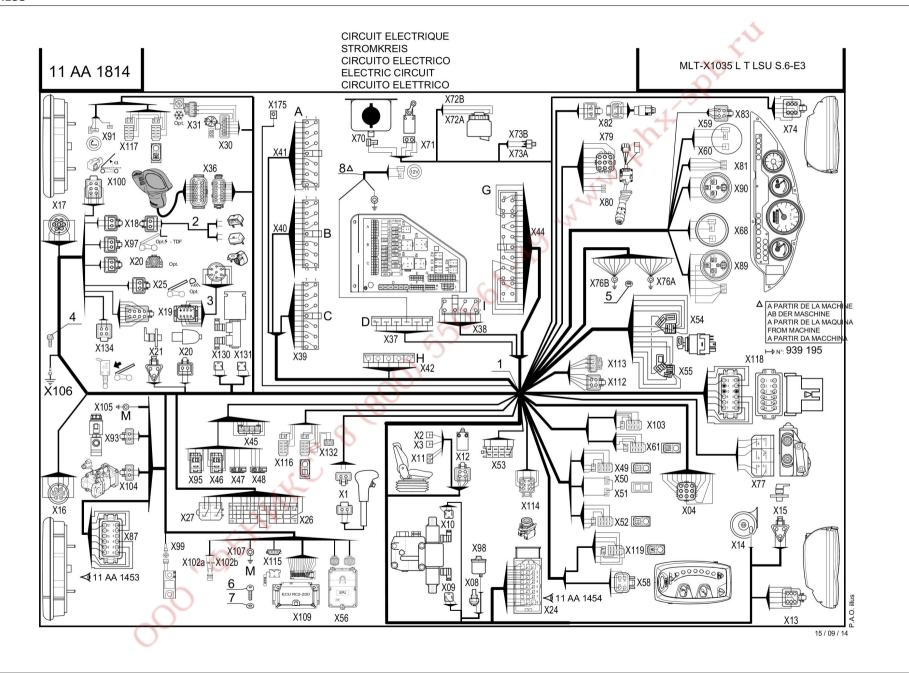


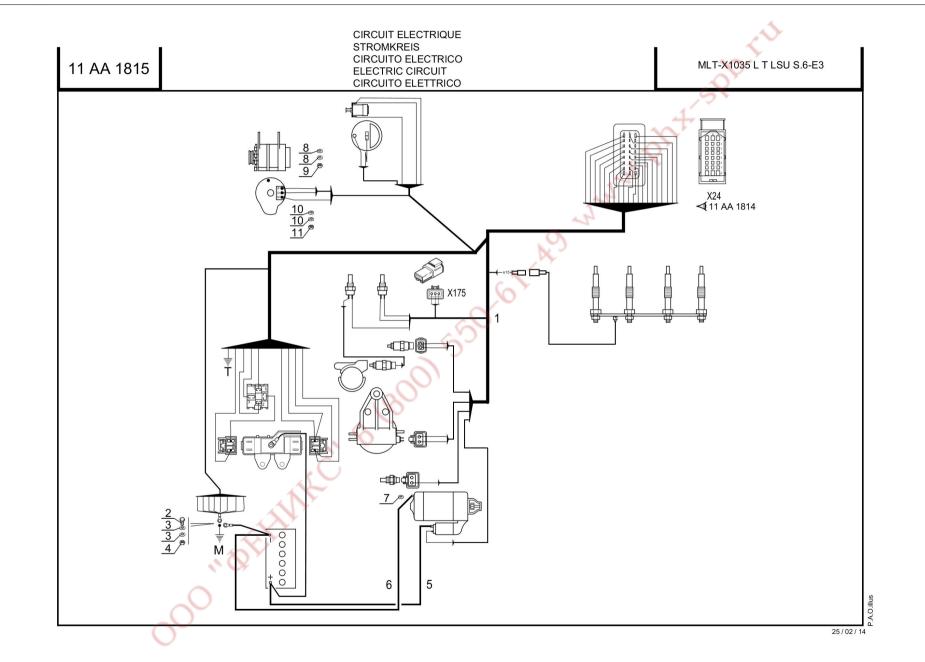


\_CIRCUIT - HARNESS

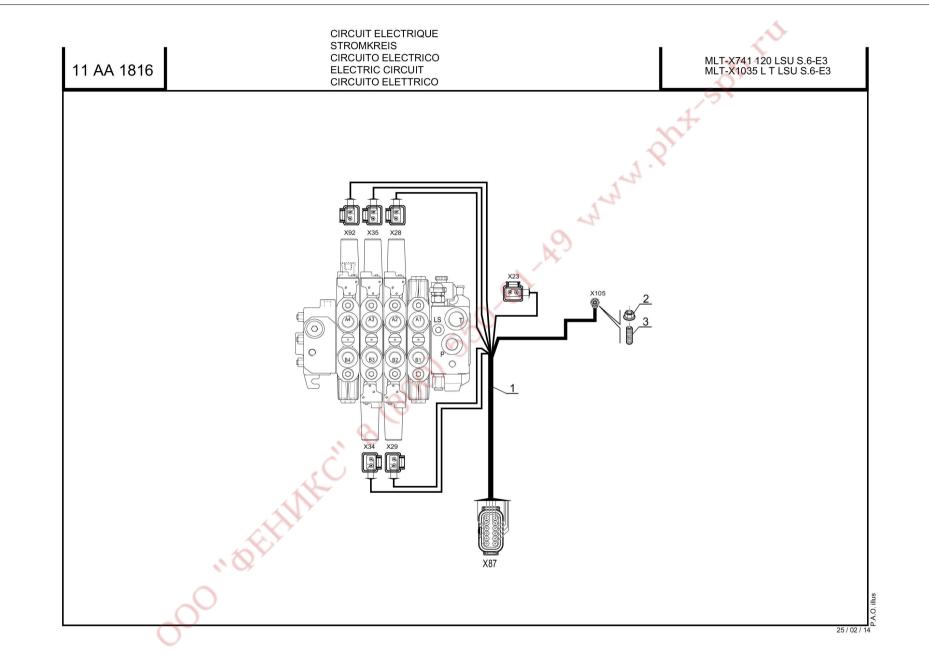



# CIRCUIT - HARNESS

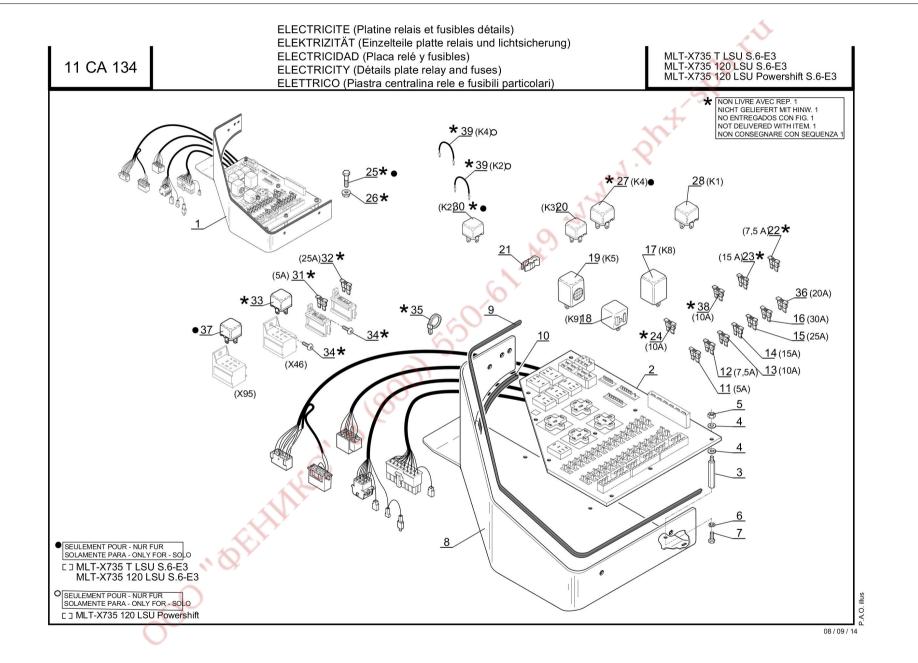



# \_CIRCUIT - HARNESS

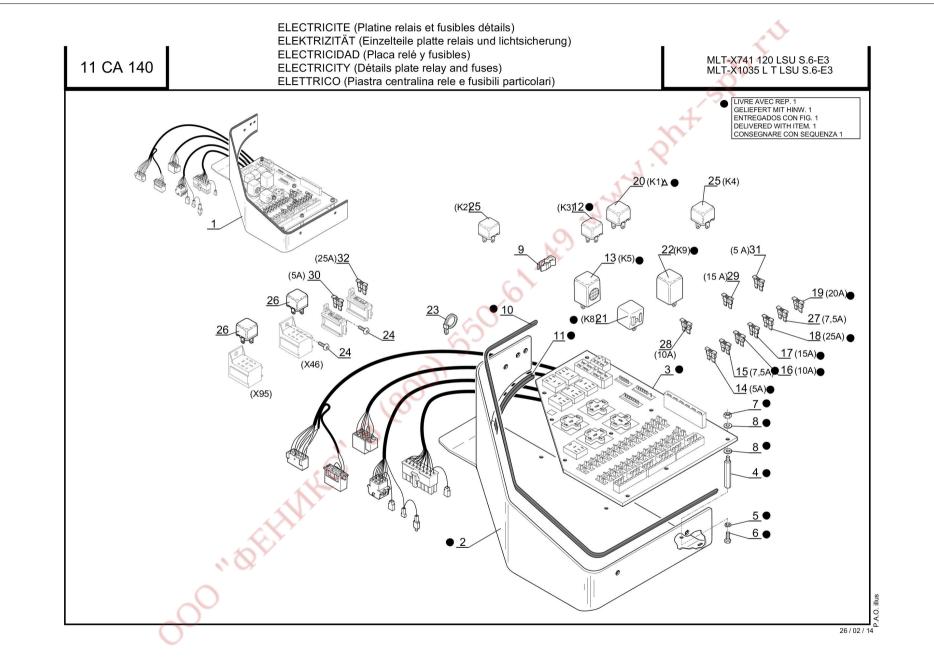

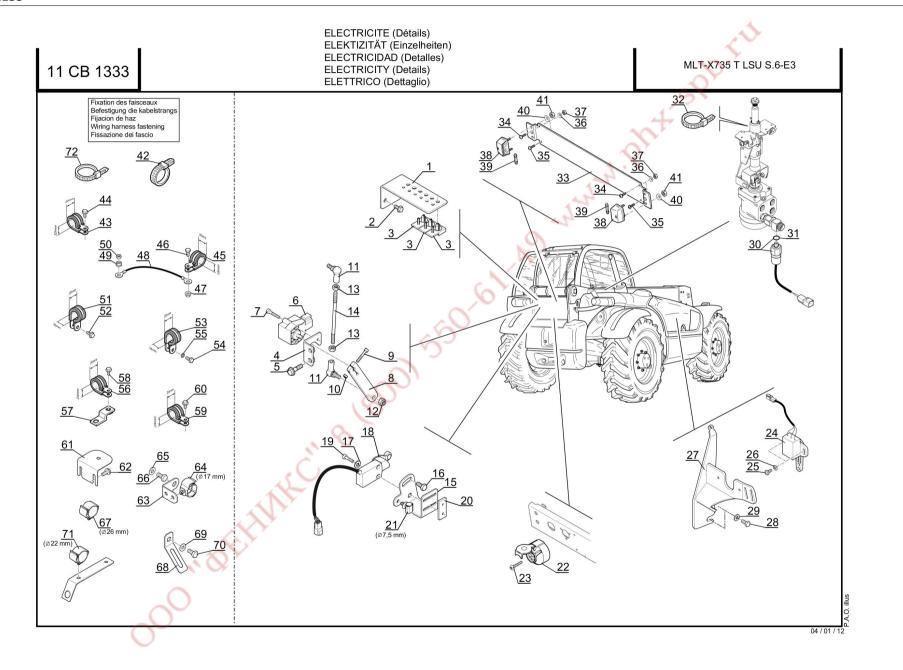


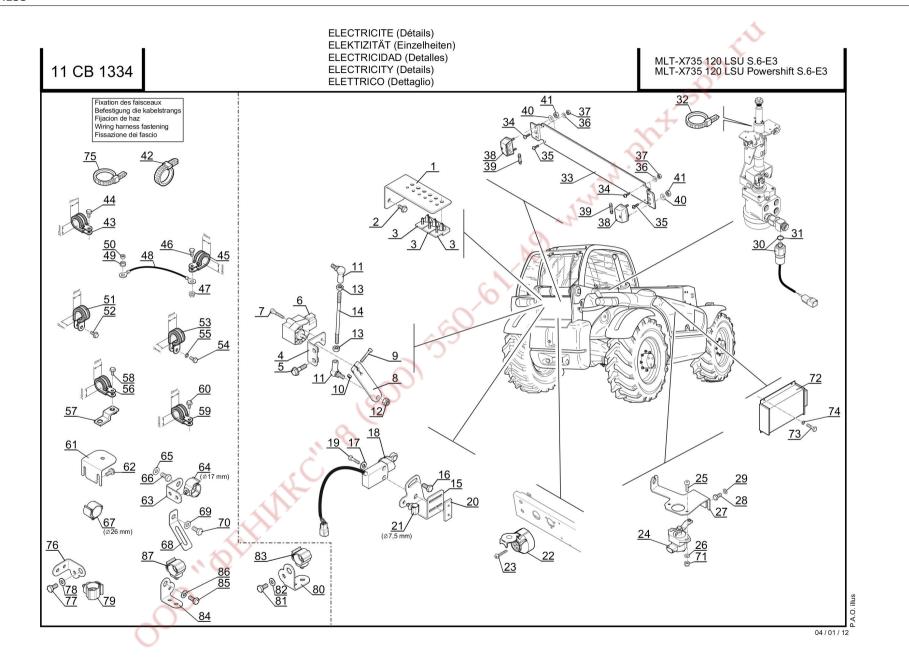


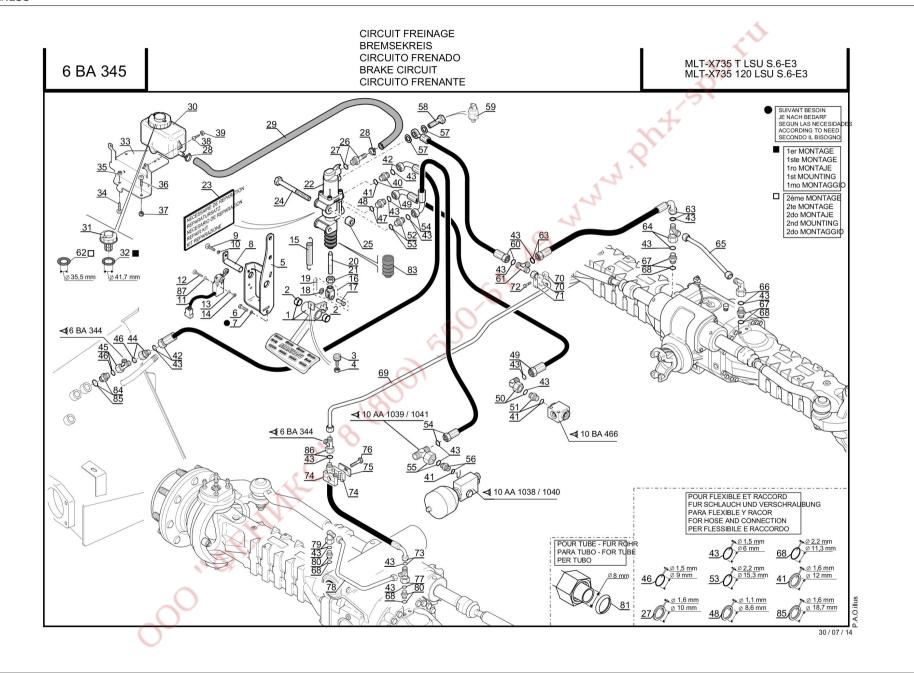

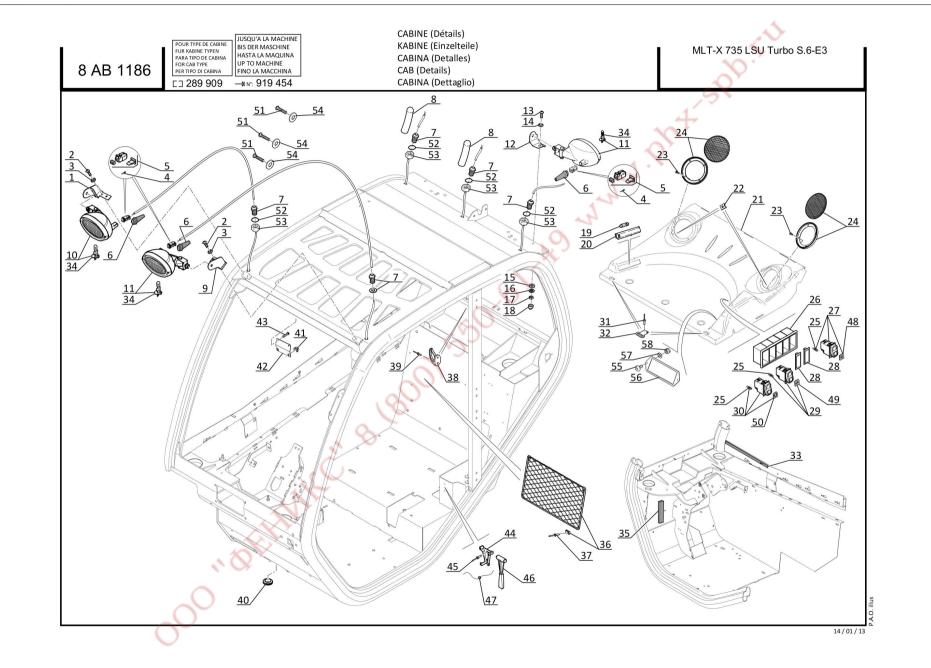


\_LIGHTING - SIGNALING

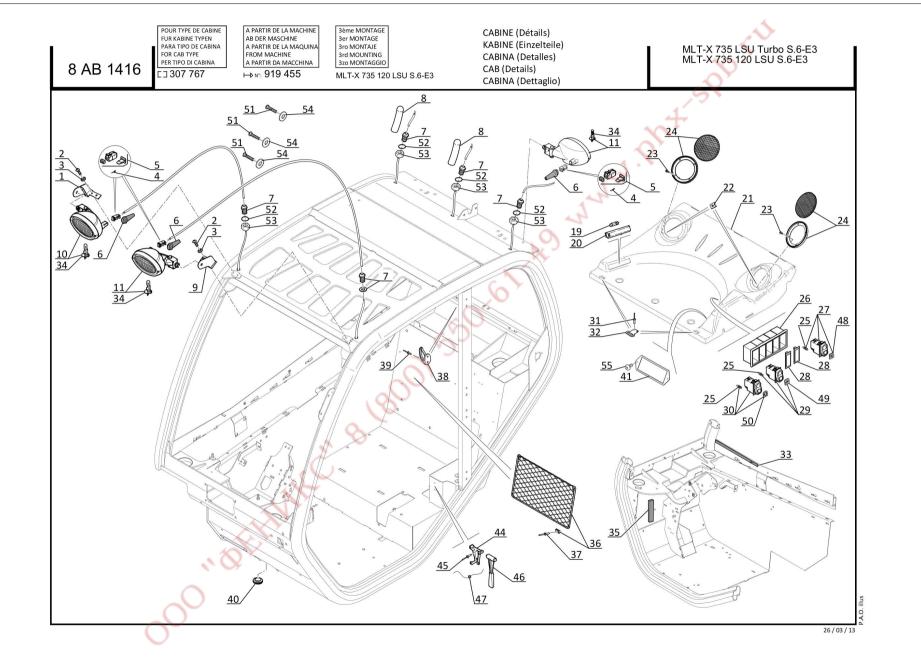


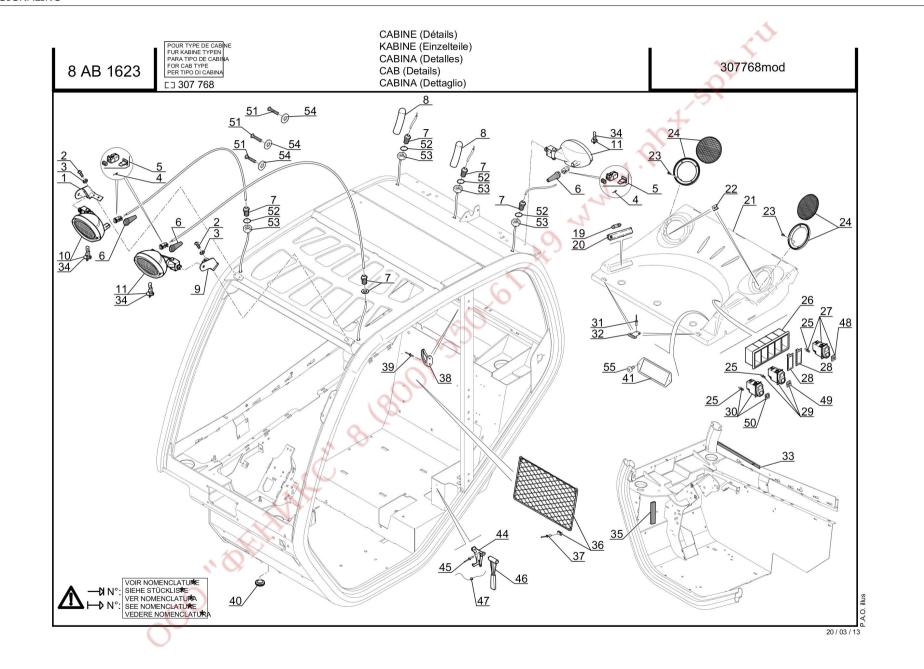





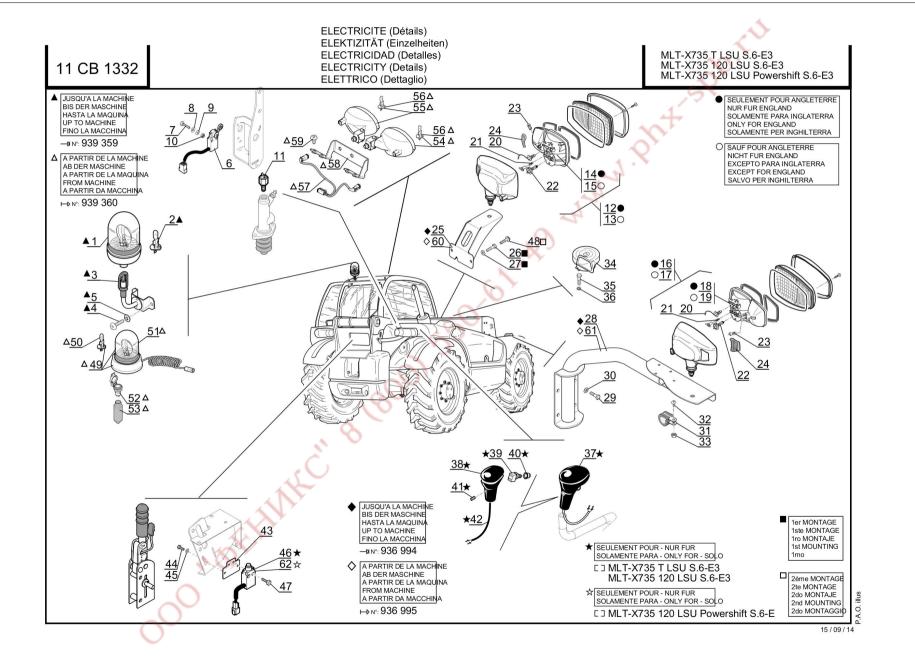


\_SWITCH

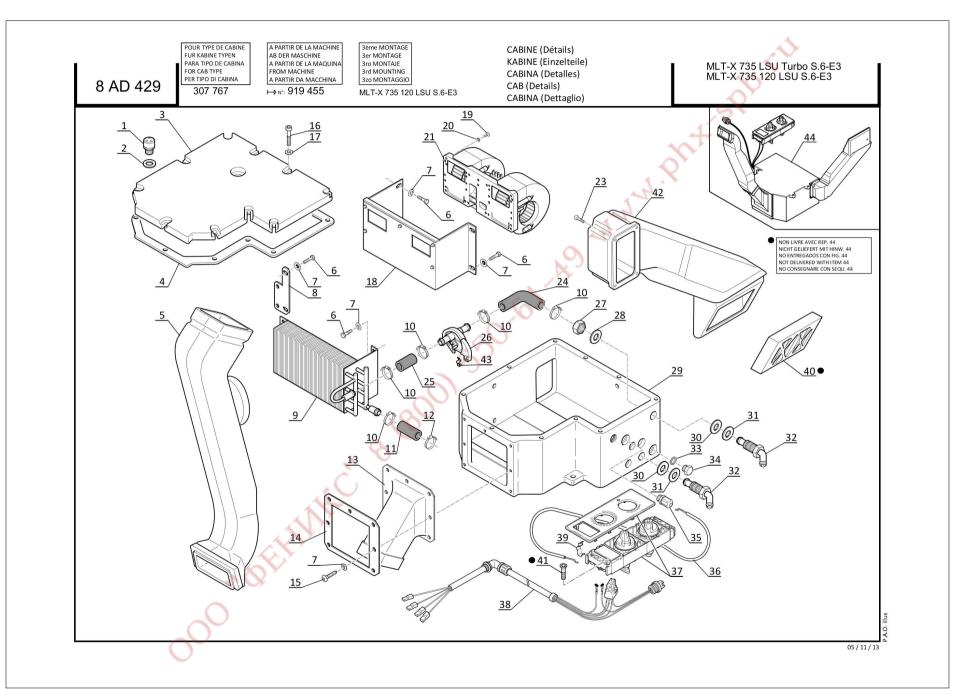


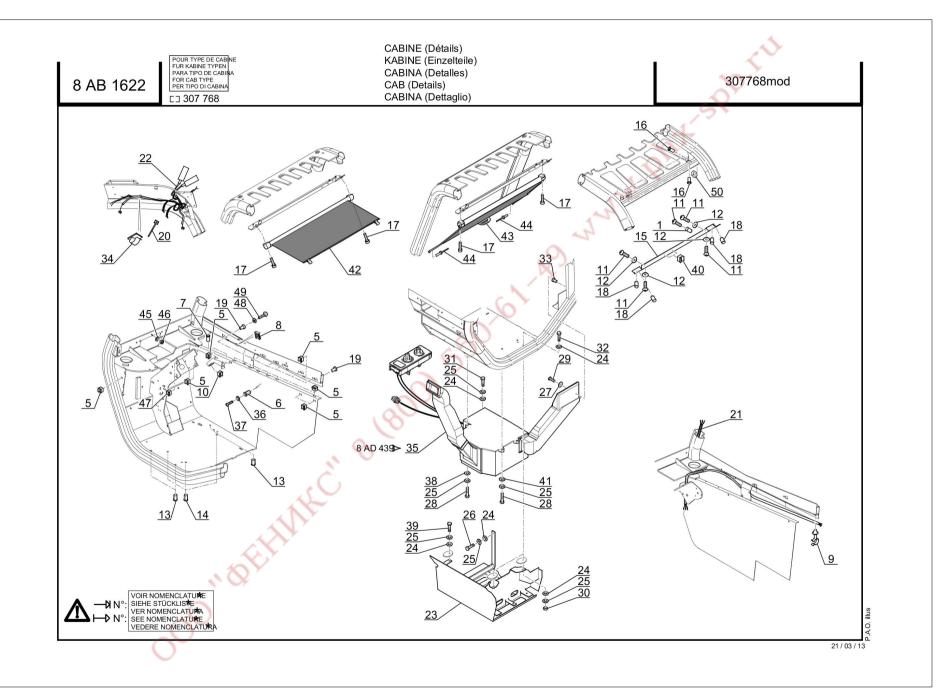


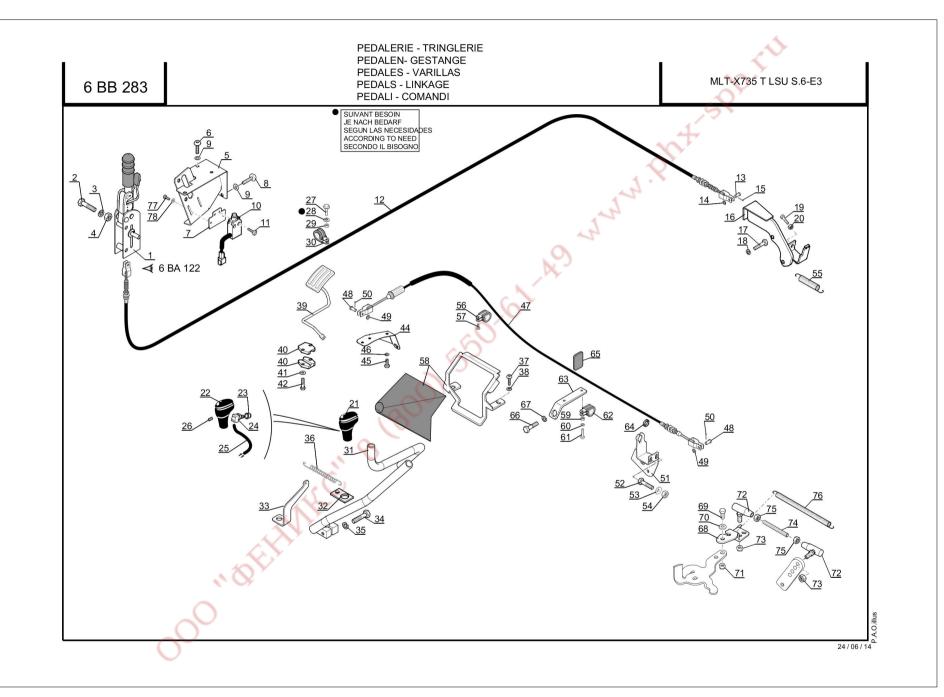


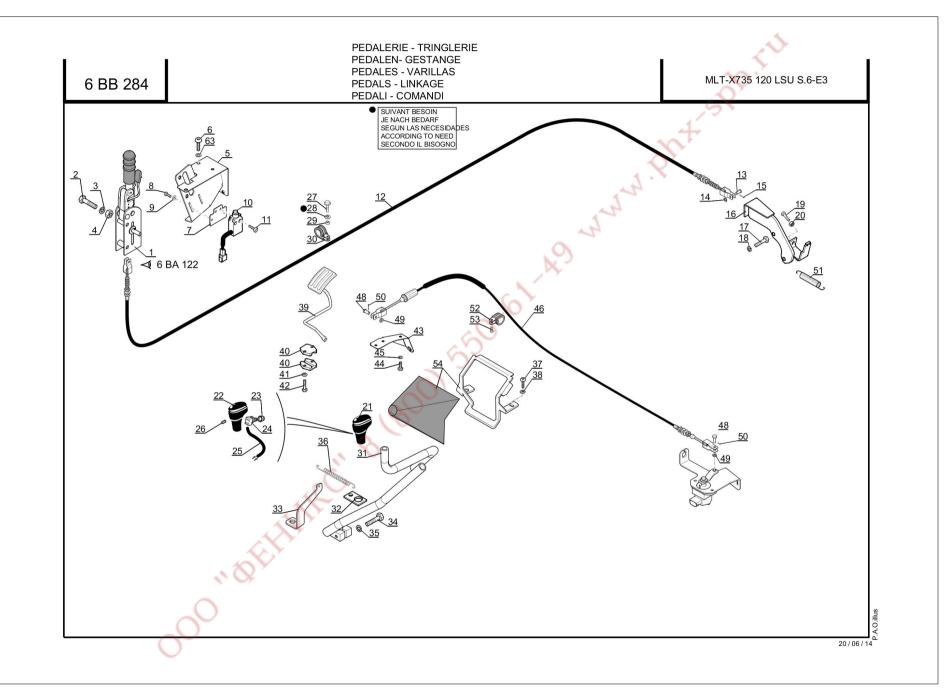





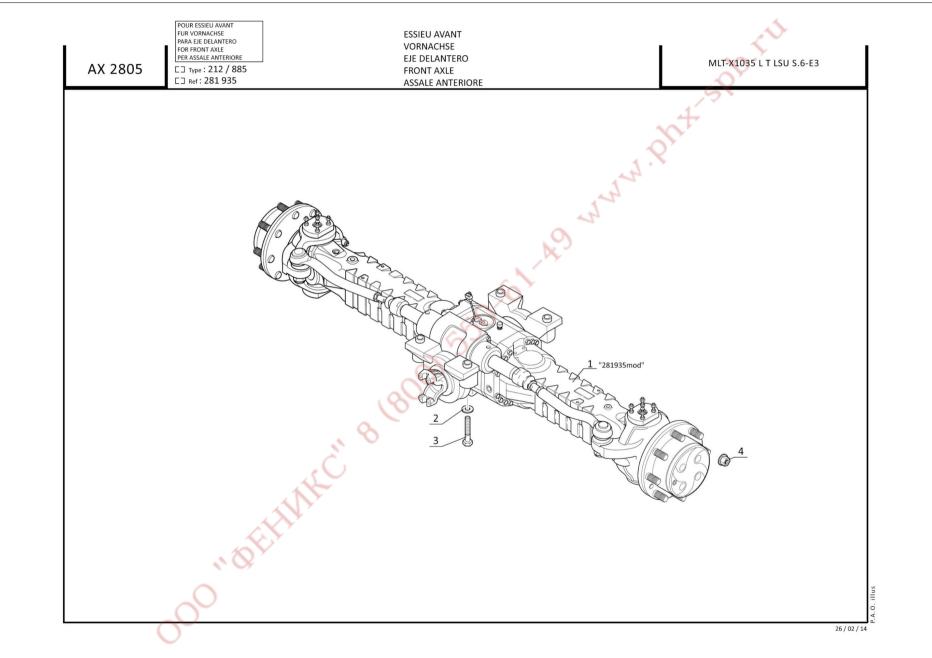


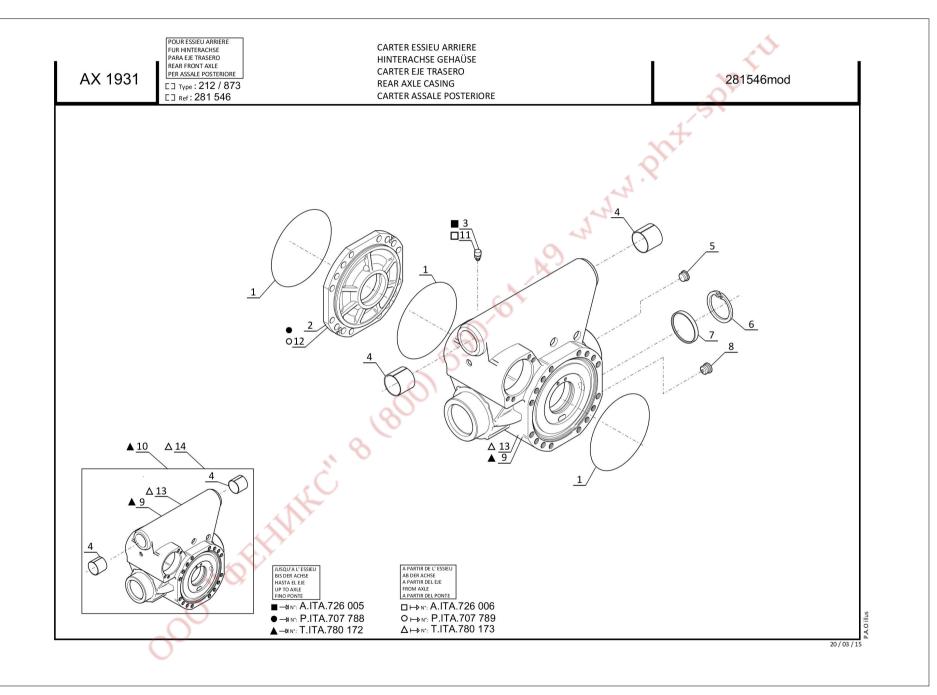


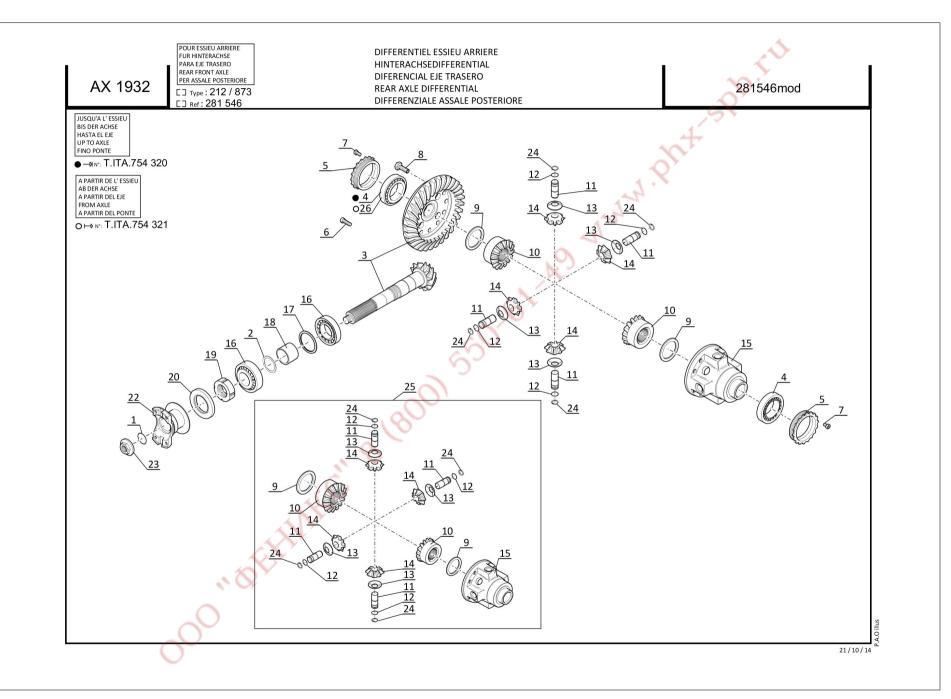


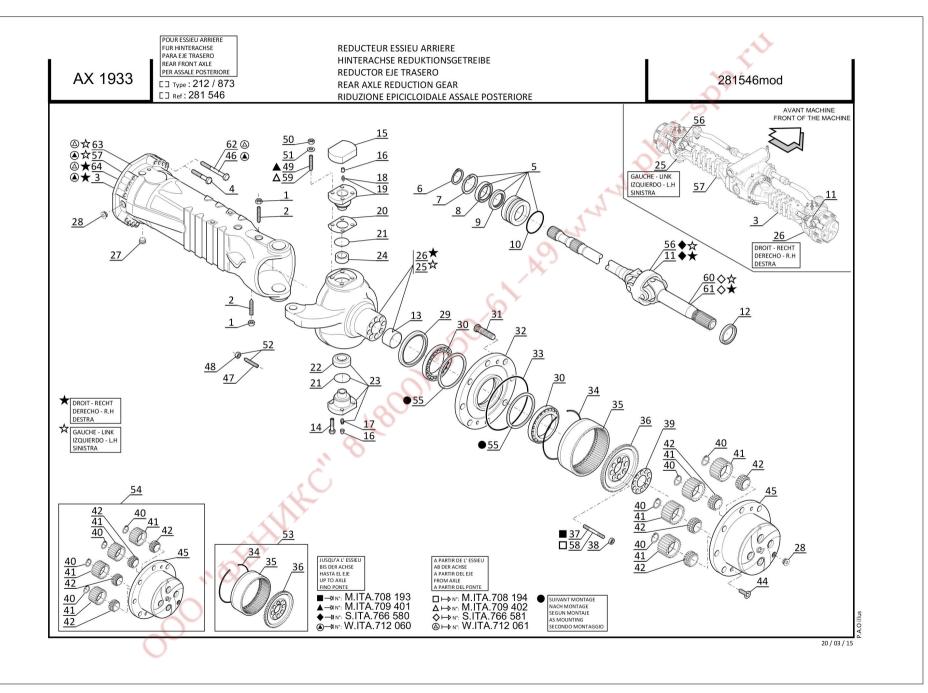

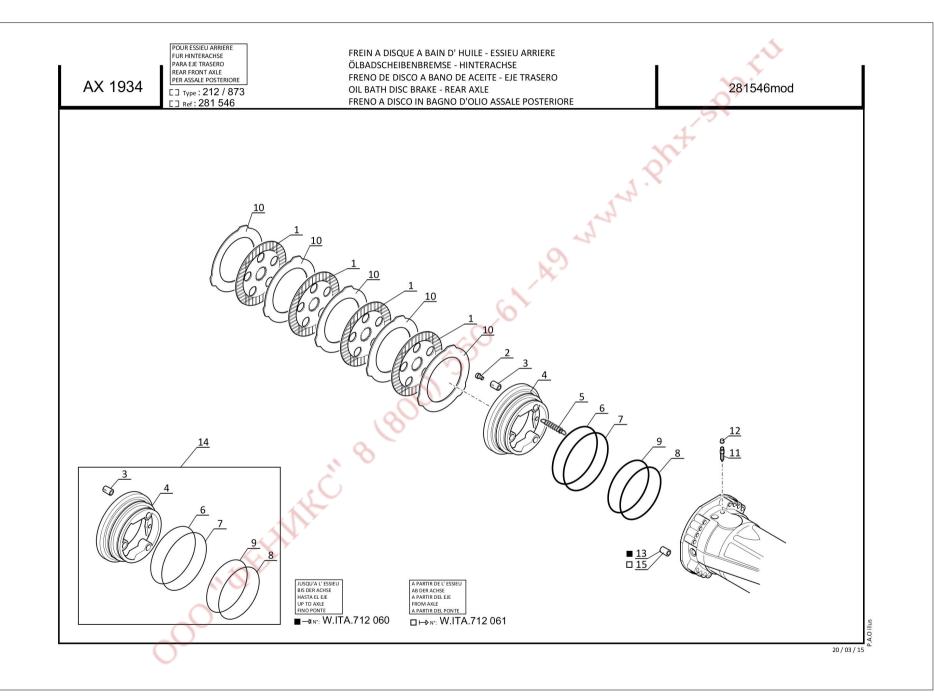


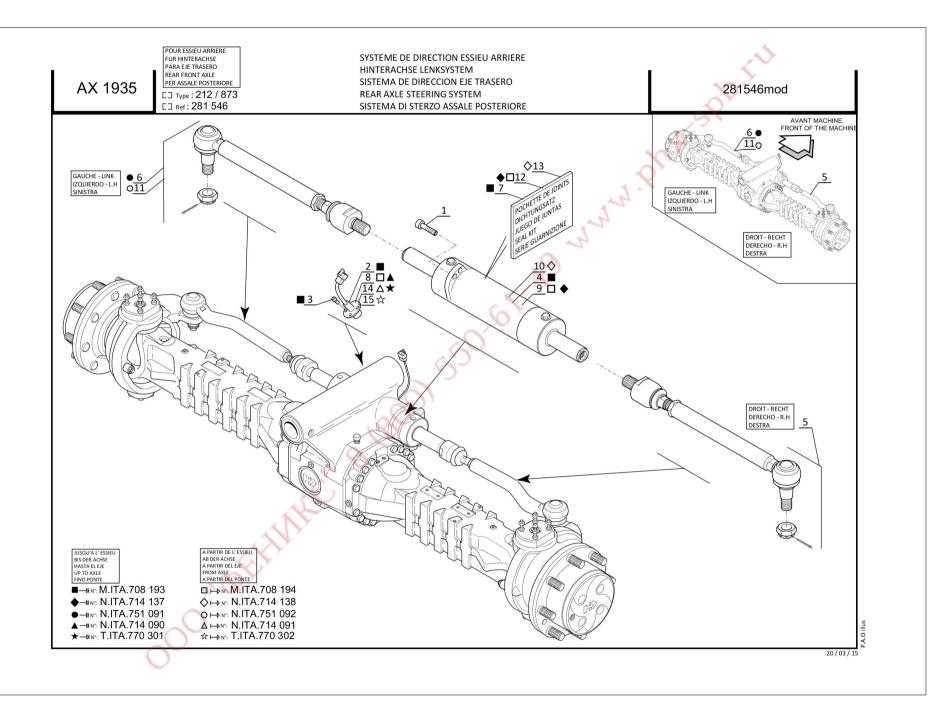


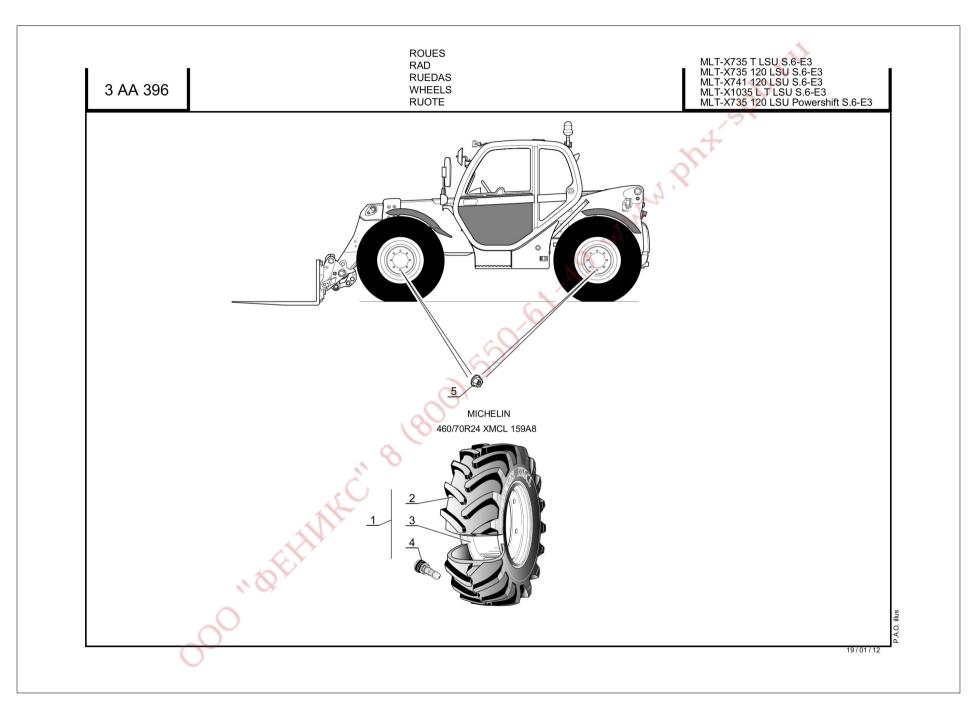


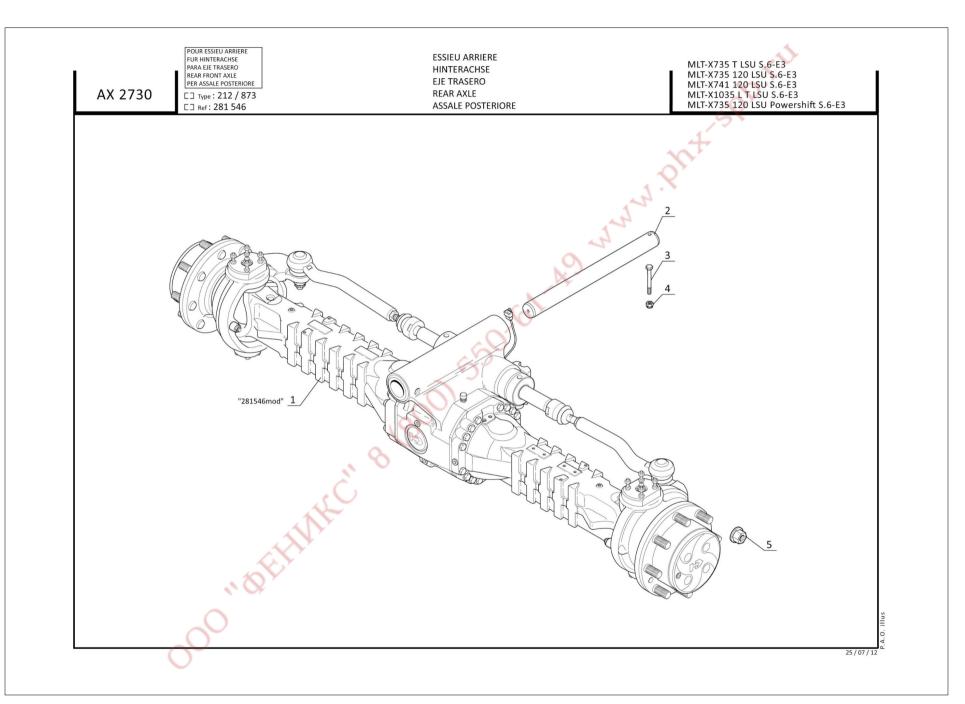


\_FRONT

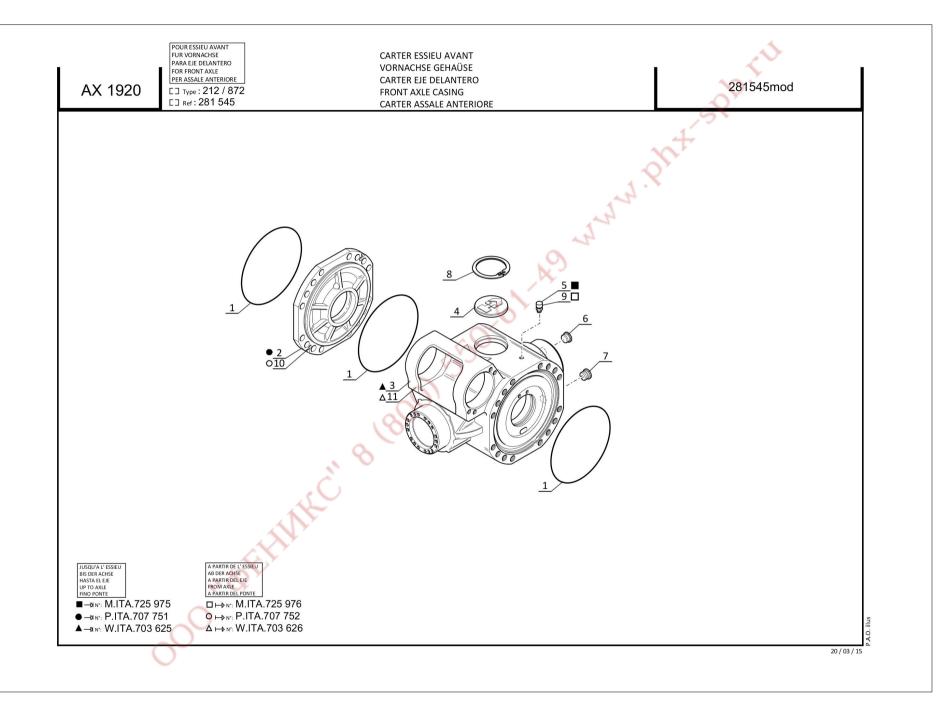


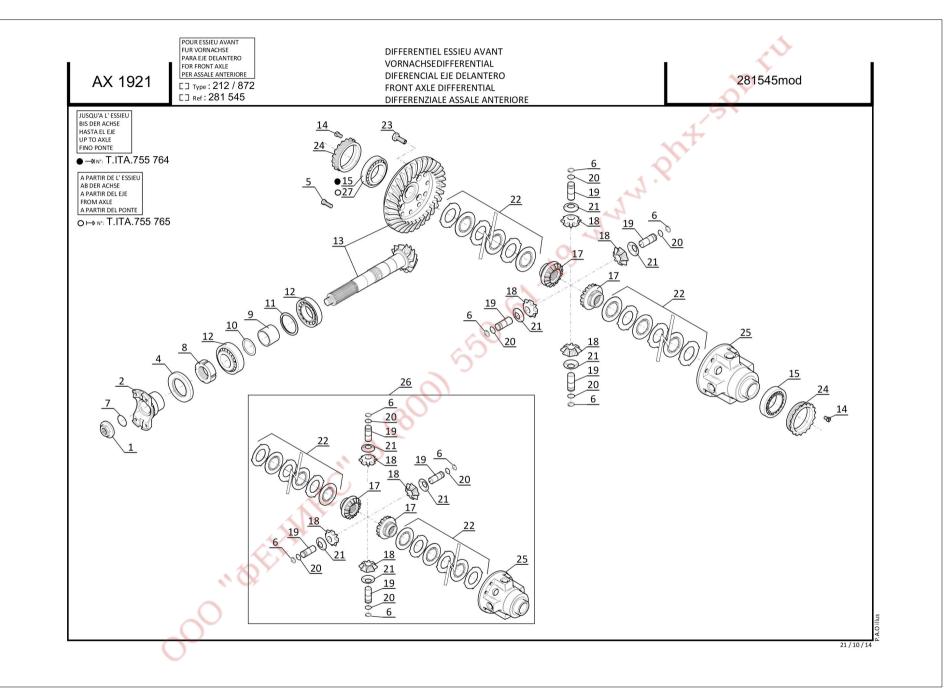

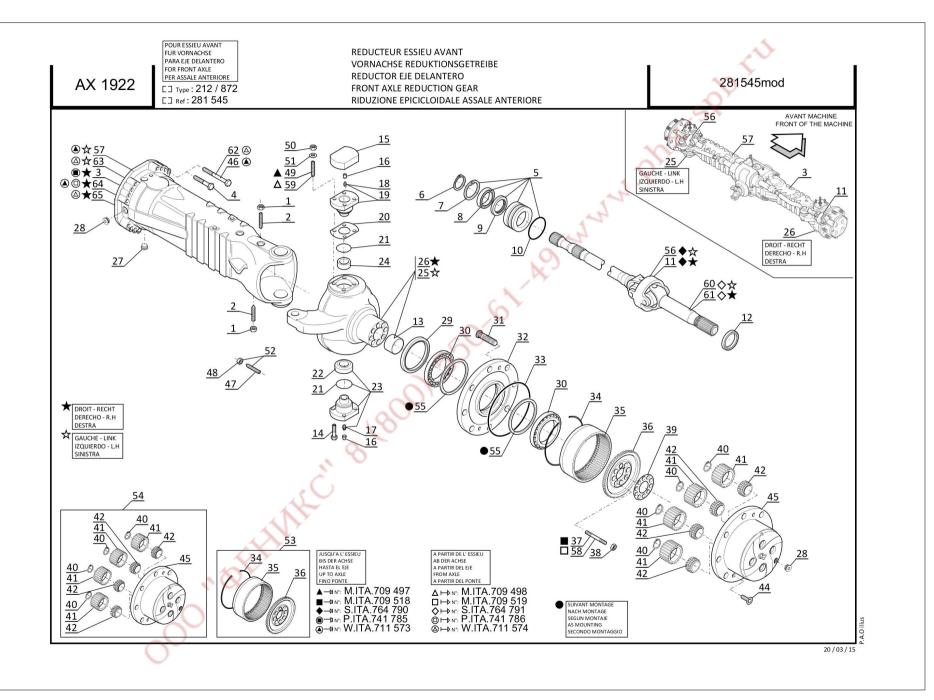


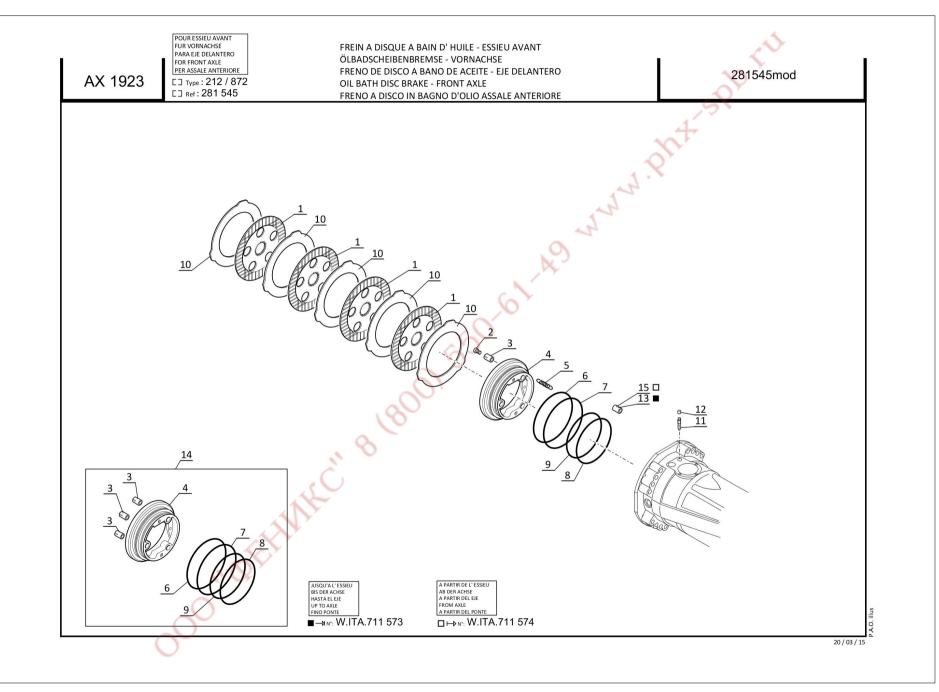


\_FRONT

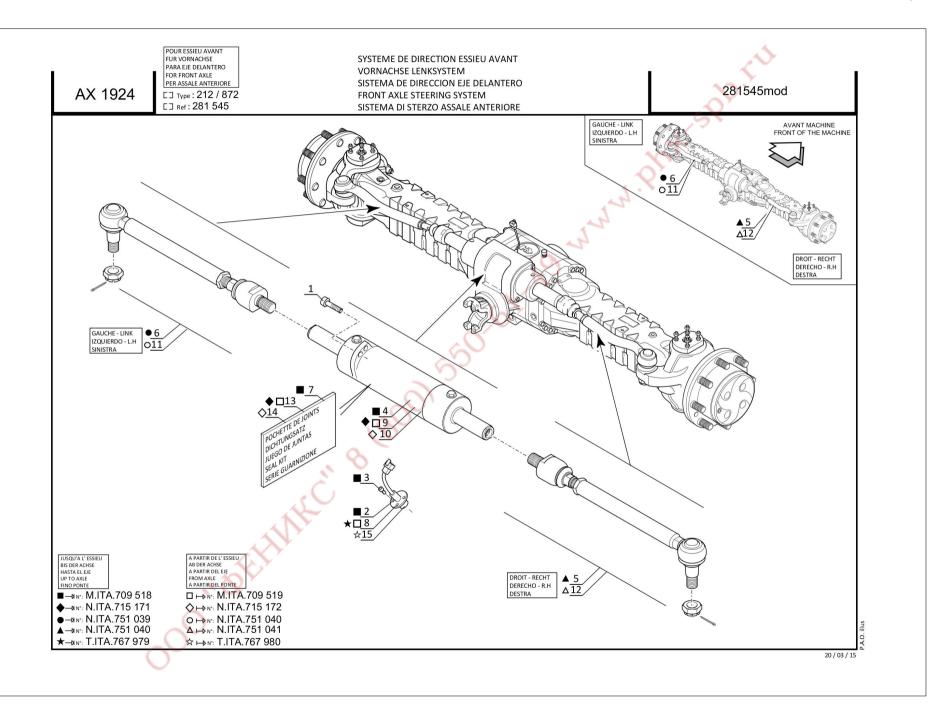


\_FRONT

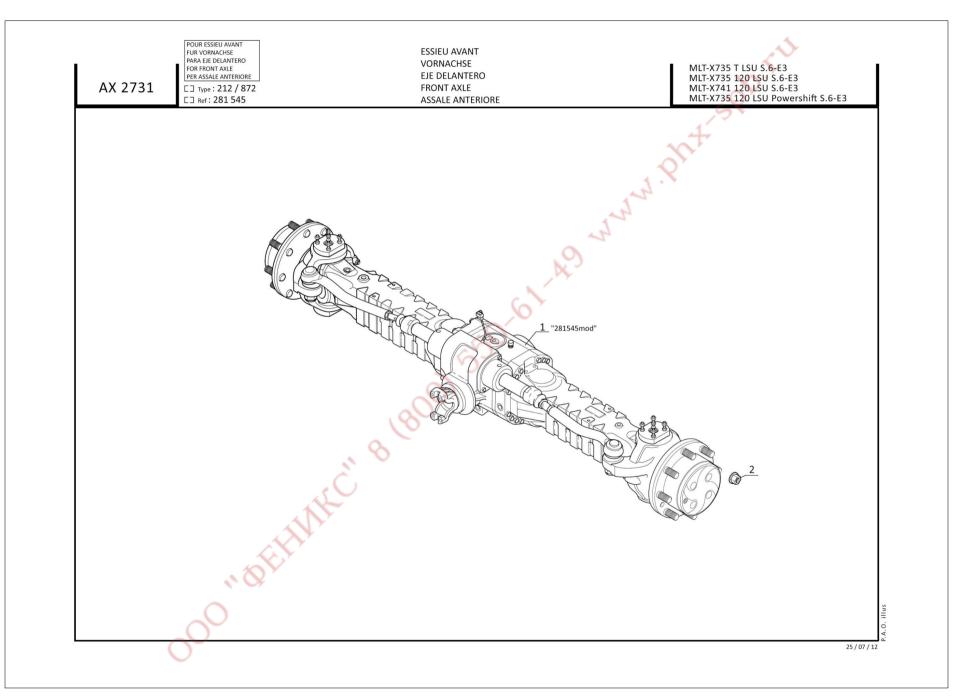





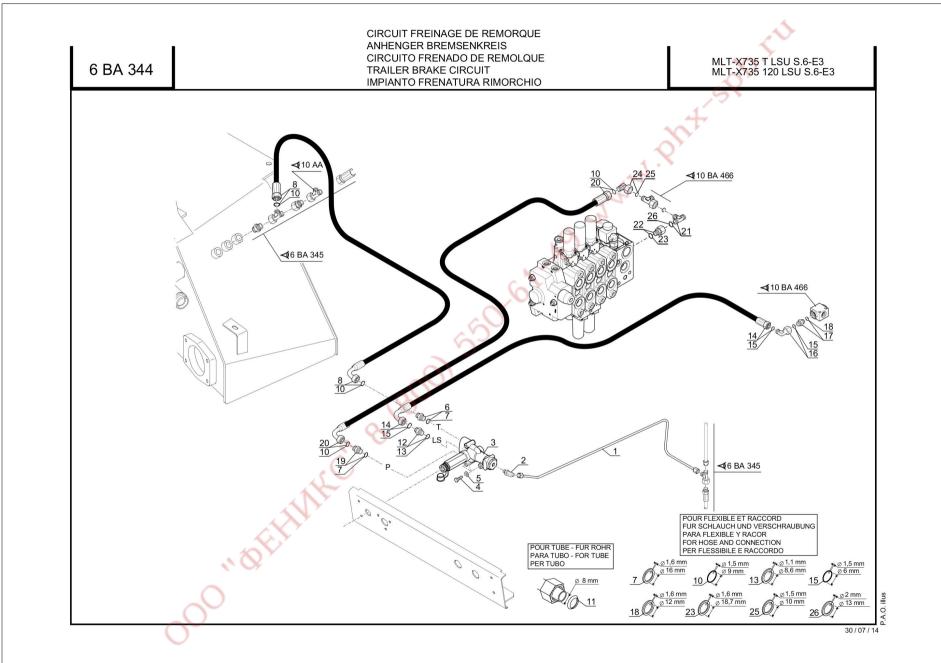



### \_\_ATTACHMENT

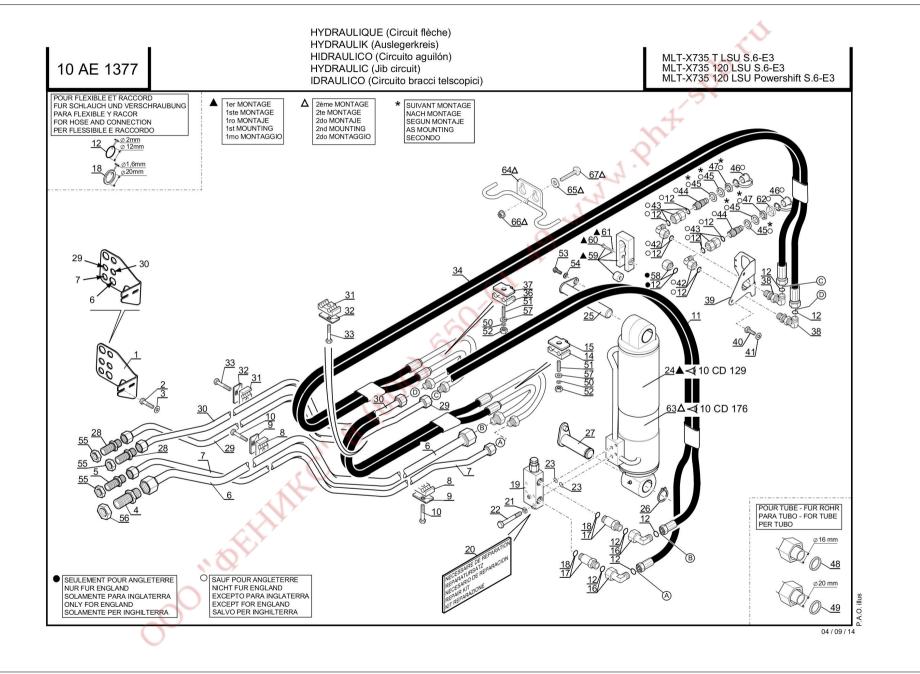


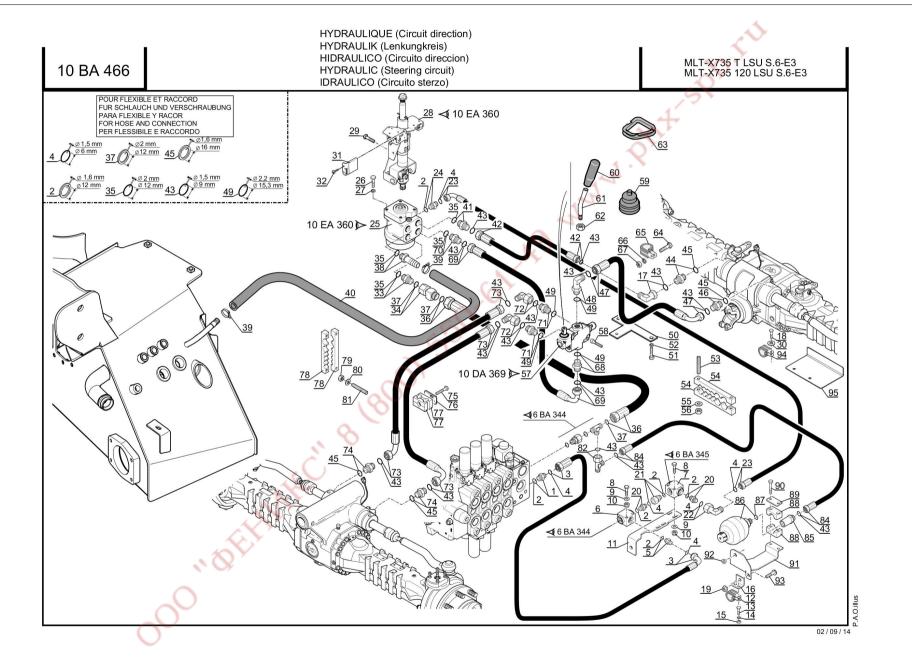


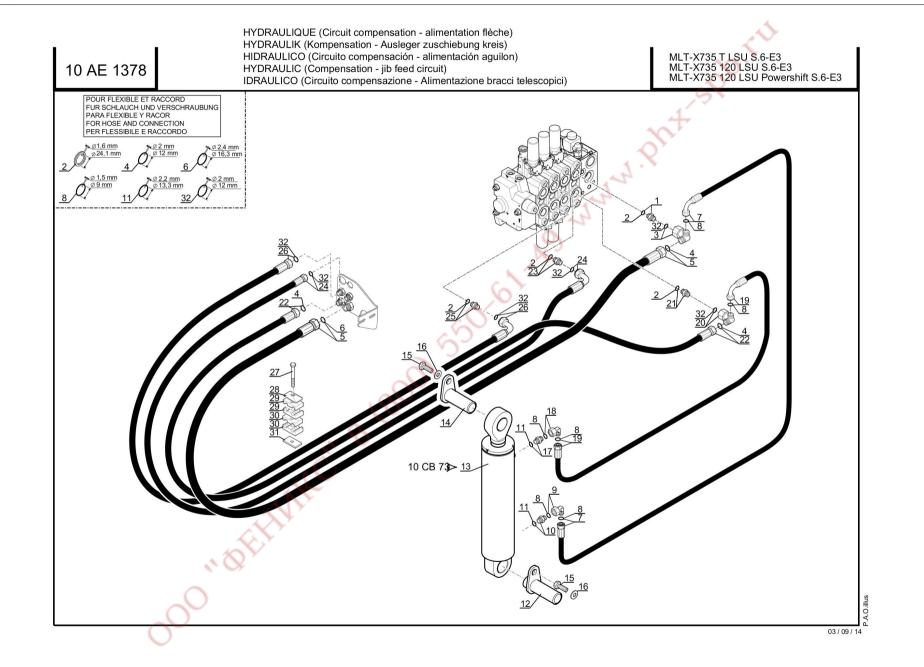

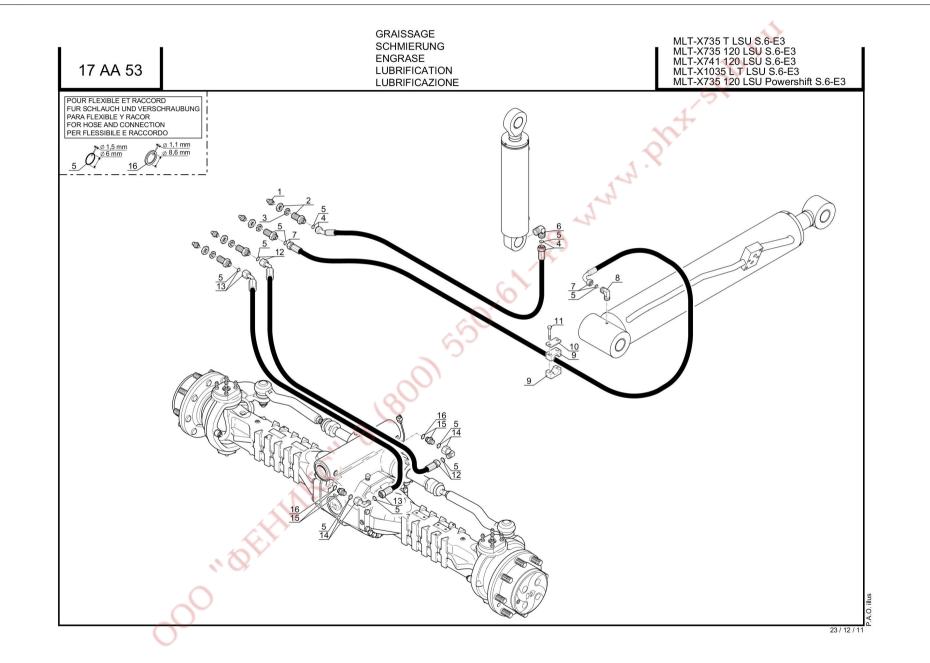


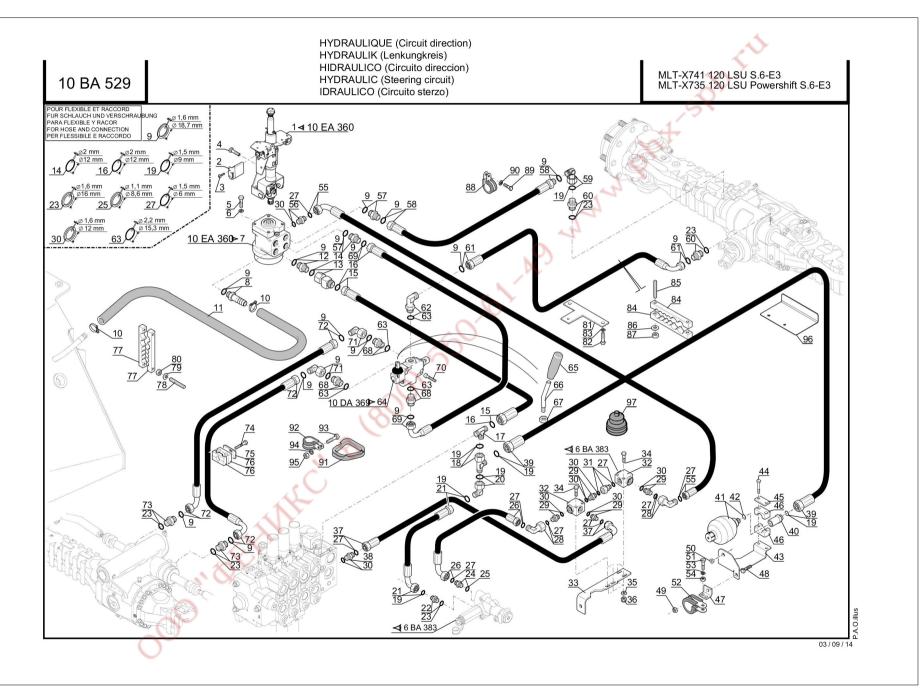

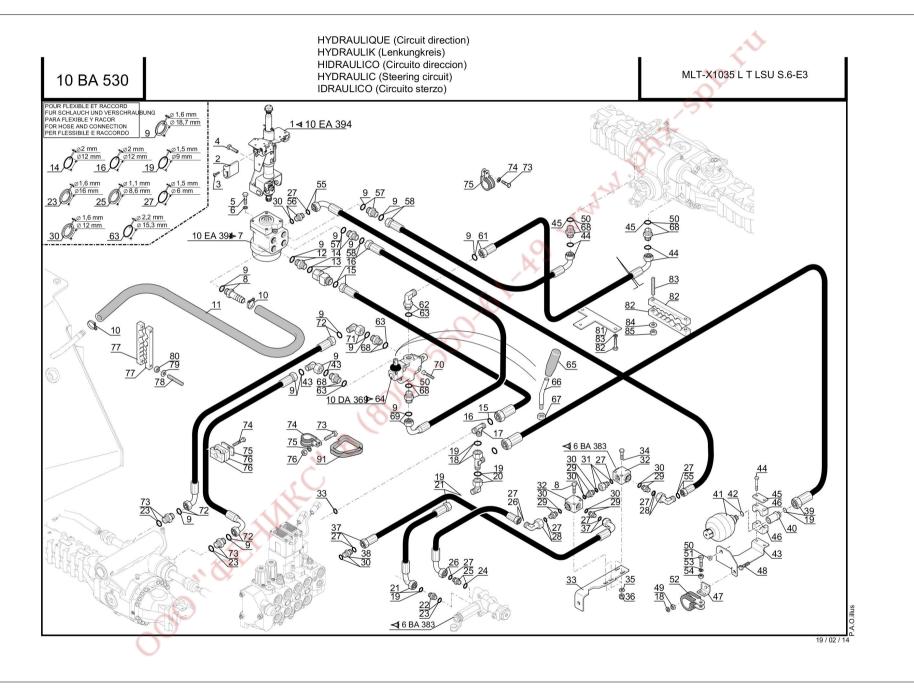


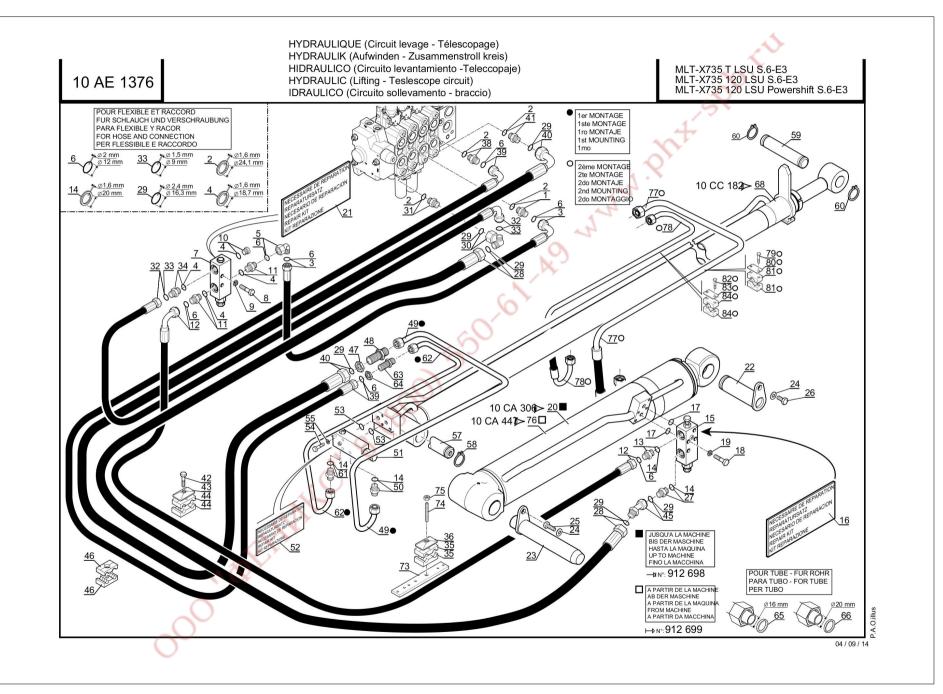


# CENTRALISED GREASING

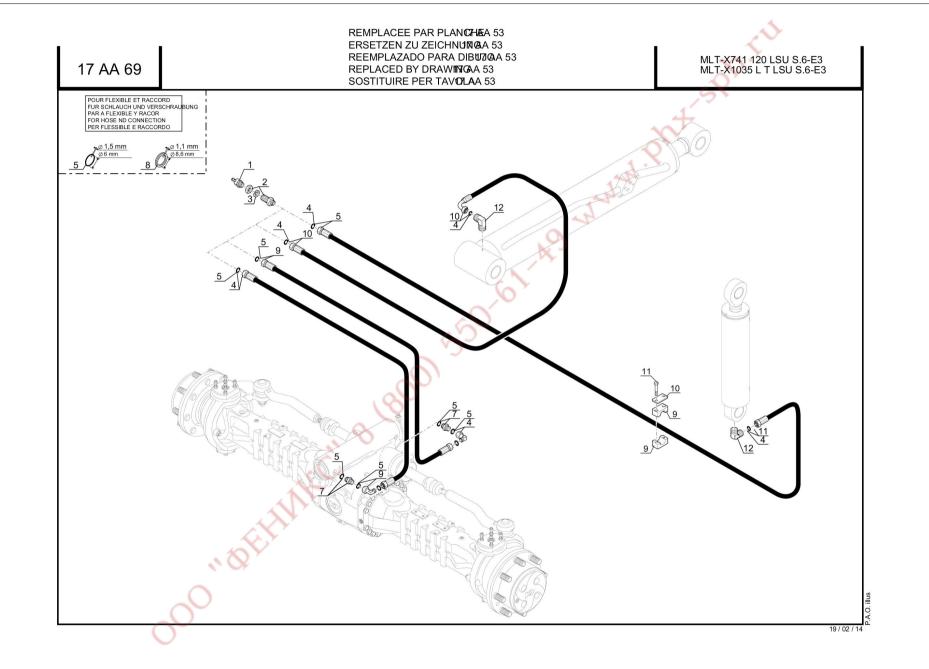


# CENTRALISED GREASING

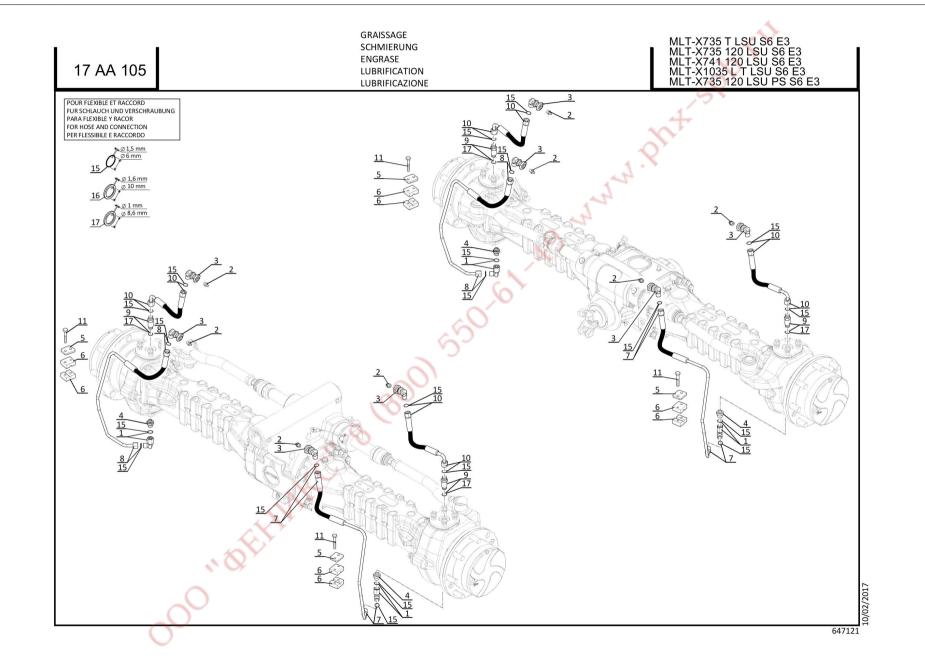


\_\_\_MAIN

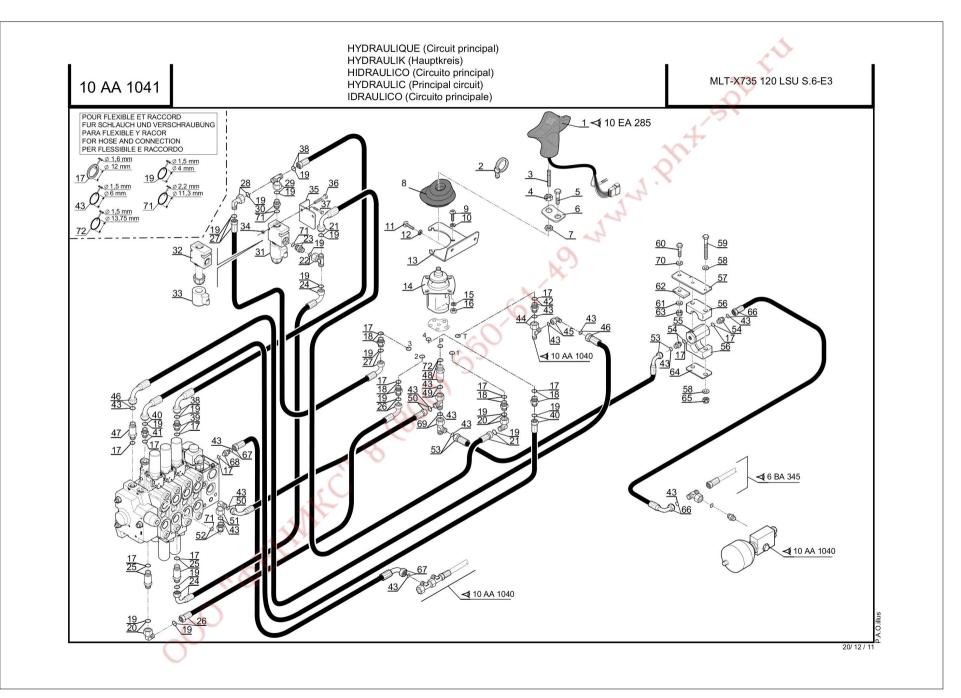





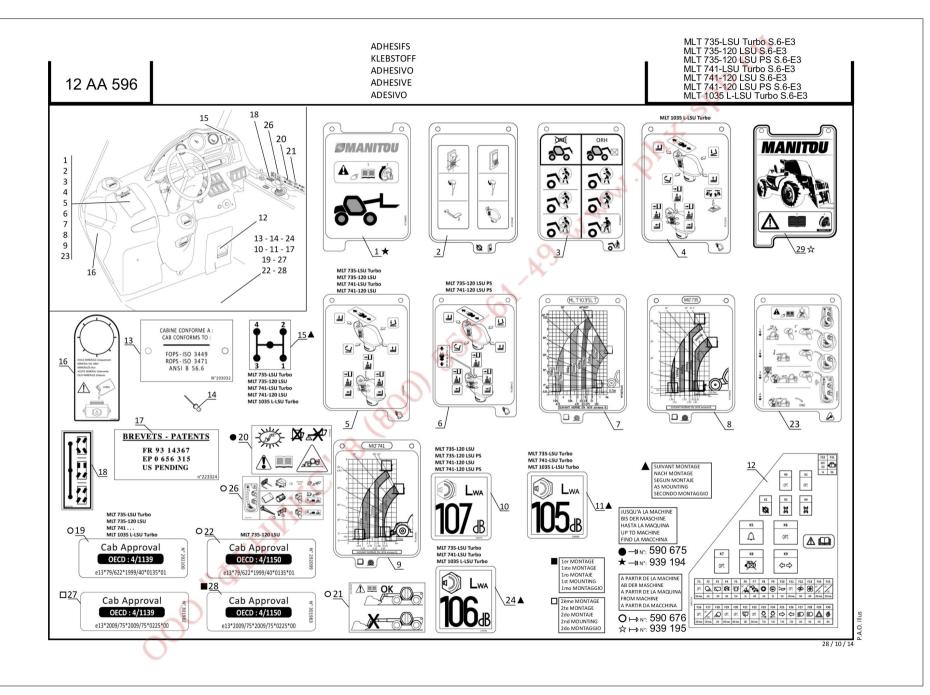


DETAIL

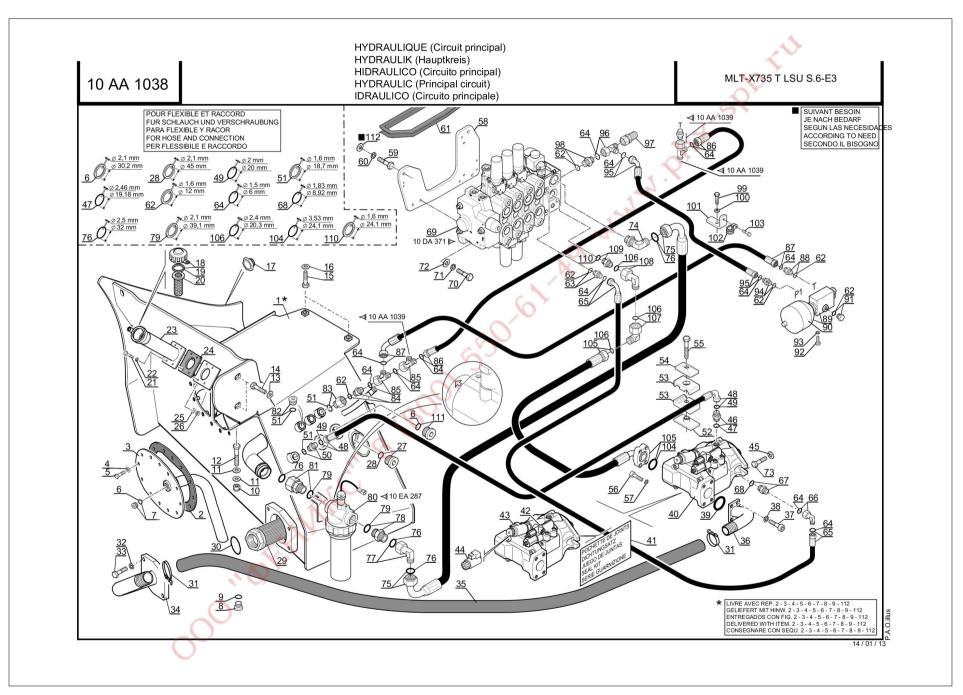


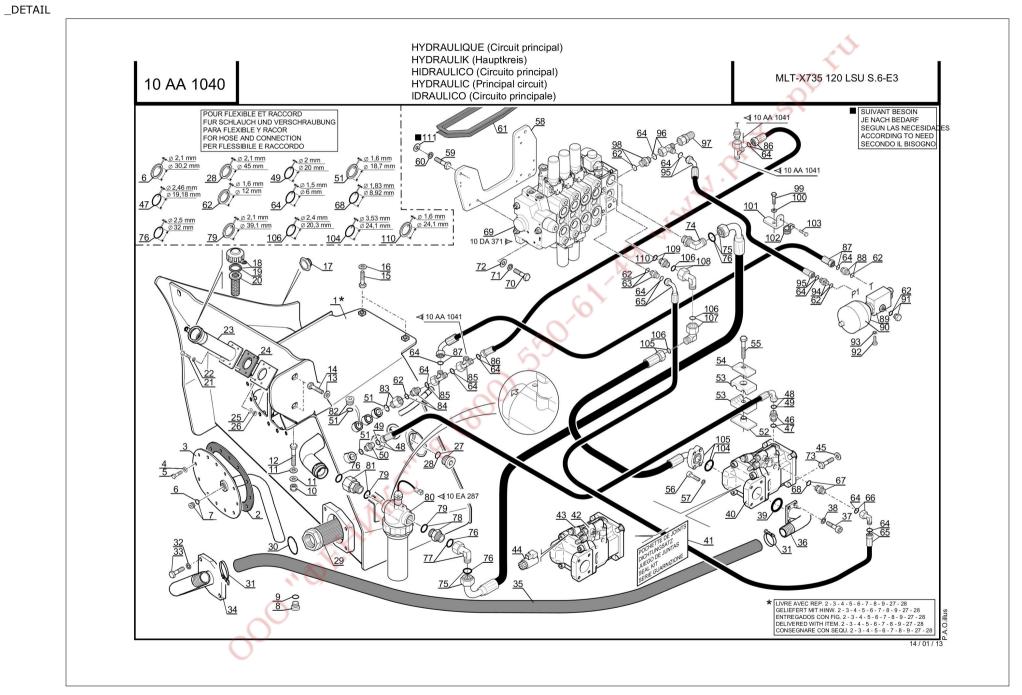


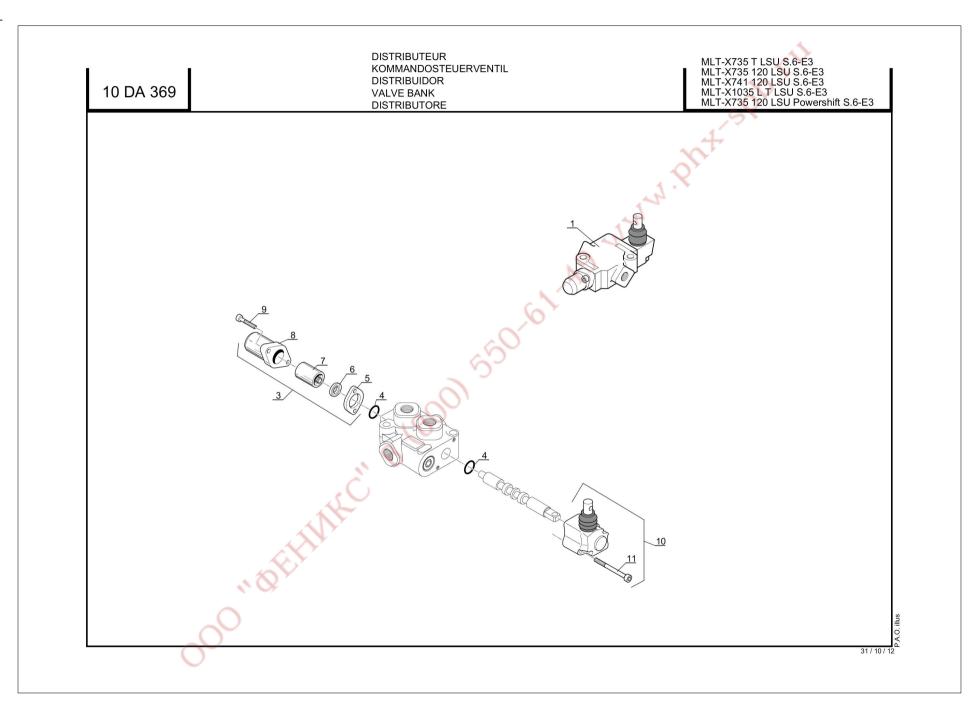


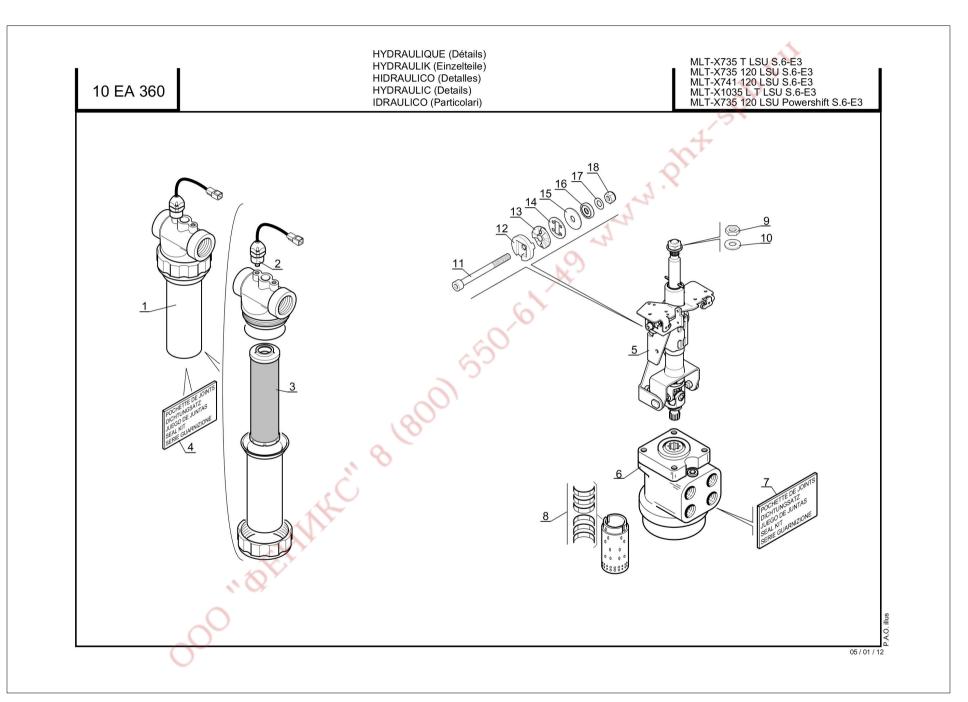




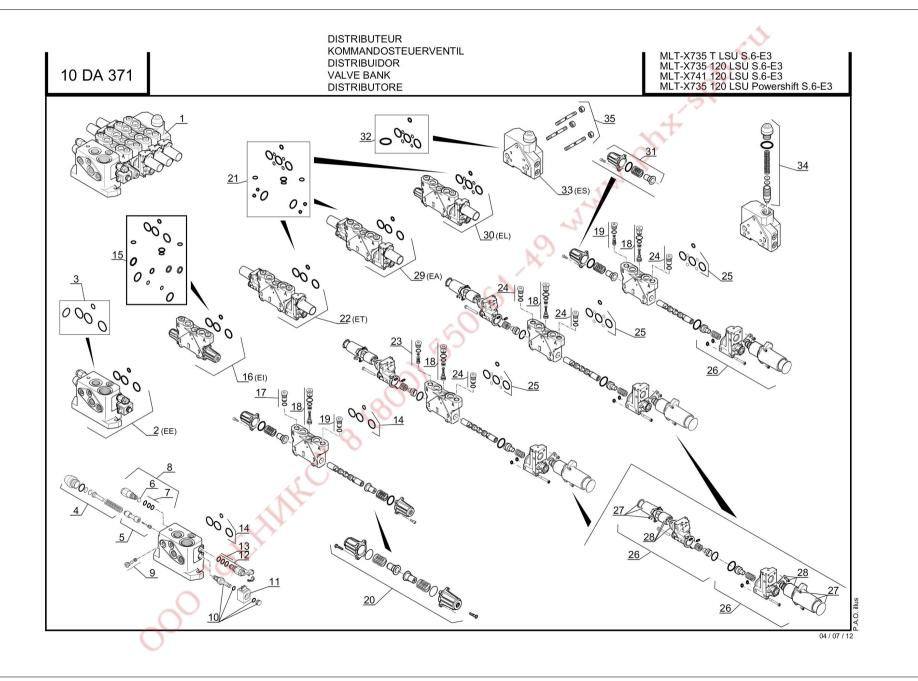


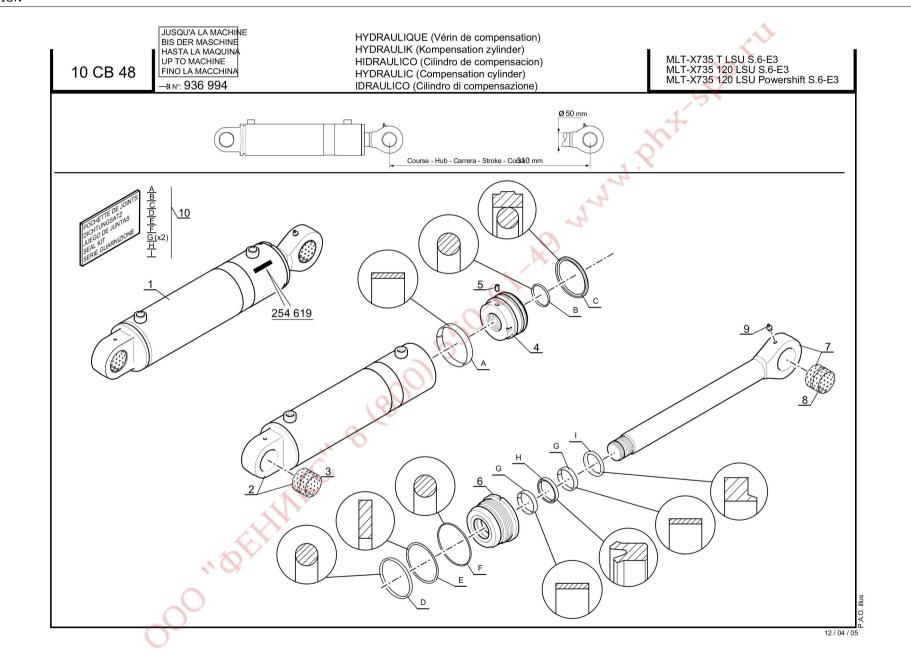


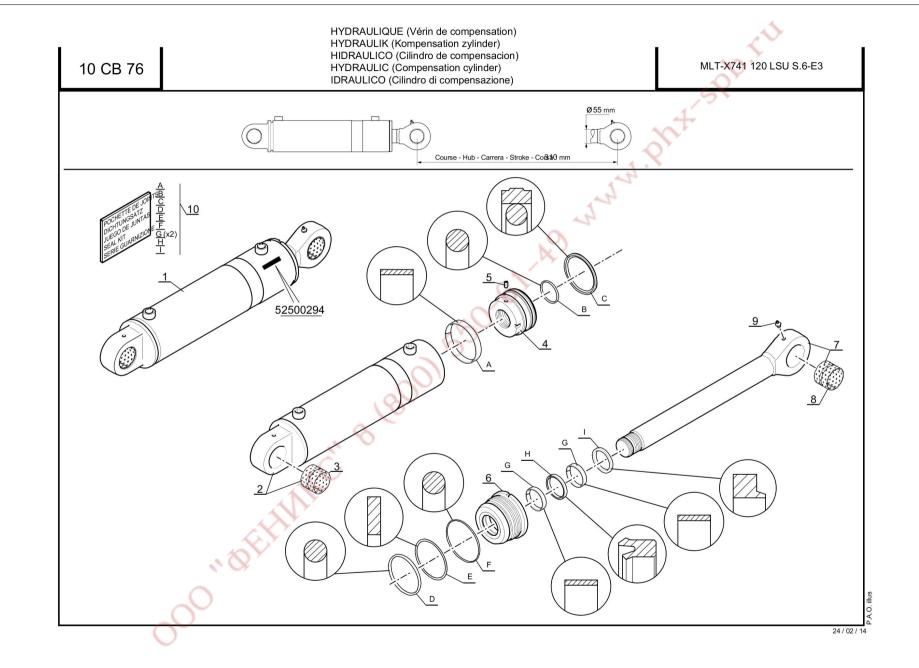

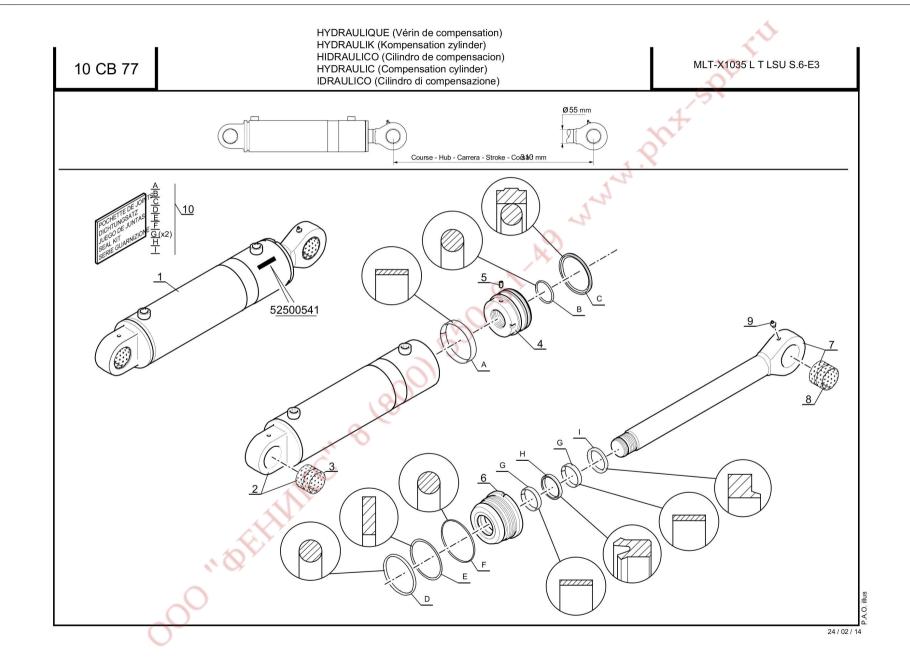


\_\_\_LIFTING

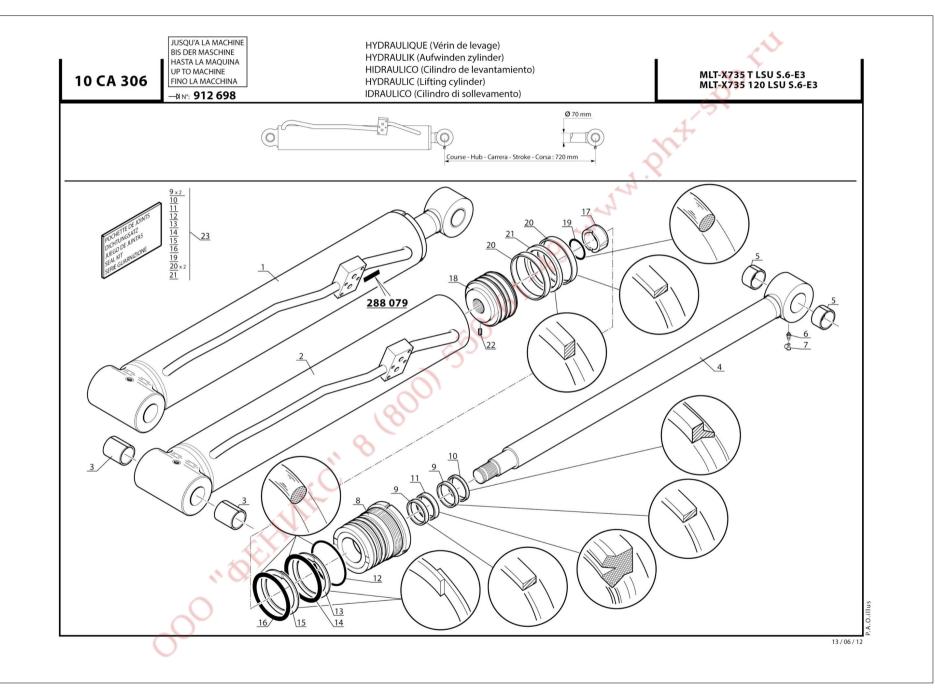

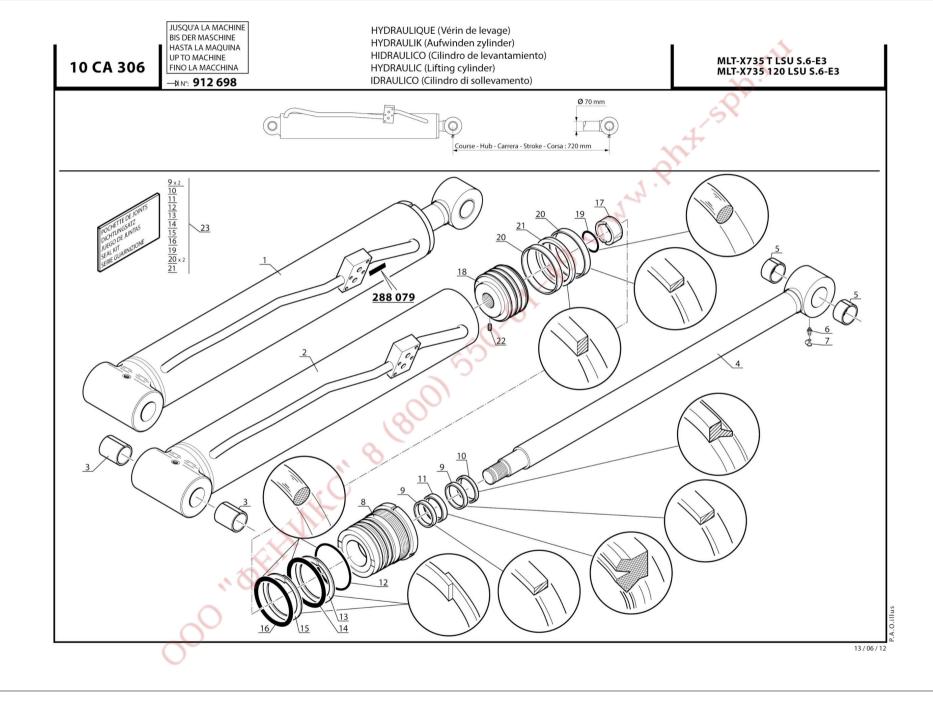



LIFTING


# изображение не существует

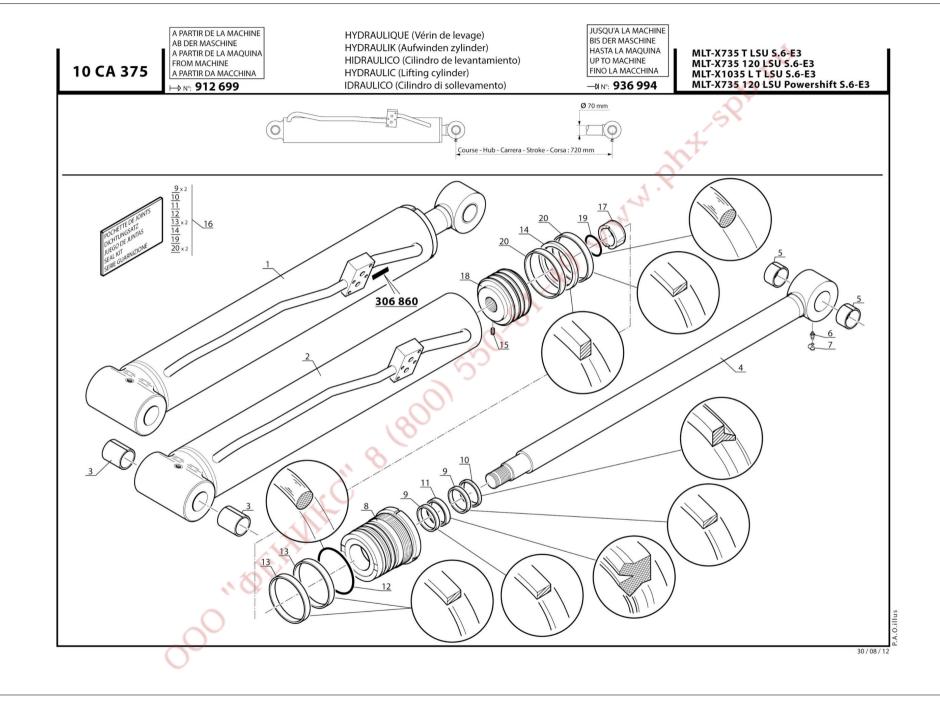


\_\_\_LIFTING

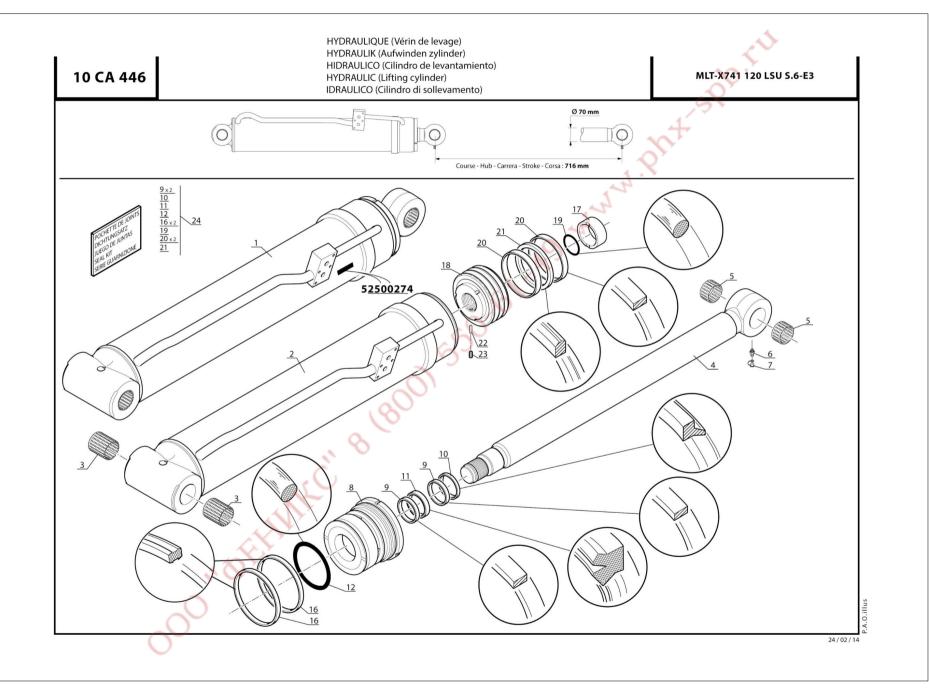


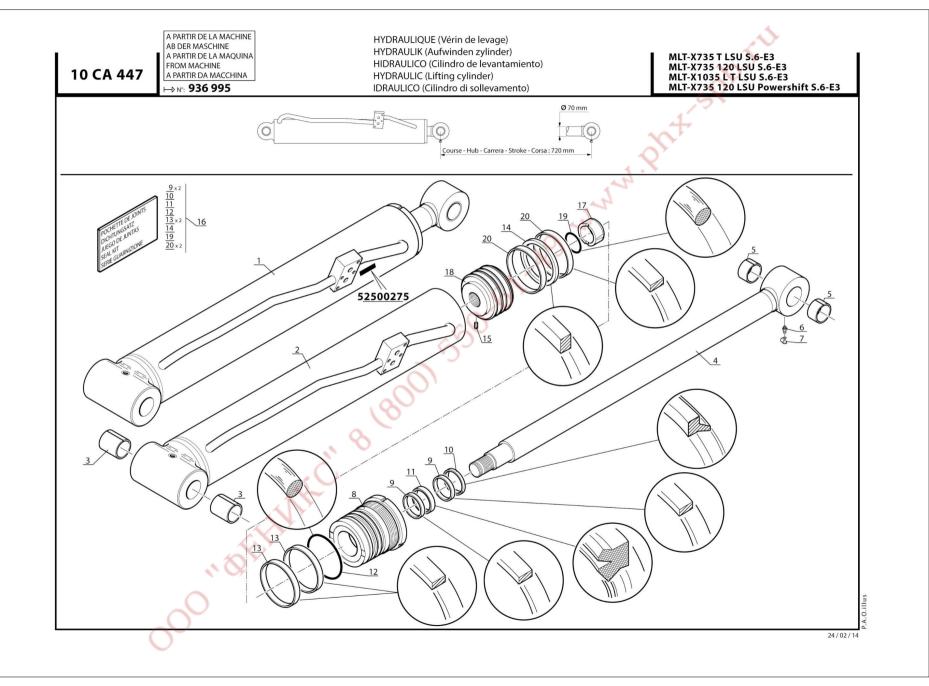


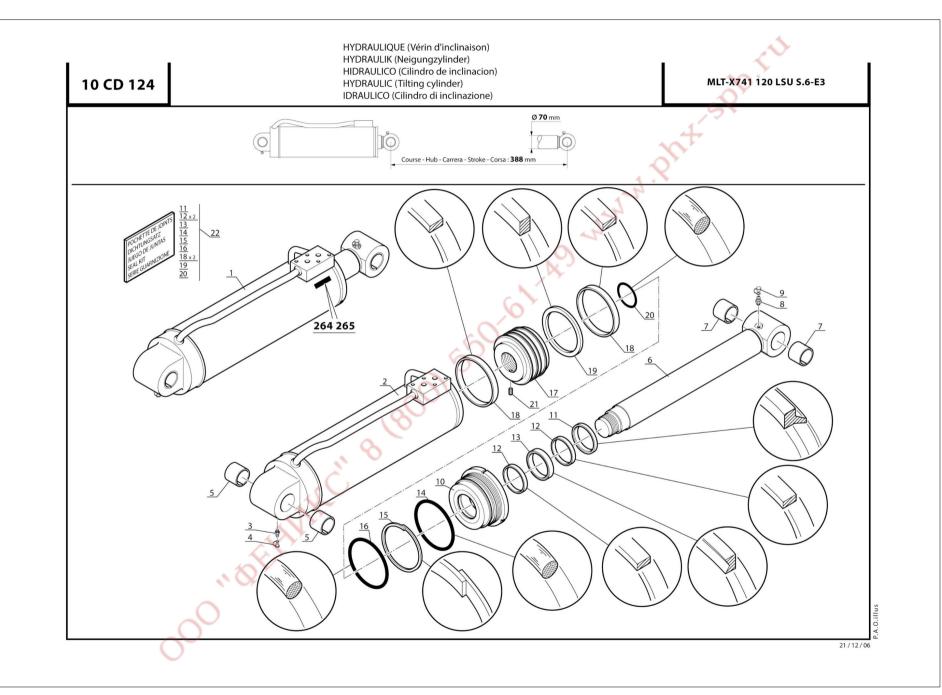

\_\_\_TILTING

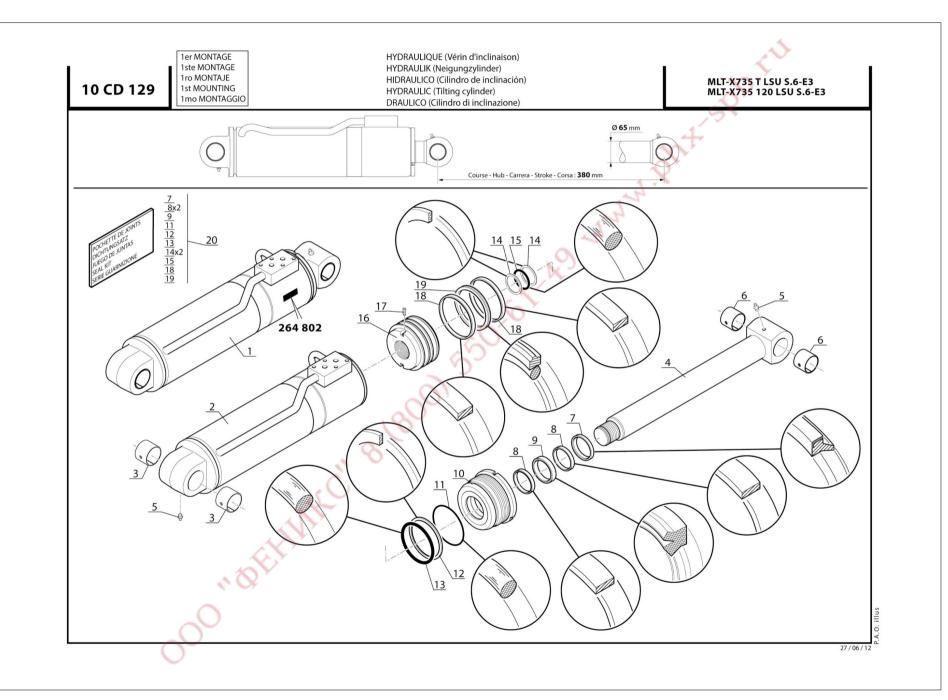


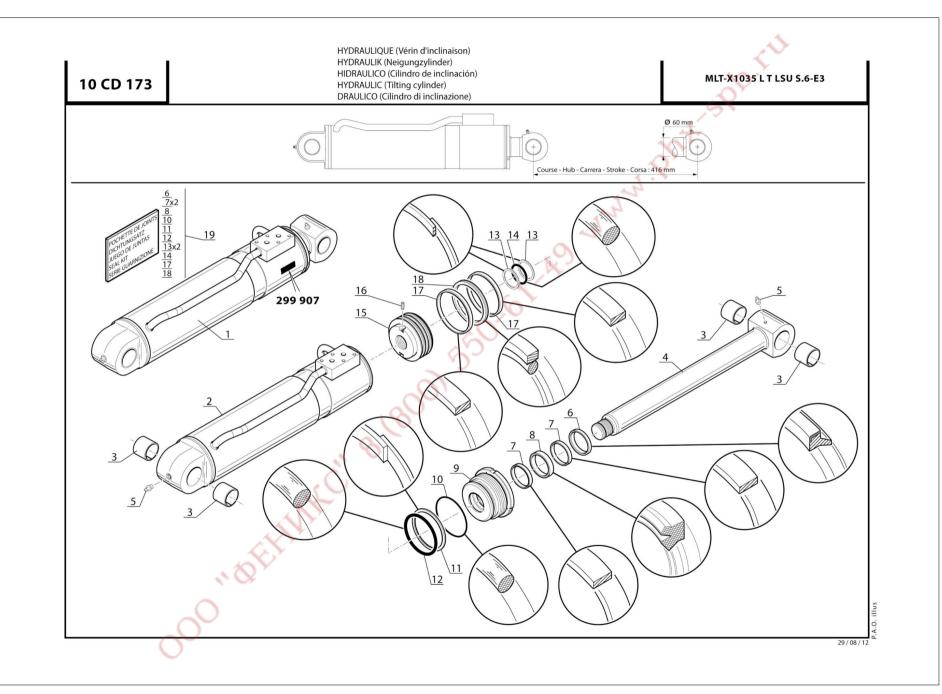

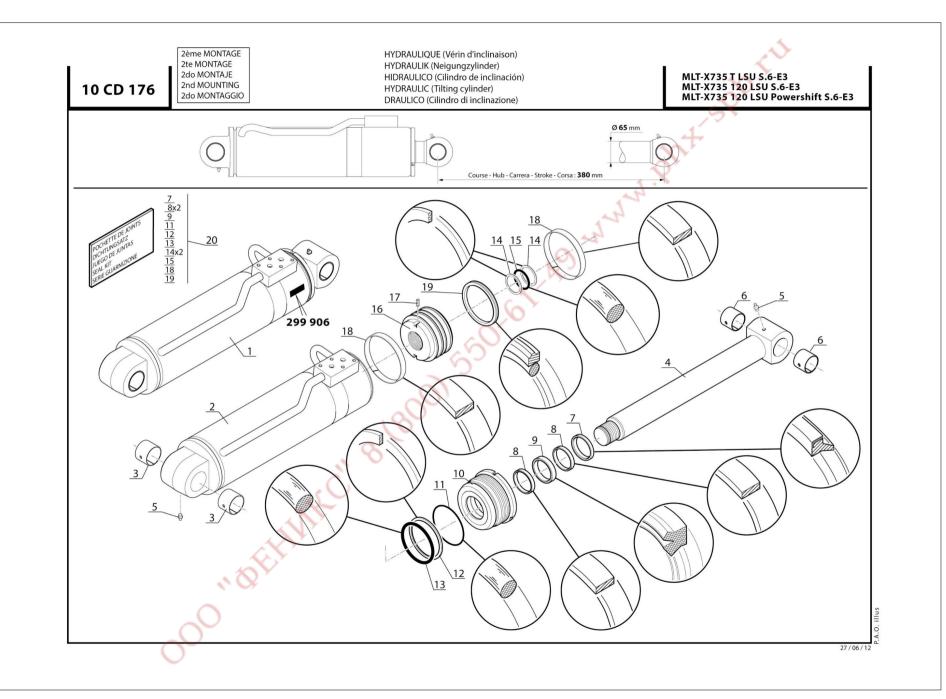



TILTING


# Изображение не существует This catalog has been printed from My-Edoc the Wed Apr 12 07:51:25 UTC 2017

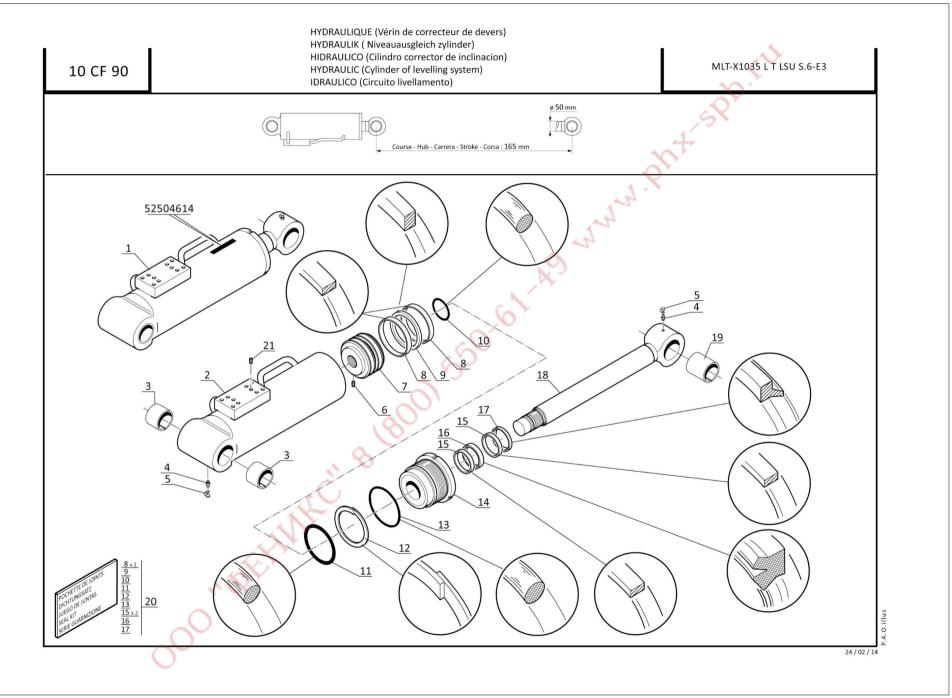



# TELESCOPING

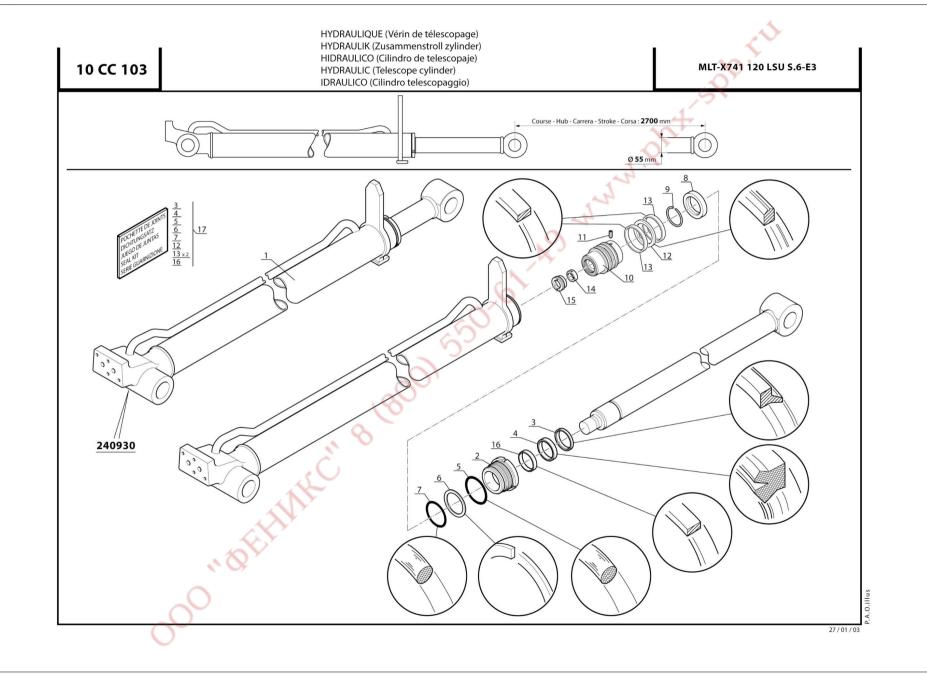

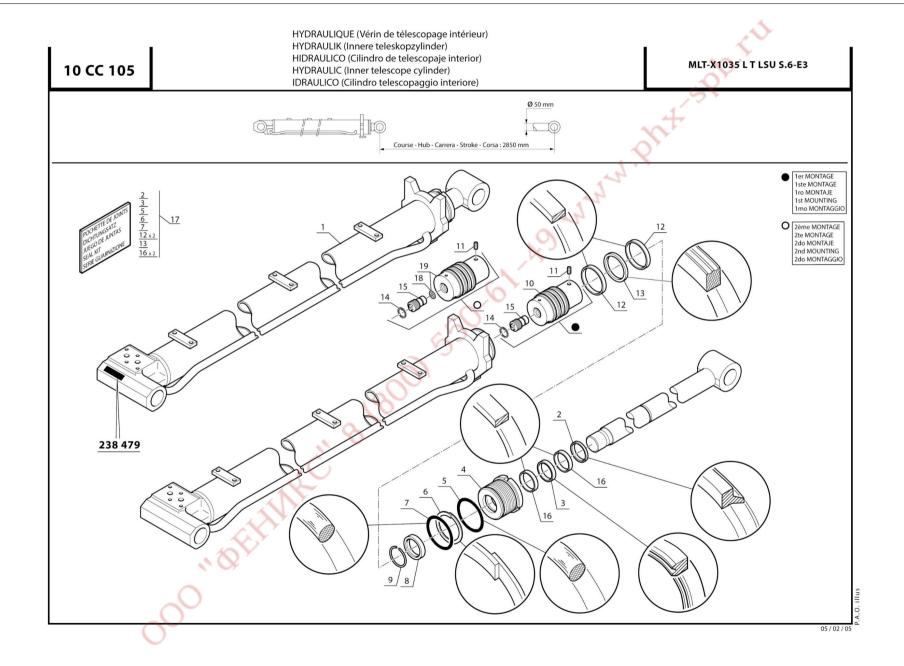


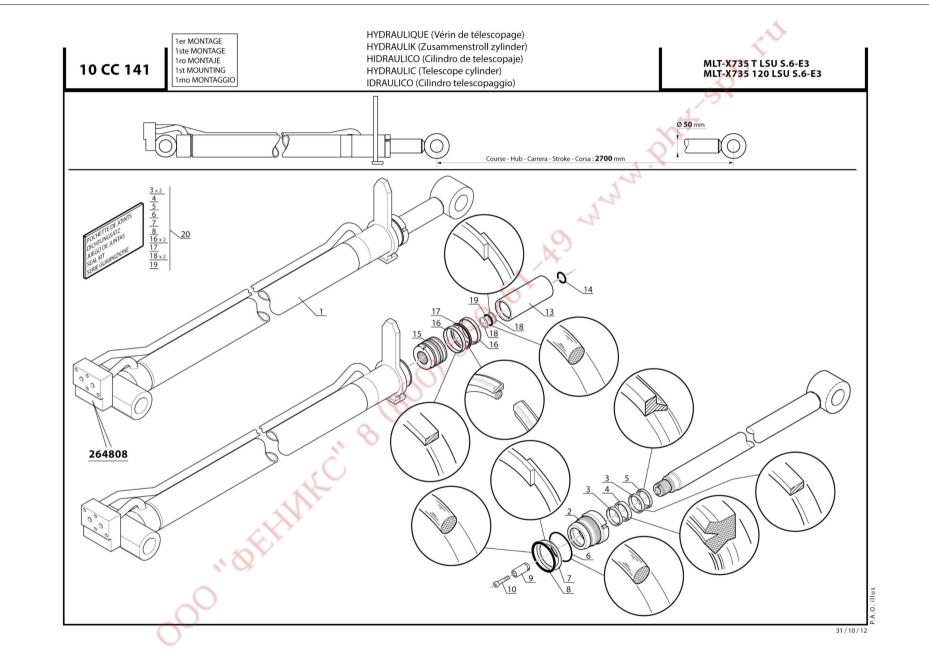

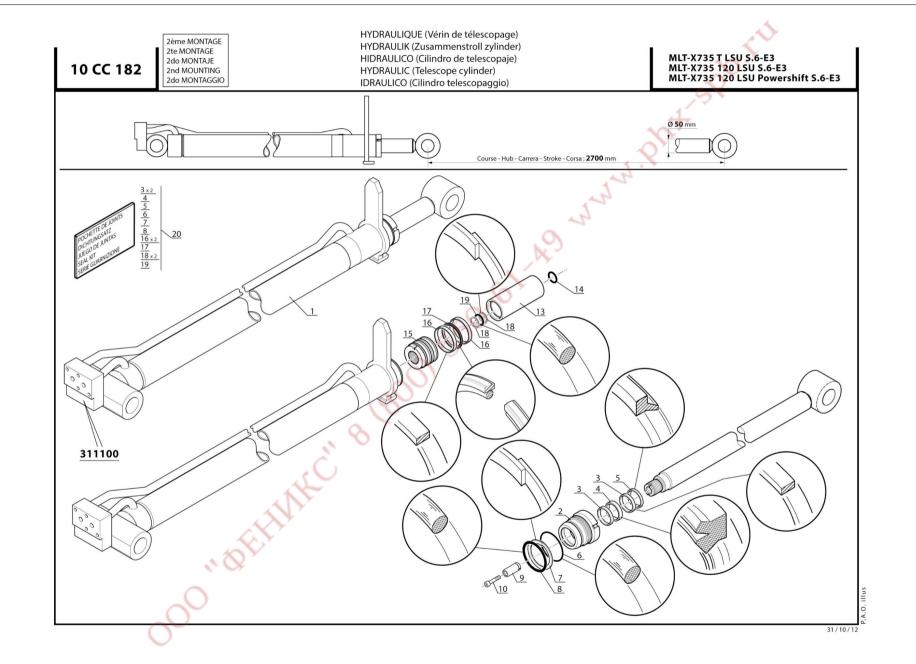


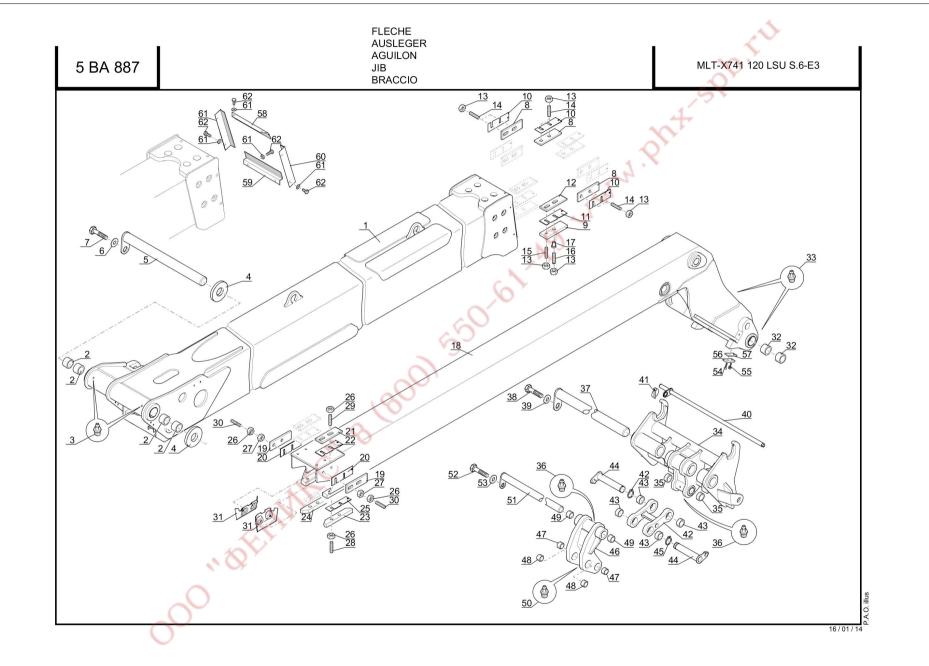



\_DETAIL

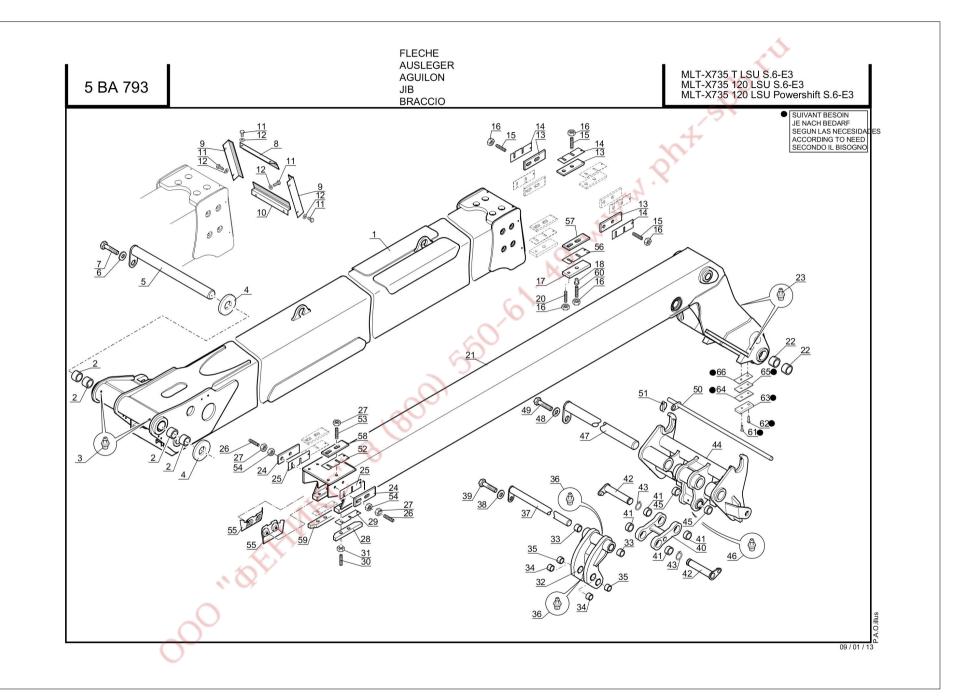



# SIMULTANEOUS TELESCOPING

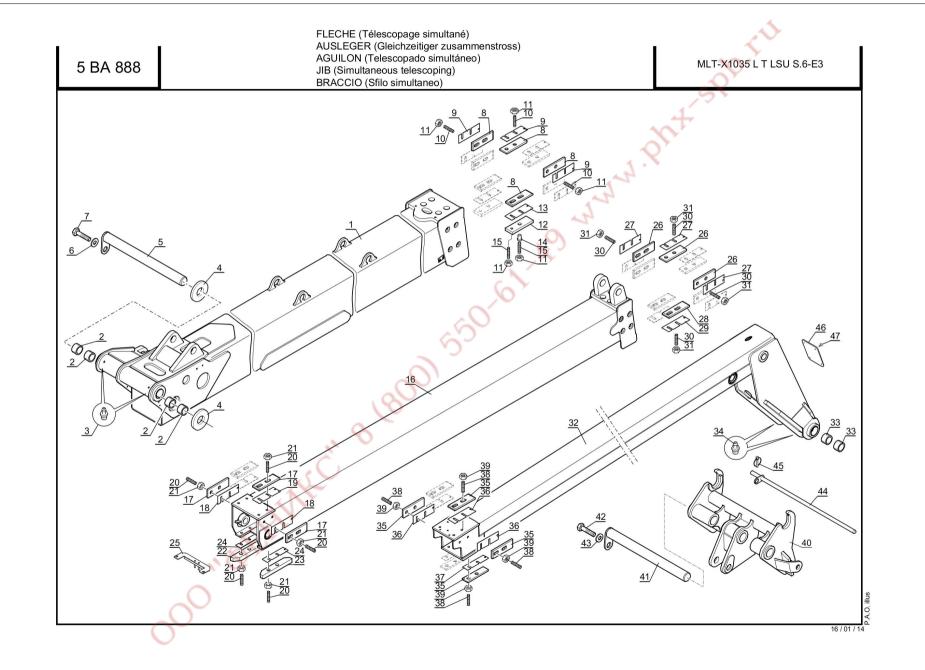


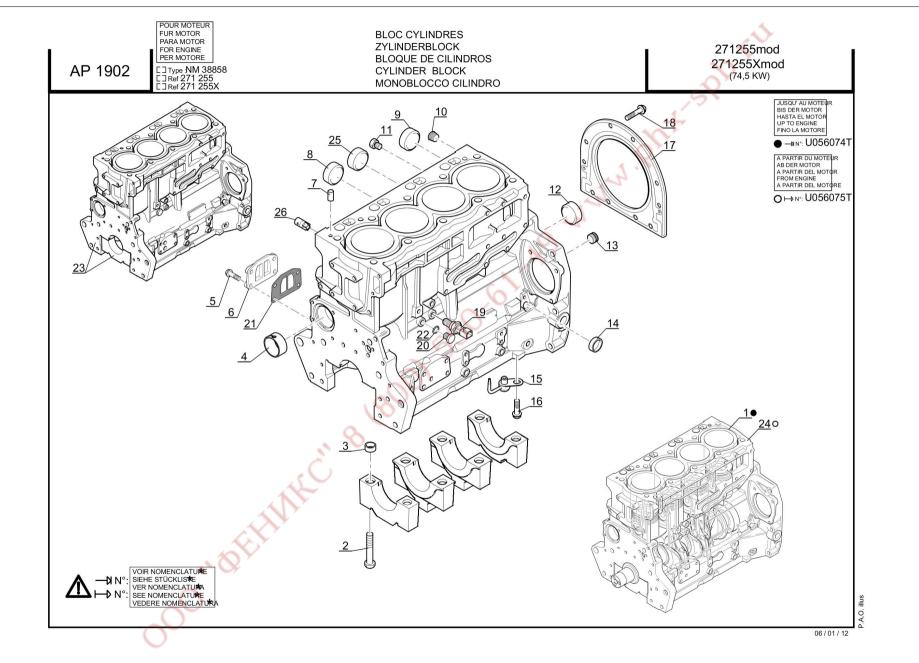


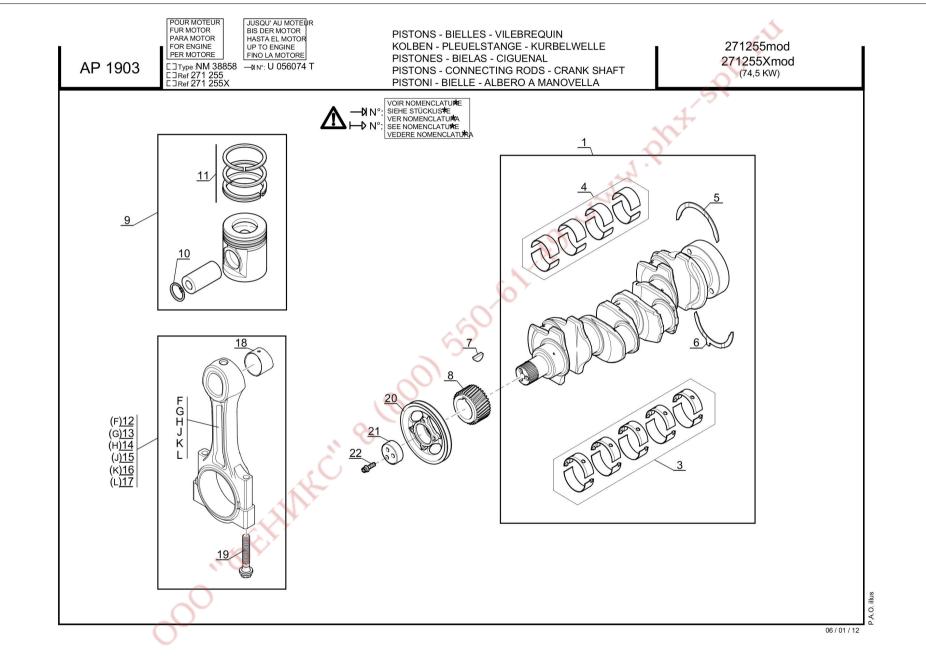


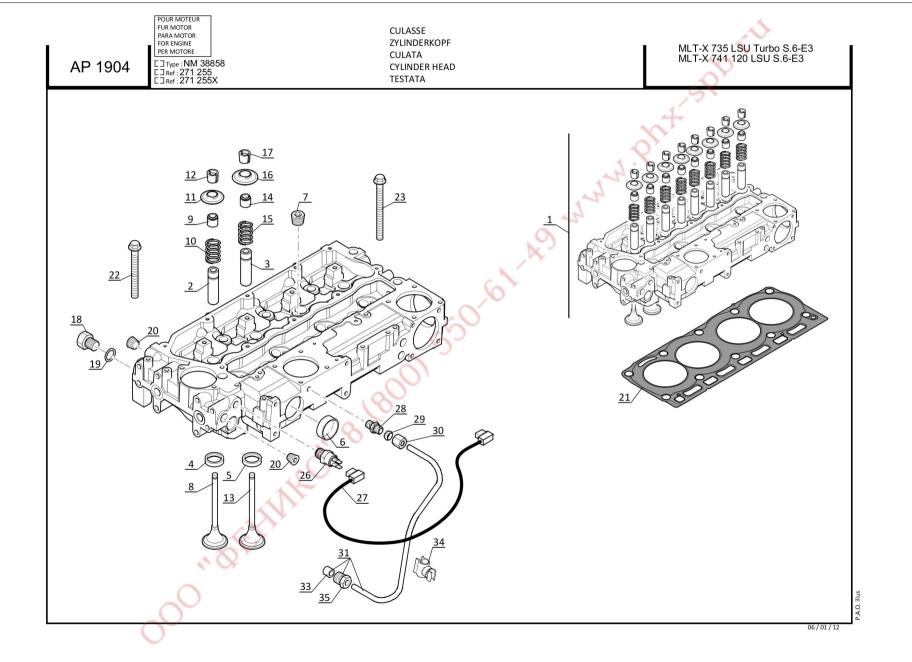


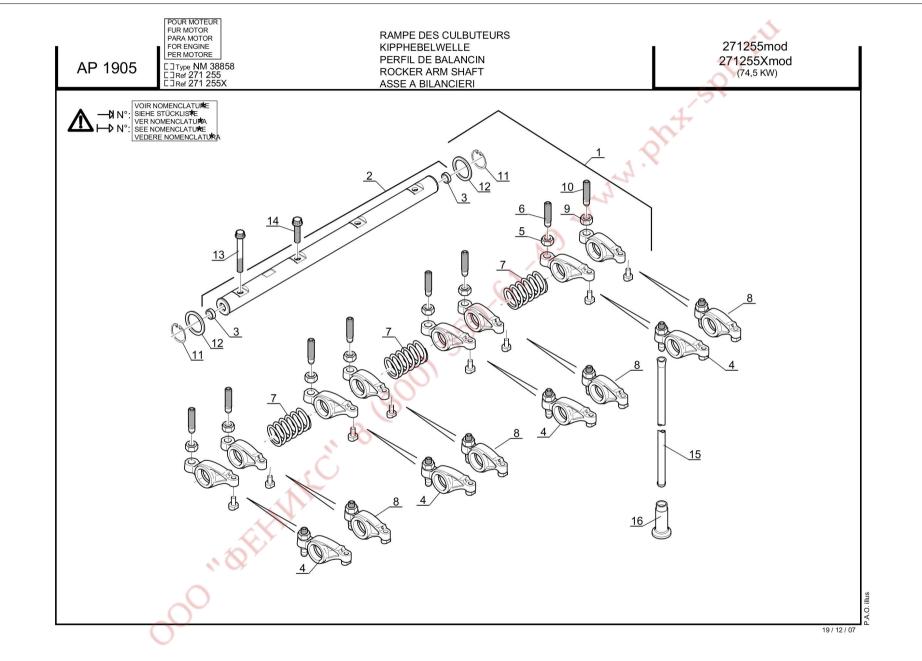


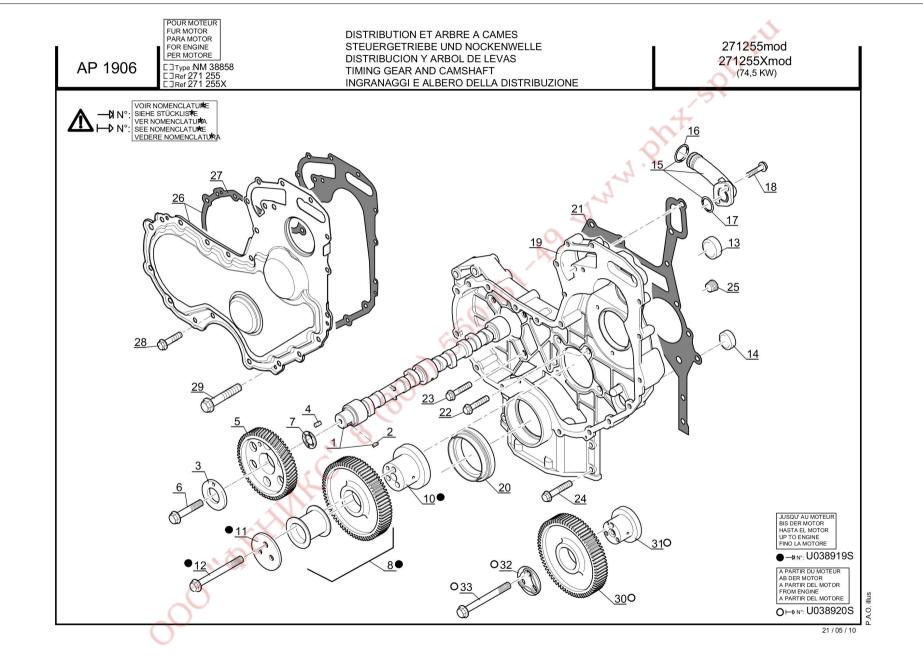

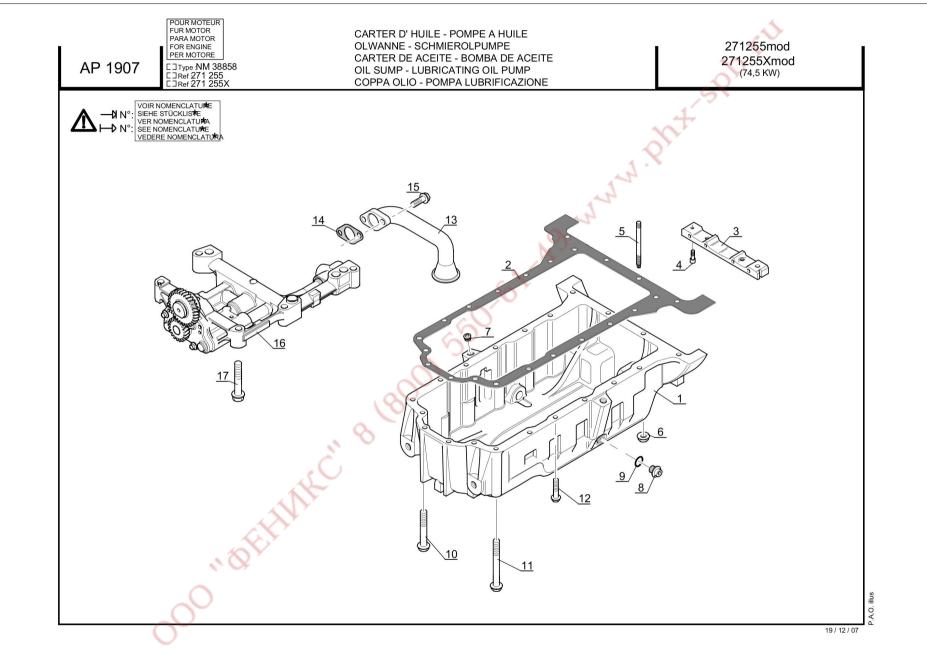


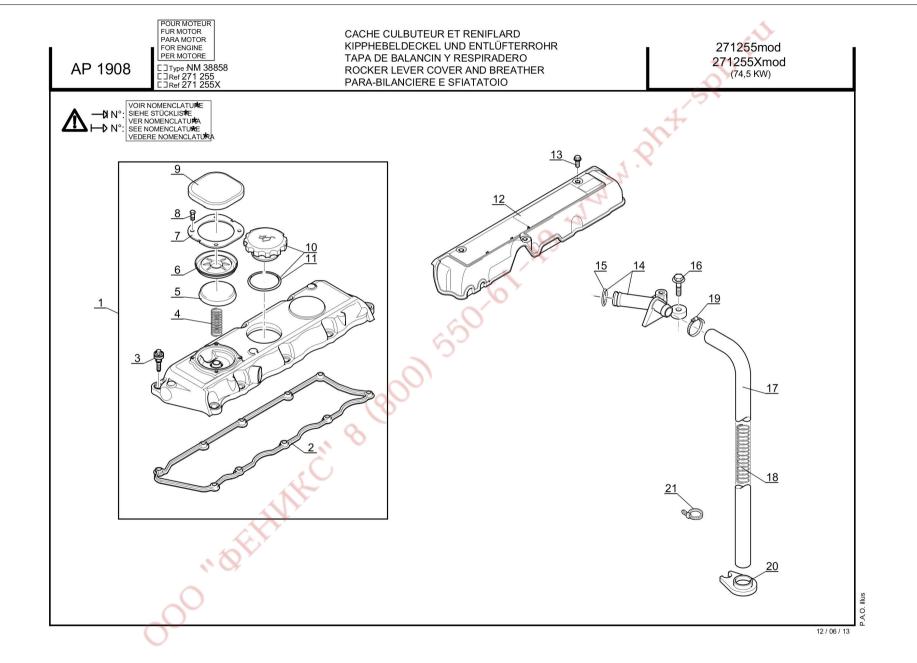


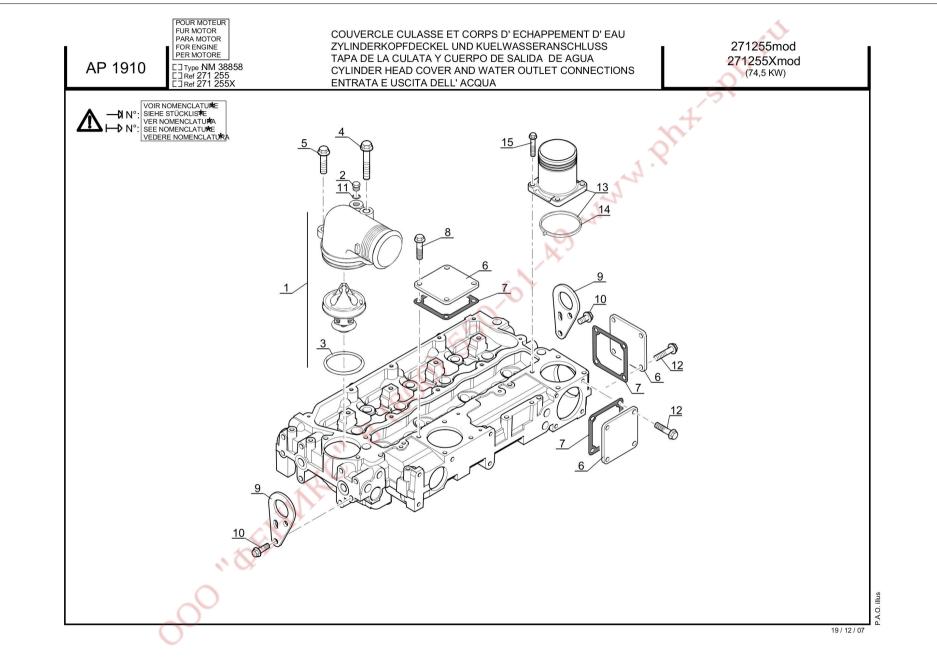


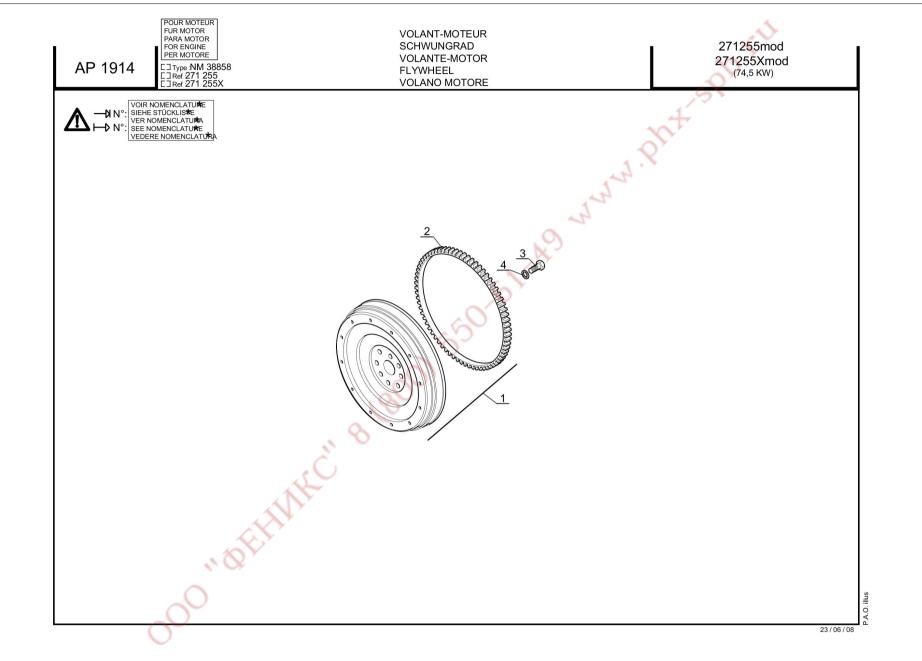



\_ENGINE UNIT

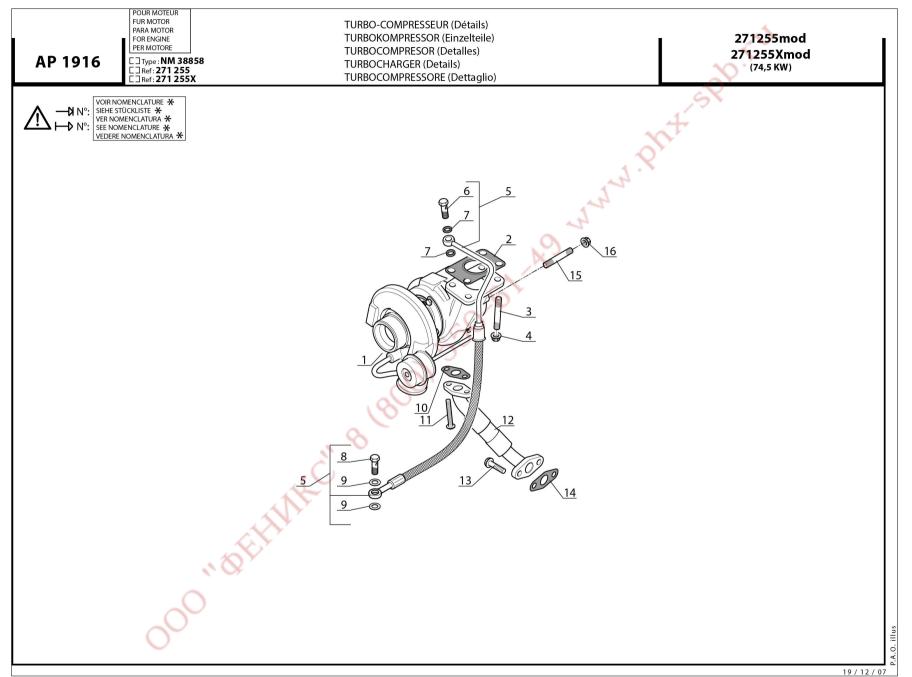


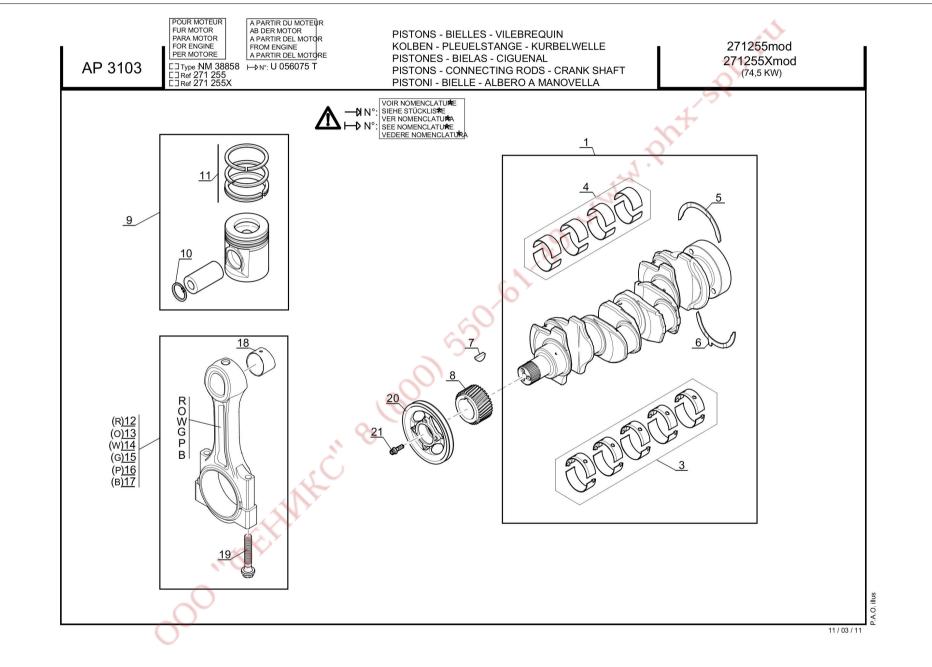


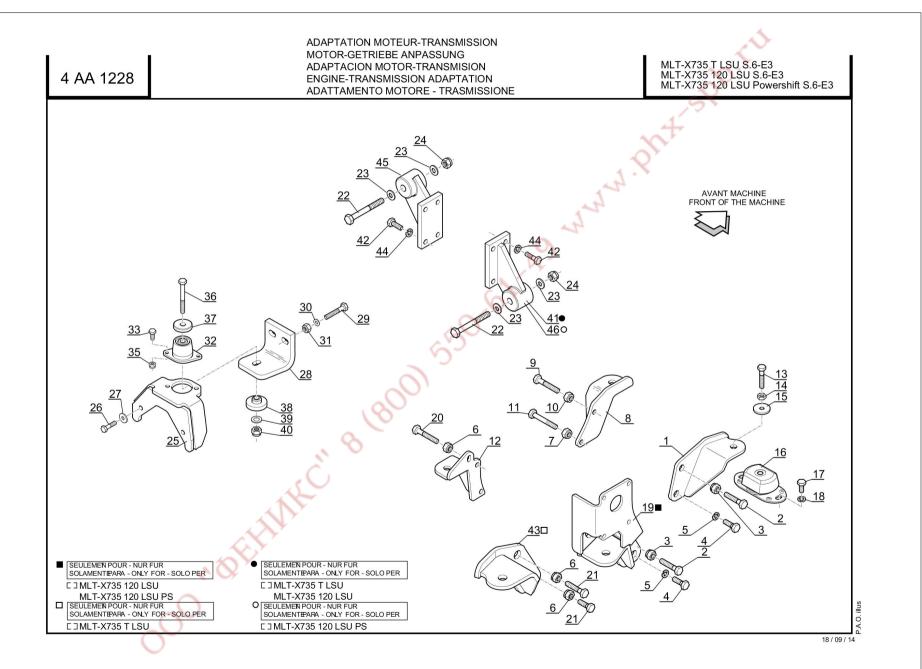


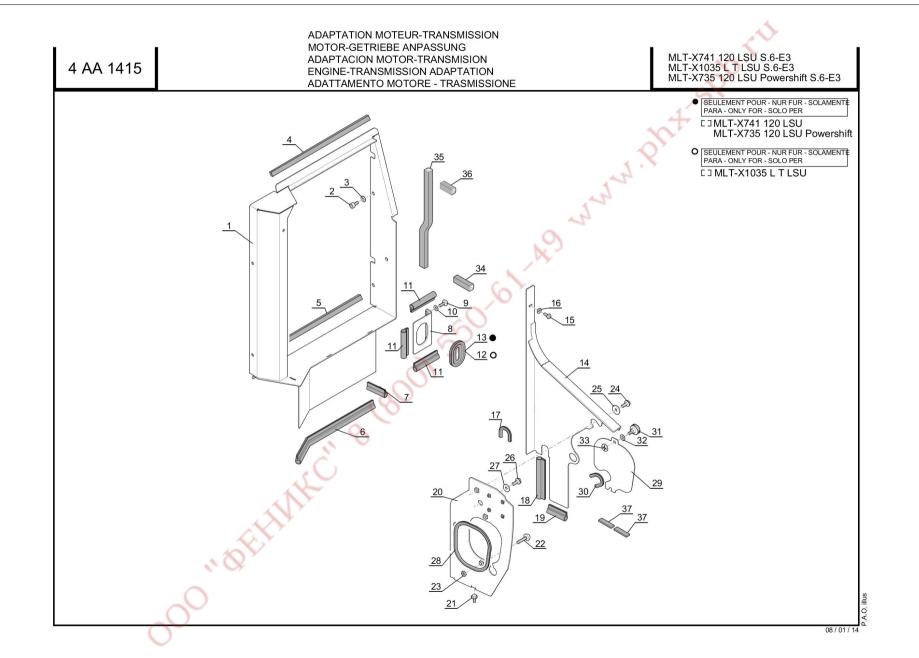

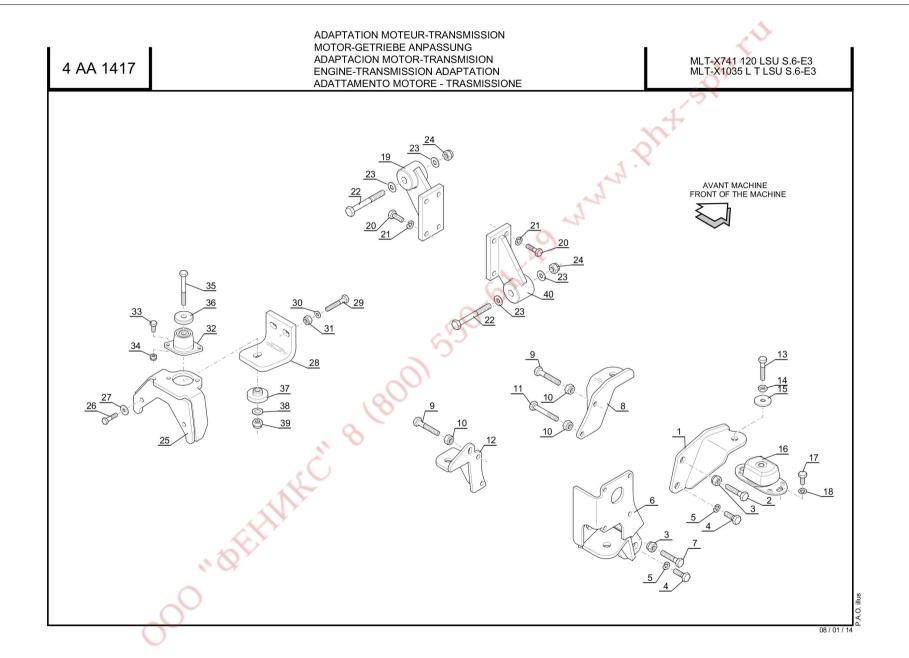


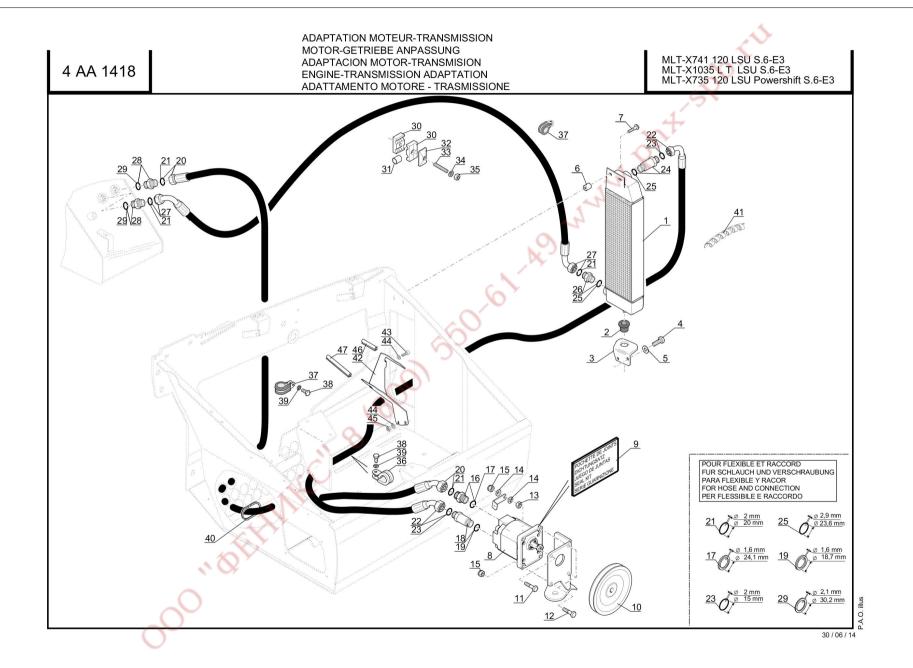

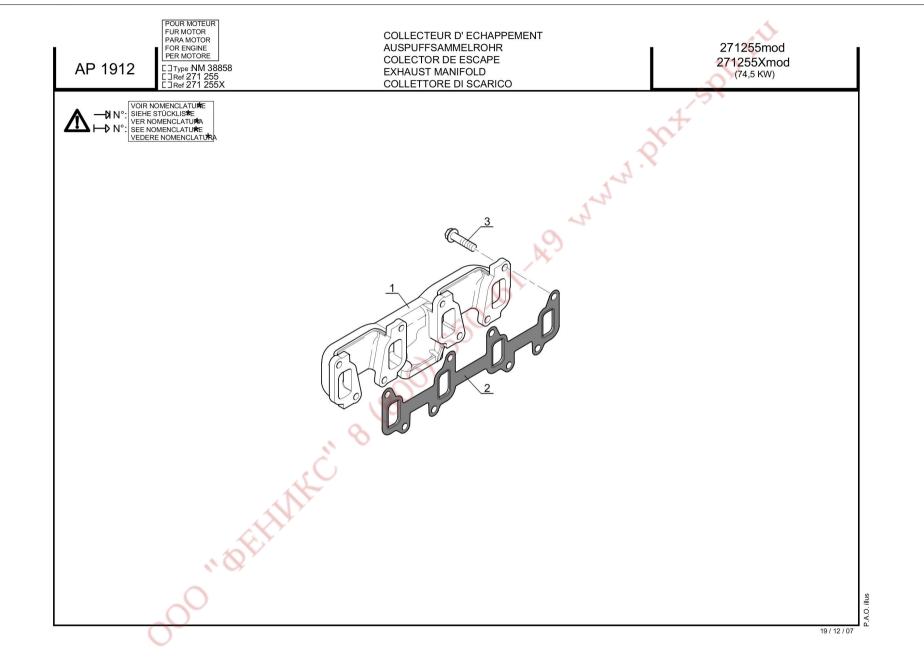


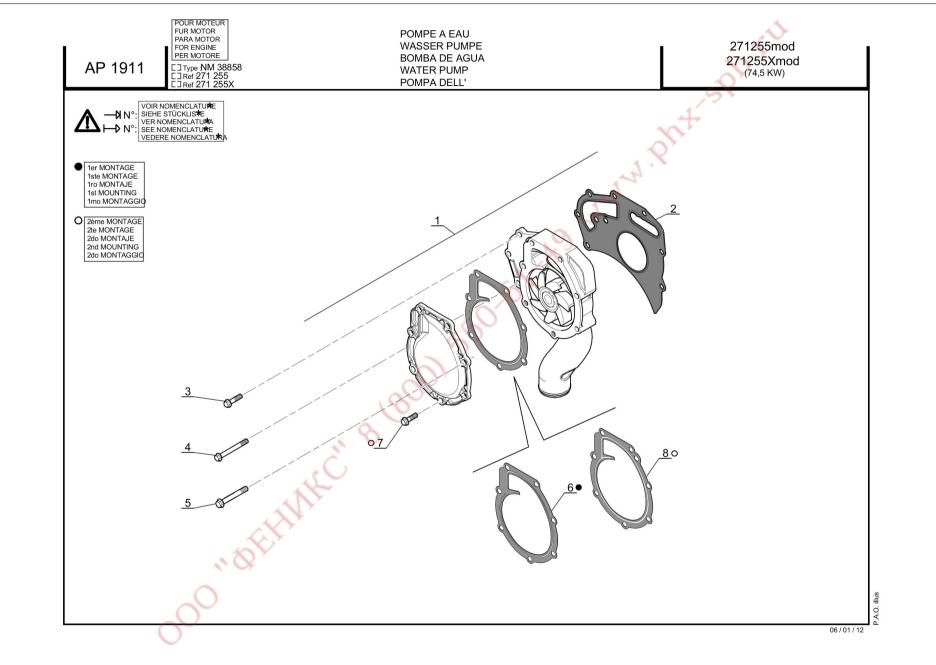



# \_COOLING SYSTEM

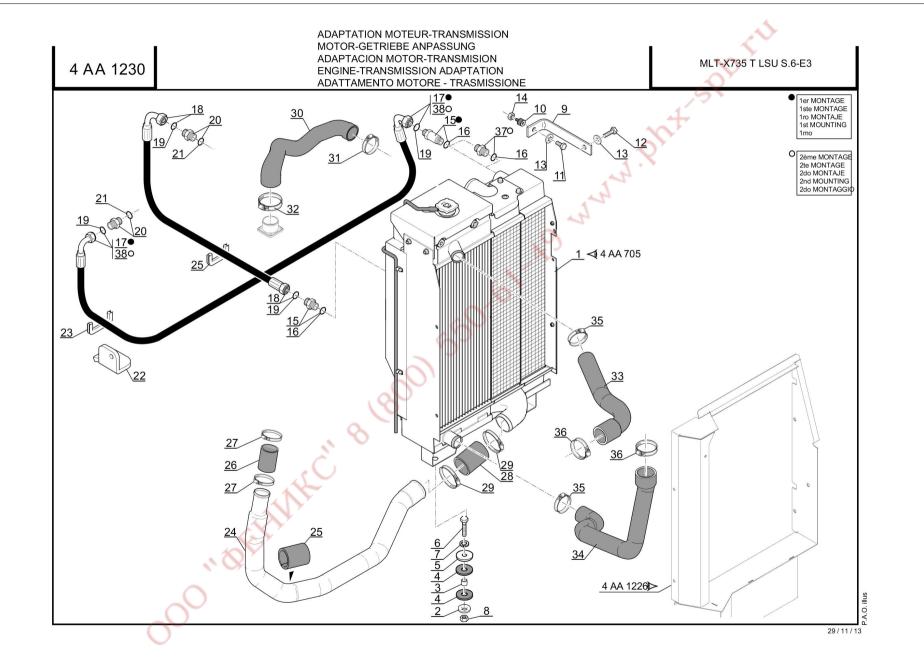


# COOLING SYSTEM

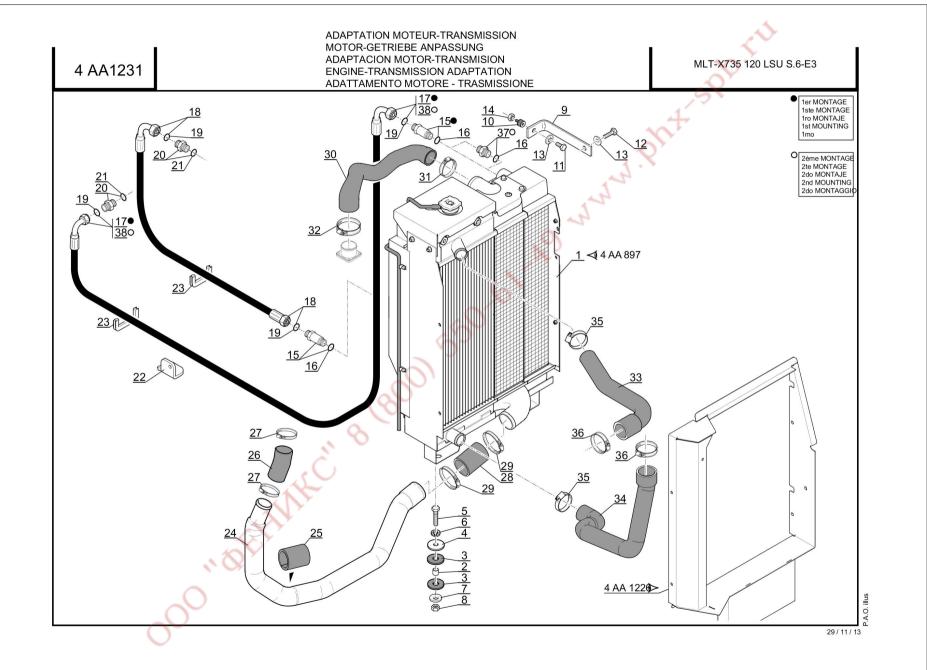

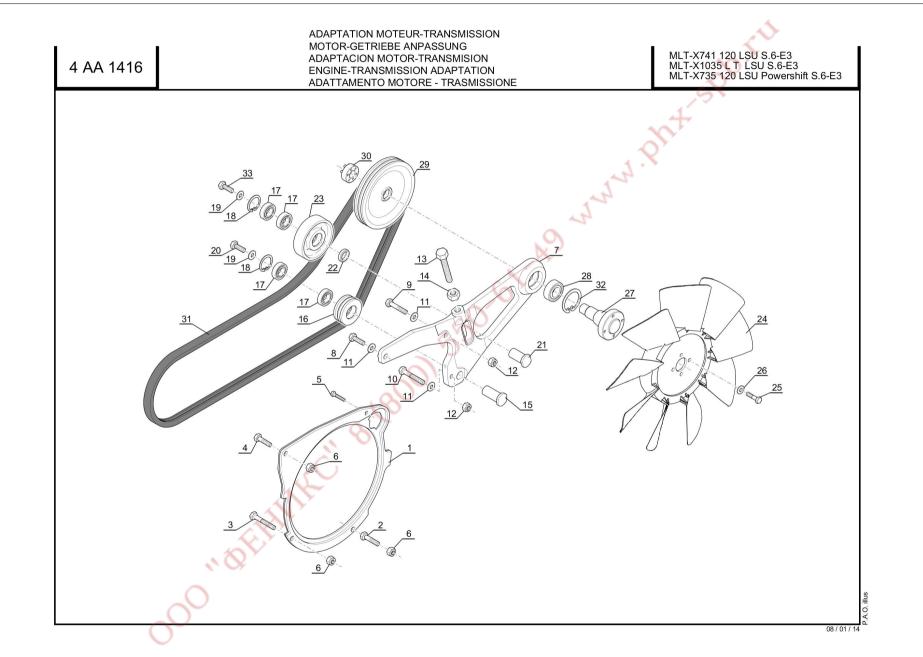


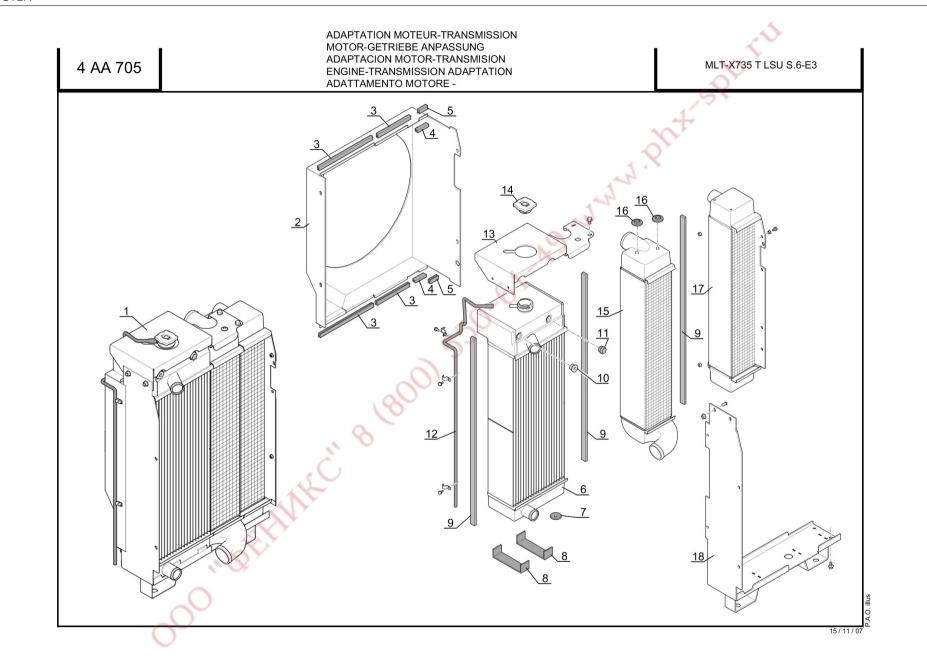




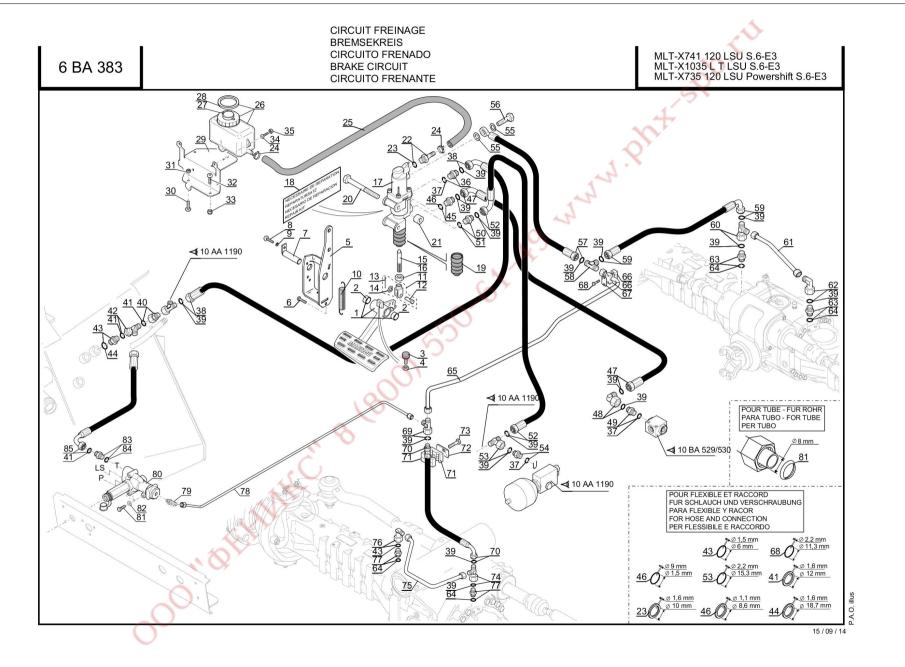


## BRAKING CIRCUIT

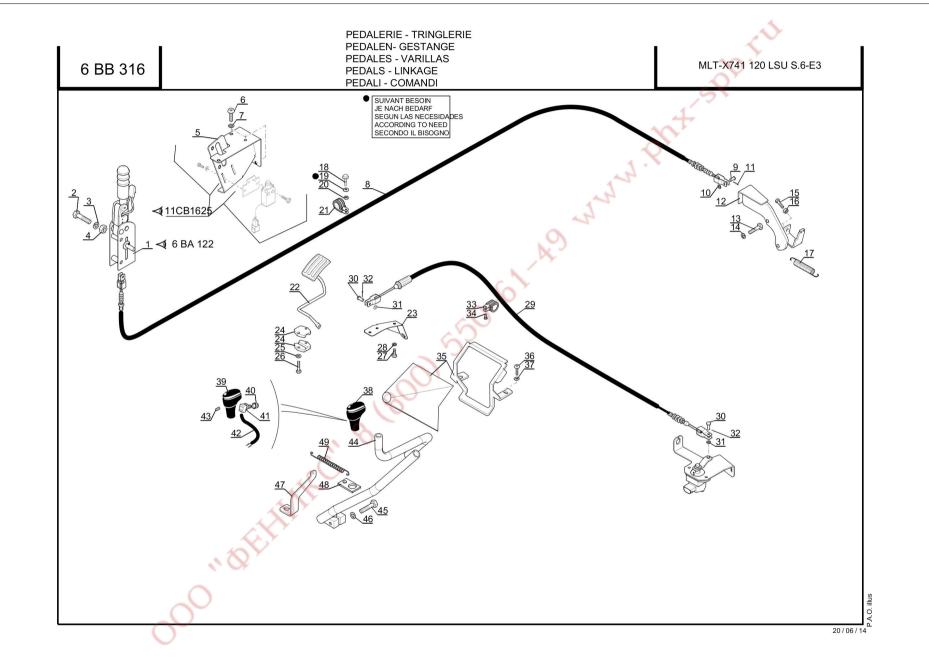


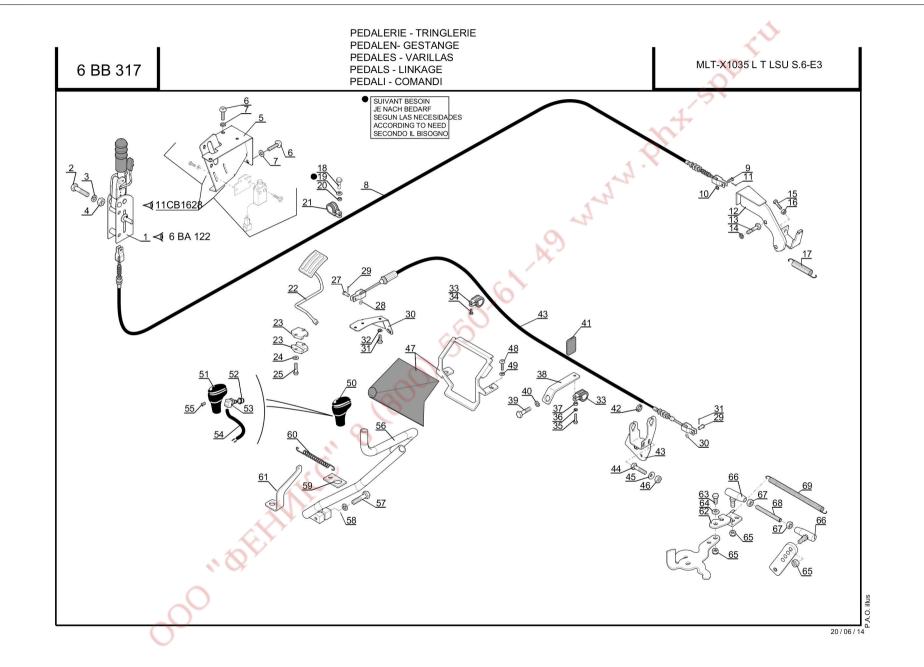



## \_HAND BRAKE

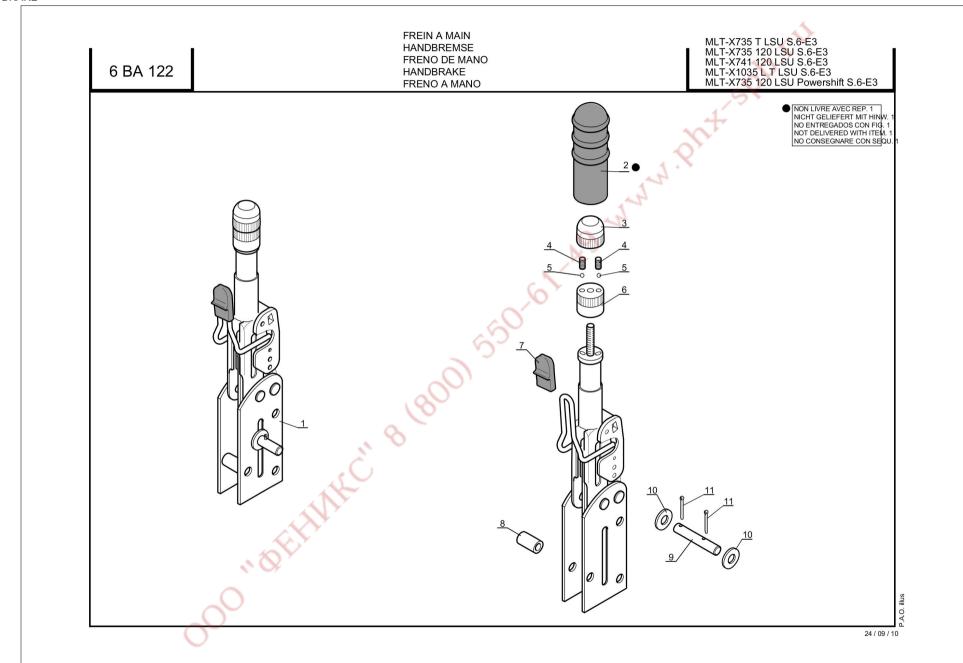




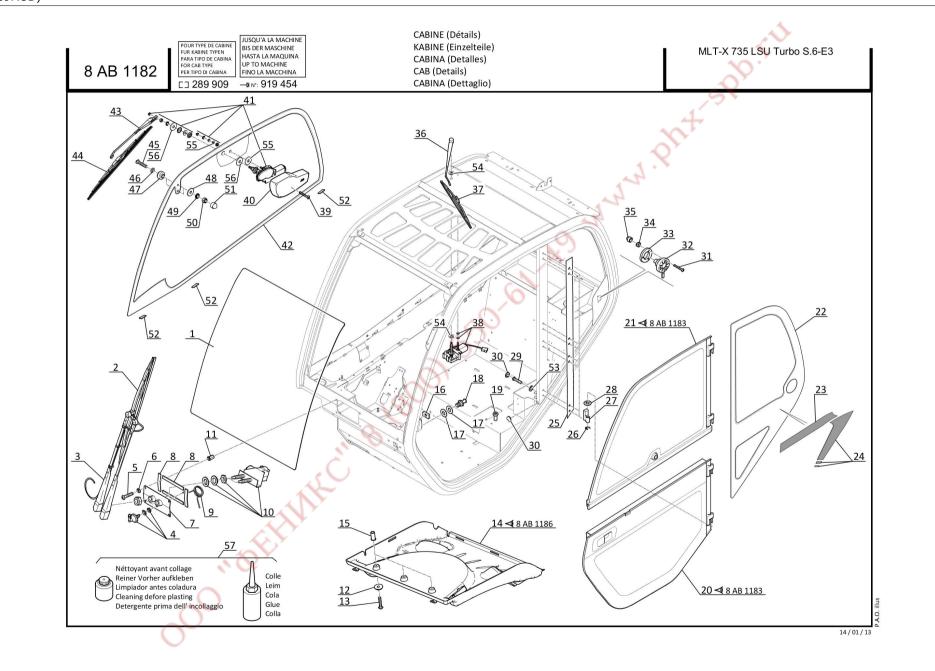


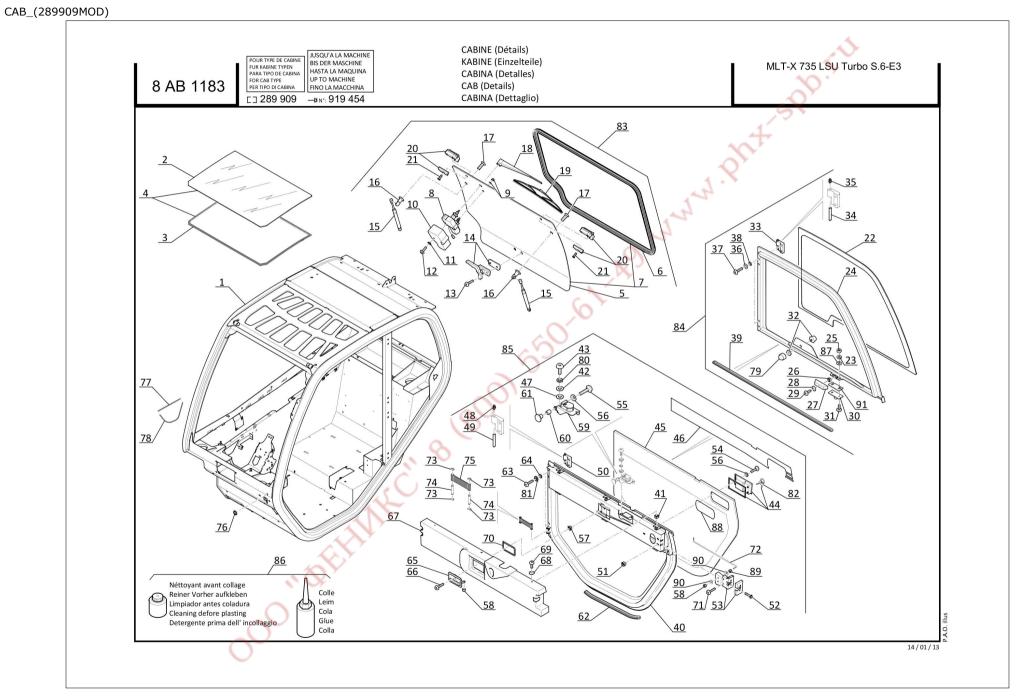

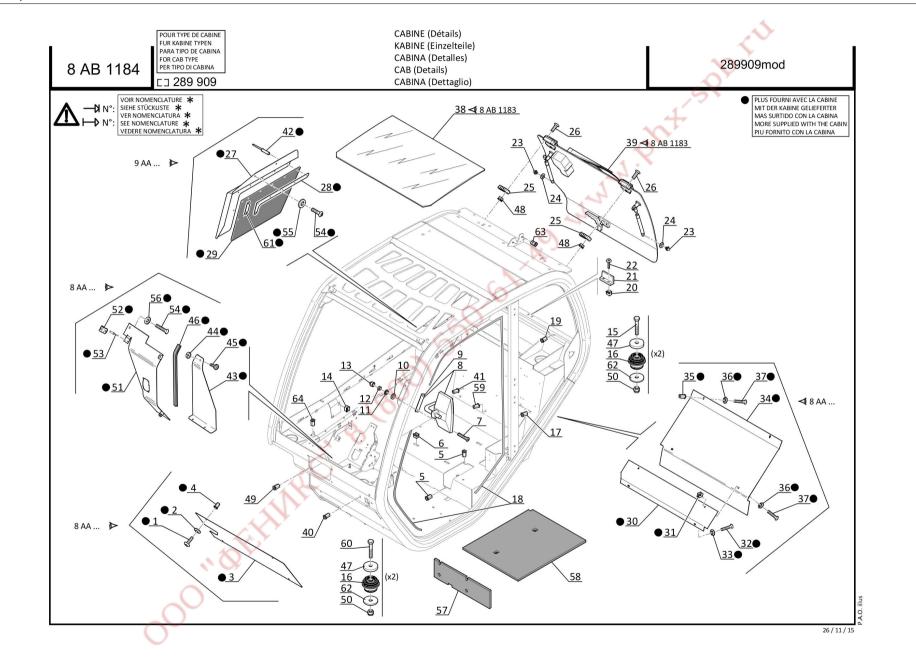


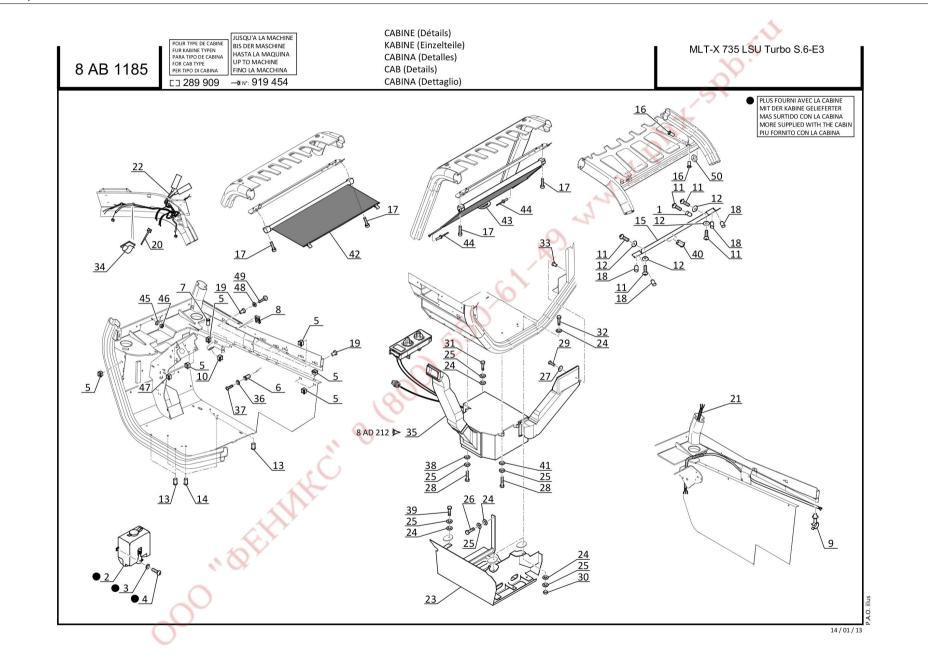



CAB\_(307767MOD)

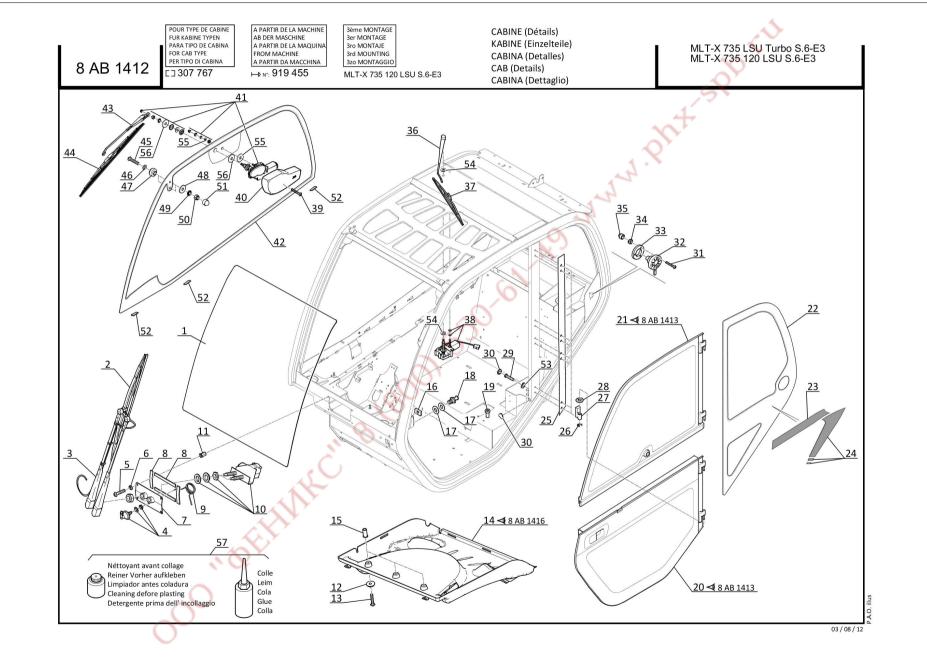


CAB\_(307767MOD)

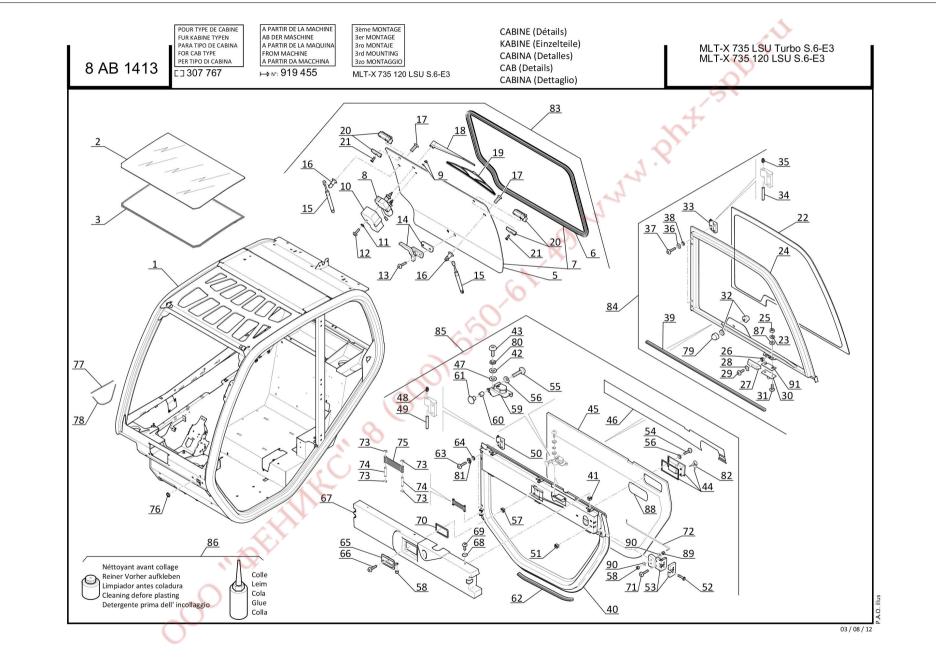

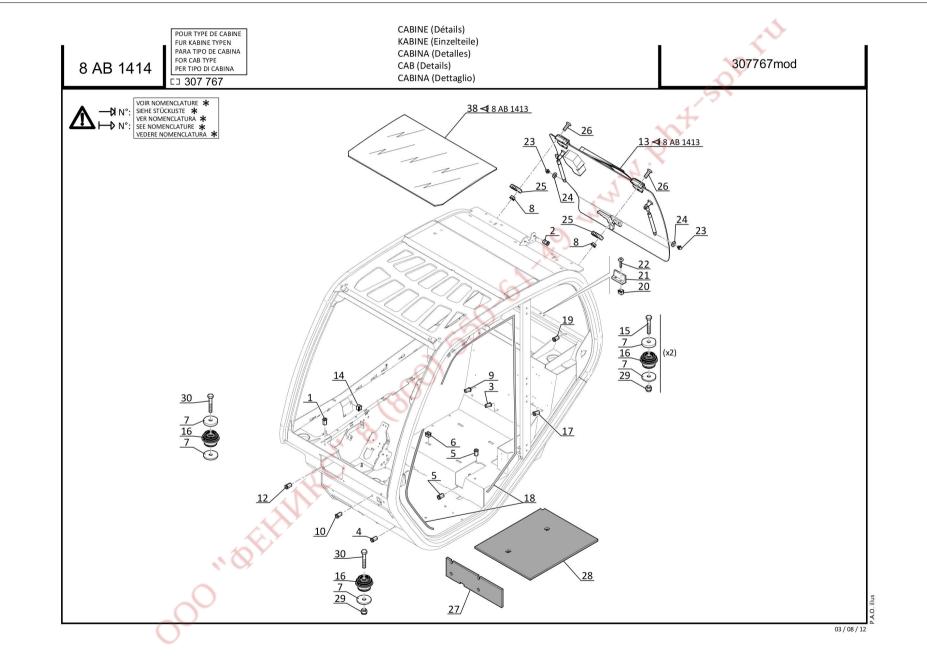

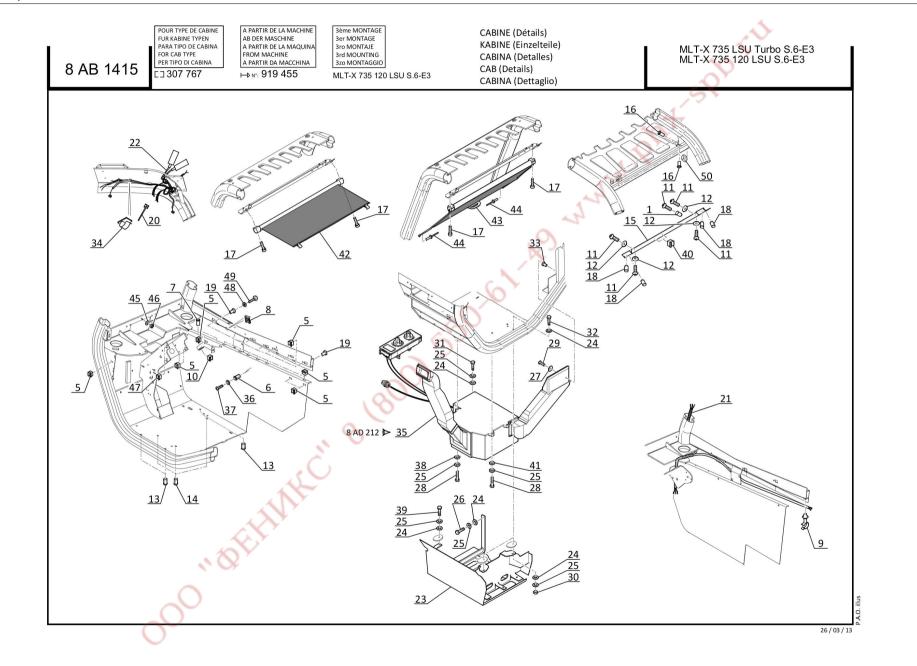

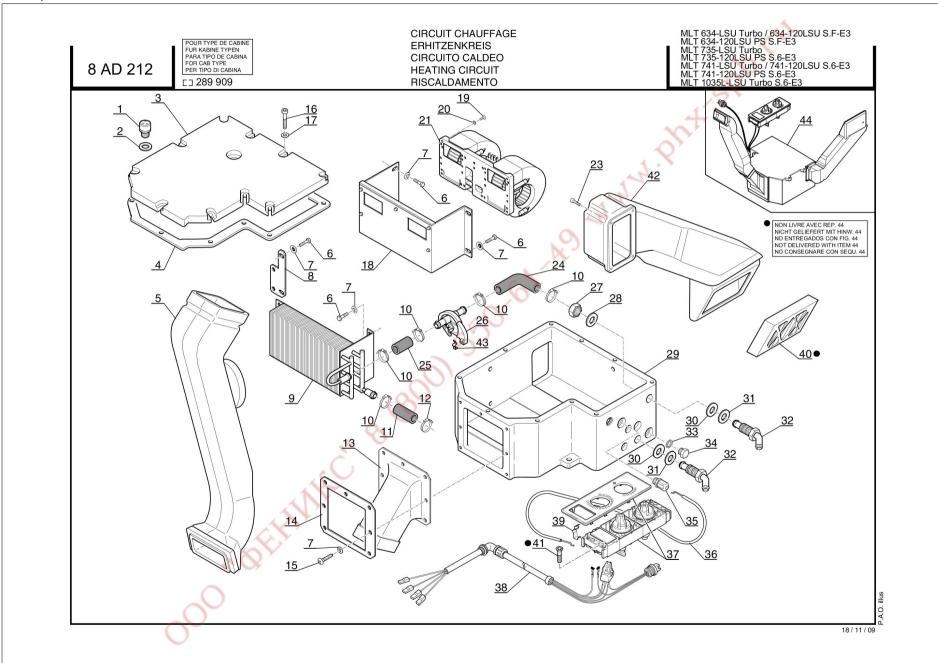


1	ERHITZE CIRCUIT	CIRCUIT			1- 2 2- 3- 4- 5-	89 90	SMOD				11 12 13 14 19	2- 3- 1-	õ	ò.	<b>*</b>			
Rep Hinw Fig Item Rif	Numéro Teil-Nr Numero Part-Nr Part-Nr	Ba	ésignation ezeichnung escripcion escription escrizion e			3 4	5	6	7	8 9	16 17 18 19 20		2 13	14	15 10	8 17	18 19	20
1	564039	Clapet anti-retour Válvula antiretorno Valvola anti-ritorno	- Gagandruckventil - Back pressure valve -	1			4	4	5.							Π		
2	564040	Joint d'étanchéité Junta de estanqueidad Guarnizióne	- Dichtungsring - Seal -	1	0	-	2											
з	564041	Couvercle Tapadera Coperchio	- Deckel - Cover -	1	Ķ													
4	564042	Joint plat Junta plana Guarnizióne	- Dichtung - Gasket -	· 6 ]														
5	225050	Conduite d'air Conducción de aire Tubolatùra di area	- Luft leitung - Air pipe -	1														
6	50896	Vis H,M 6- 10-8.8-22N5/C Tornillo Vite	- Schraube - Scraw -	10														
7	564210	Rondelle Arandela Rondella	- Unterlegscheibe - Washer -	17														
8	564043	Support radiateur Soporte radiador Supporto radiatore	- Rühler träger Radiator bracket	1														
9	564044	Radiateur Radiador Radiatore	- Kühler - Radiator -	1														
10	564045	Collier Abrazadera Fascetta	- Spannschelle - Clamp -	5														
11	564046	Durit Tubo flexible Manicotto	- Schlauch - Hosa -	1														
		$\sim$							- 1				_				9/07/	201

2	ERHITZE CIRCUIT	f CHAUFFAGE INKERIS FO CALDEO 3 CIRCUIT DAMENTO			2- 3- 4- 5-	28	9 90	5MCI	D				11- 12- 13- 14- 15-	2	Ş	>.	•			
Rep Hinw Fig Item Rif	Numéro Teil-Nr Numero Part-Nr Part-Nr	B D D	ésignation lezeichnung lescripcion lescription lescrizione	L L	6- 7- 9- 10-	2 3	3 4	1 5	i 6	7	8	9	16- 17- 18- 19- 20-	7	13	14 1	5 10	8 17	18	19 20
12	564047	Collier Abraradera Fascatta	- Spannschalle - Clamp -		1				Å.	2										
13	564048	Conduite d'air Conducción de aire Tubolatùra di area	- Luftleitung - Xir pipe -				-	2												
14	564049	Plaque de fixation Placa de fijación Piastra di fissaggio	- Befestigung Platte - Fastening plate -		1	ľ														
15	60 0 95 5	Vis Tornillo Vite	- Schraube - Screw -	5 <sup>6</sup>	7															
16	228461	Vis Tornillo Vite	- Schraube - Screw	1	٥															
17	564210	Rondelle Arandela Rondella	- Unterlegscheibe - Washer -	1	0															
18	564053	Caisson Cajón Cassons	- Abteilung - Compartment -		1															
19	564054	Vis CHc,M 4- 12 Tornillo Vite	Scraw		6															
20	28988	Rondelle M 4 22N Arandela Rondella	- Unterlegscheibe - Washer -		6															
21	564055	Turbine à air Turbina de aire Turbina a area	- Windturbine - Air turbine -		1															
23	564056	Vis Tornillo Vite	- Schraube - Scraw -		4															
	•	No.				-	1	-	ŕ								_		9/0	7/203


3	ERHITZE CIRCUIT	CHAUFFACE INKEIS COCALDEO SCHEUIT DAMENTO			1- 2- 3- 4- 5-	289	905	MOD					11 12 13 14 15	-	ò	9	Ş				
Rep Hinw Fig Item Rif	Numéro Teil-Nr Numero Part-Nr Part-Nr	Be: De: De:	signation zeichnung scripcion scription scrizione	- F	6- 7- 8- 9- 10-	3	4	5	6	7	8	9	16 17 18 19 20		2 1:	3 14	15	16	17 1	8 19	20
24	564057	Durit Tubo flexible Manicotto	- Schlauch - Hosa -		1				1	20	•										
25	564058	Durit Tubo flexible Manicotto	- Schlauch - Hose -				3														
26	564059	Vanne de chauffage Válvula de caldeo Valvola di riscaldamento	- Herrungsventil - Heating blower valve -		1																
27	564060	Ecrou Tuerca Dado	- Mutter - Nut -	6	2																
28	42349	Rondelle W20 ZN Arandela Rondella	- Unterlegscheibe - Washer -		2																
29	604699	Caisson Cajón Cassone	- Abteilung - Compartment -		1																
30	564062	Joint d'étanchéité Junta de estanqueidad Guarnizióne	- Dichtungsring - Seal -		2																
31	564063	Bondalle Arandala Bondalla	- Unterlegscheibe - Washer		2																
32	564064	Raccord Racor Raccordo	Verschraubung - Connection		2																
33	564065	Joint d'étanchéité Junta de estanqueidad Guarnizióne	- Dichtungsring - Seal -		1																
34	564066	Bouchon Tapón Tappo	- Stopfen - Plug -		1																
		<sup>2</sup>						-											9	/07/	2 0 1


Bezei Descr Descr Descr Descr Descr toupe (Métal M12) - topas - ordinazione (Chauffage) - mando (Caldeo) - ordinazione (Riscaldane de commande complet - di comando complet - di comando complet -	izione - Stopfbüchse - Packing box - - Steuerseil (Erhitzen) - Control cable (Heating) anto) - Kompletter antriebgehaüse - Complete driving housing		-	4	5 6	7	8 9	16- 17- 18- 20- 10 1		13 14	15 10	6 17 1	18 19	20
topas	- Packing box - Steuerseil (Erhitren) - Control cable (Heating) anto) - Kompletter antriebgahaüse - Complete driving housing - - Kabalbaum - Wiring harness - - Klammer	1	02	142	in the second se	Pa -	•							
mando (Caldeo) - ordinazione (Riscaldame de commande complet - a mando completo - di comsando completo - - - - - - - - - - - - - - - - - - -	- Control cable (Heating) ento) - Kompletter antriebgehaüse - Complete driving housing - - - Kabelbaum - Wiring harness - - Klammer	1	0	LA.										
a mando completo - di comando completo - - - - - - - - - - - - - - - - - - -	- Complete driving housing - Kabalbaum - Wiring harness - Klammer	1	ç,											
- - - -	- Wiring harness 	) 1 1												
- -		1												
3	- Erhitzen filter - Heating filter	1												
ST3,5-13-C-ZN12/NOIRE- - - -		4												
ón de aire		1												
NR	- Klanner - Clip	1												
ompleto -		L												
	a d'air ión de aire ira di area ge complet		b - Scraw - Scraw - Inftleitung ión de aire hra di area - Klanner - Clip - Clip - Sompletter Erhitzen - Complete heating	b - Scraw - Scraw - Luftleitung ión de aire hra di area - Klanmer - Clip - Clip - Completer Erhitzen 1 - Complete heating	b - Scraw - Inftleitung ión de aire - Air pipe ira di area - - Klanner 1 - Clip - Clip - Scompletter Erhitzen 1 completo - Complete heating	b - Scraw - Scraw - Laftleitung 1 ión de aire - Air pipe ira di area - Klanner 1 - Clip - pe complet - Kompletter Erhitzen 1 completo - Complete heating 1	b - Scraw - Scraw - Luftleitung 1 ión de aire Air pipe ira di area - Klanner 1 - Clip - 1 pa complet - Kompletter Erhitzen 1 completo - Complete heating	b - Scraw - Inftleitung 1 ión de aire Air pipe ira di area - Inftleitung 1 - Clip - Inftleiter Erhitzen 1 pe complet - Kompletter Erhitzen 1	b - Scraw - a d'air - Luftleitung 1 ión de aire - Air pipe ira di area - - Klanner 1 - Clip - ge complet - Kompletter Erhitzen 1 completo - Complete heating	b - Scraw - Inftleitung ión de aire ira di area - Klanner - Clip - Clip - Scompletter Erhitzen - Completter Erhitzen - Completter Brhitzen - Complette	b - Scraw - Inftleitung ión de aire ira di area - Klanner - Clip - Clip - Kompletter Erhitzen - Complet - Complete heating	b - Scraw - a d'air - Luftleitung 1 ión de aire - Air pipe ira di area - Klanner 1 - Clip - ge complet - Kompletter Erhitzen 1 completo - Complete heating	b - Scraw - a d'air - Luftleitung 1 lón de aire - hra di area - - - - - - - - - -	b - Scraw - a d'air - Luftleitung 1 ión de aire - Air pipe ira di area - Klanner 1 - Clip - ge complet - Kompletter Erhitzen 1 completo - Complete heating

5	CIRCUIT ERHITZE CIRCUIT	CIRCUIT			1- 2: 2- 3- 4- 5-	enge- 89 90 50		uty-u		11- 12- 13- 14- 15-	AD	9.7	212		
Rep Hinw Fig Item Rif	Numéro Teil-Nr Numero Part-Nr Part-Nr		Désignation Bezeichnung Descripcion Description Descrizione	1	6- 7- 8- 9- .0-	3 4	5 6	7	S	16- 17- 18- 19- 20-	12 13	14 11	5 16 1	7 18 19	9 20
		MT 1030 S S4-E3 A PARTIR DE LA MACHINE AB DER MASCHINE S88713 A PARTIR DE LA MAQUINA FROM MACHINE S8713 A PARTIR DA MACCHINA S8	588713	50-61	0	4.	the second se	- ba							
			HC BBOOK												
		00 v @Ehr												25/03,	/201

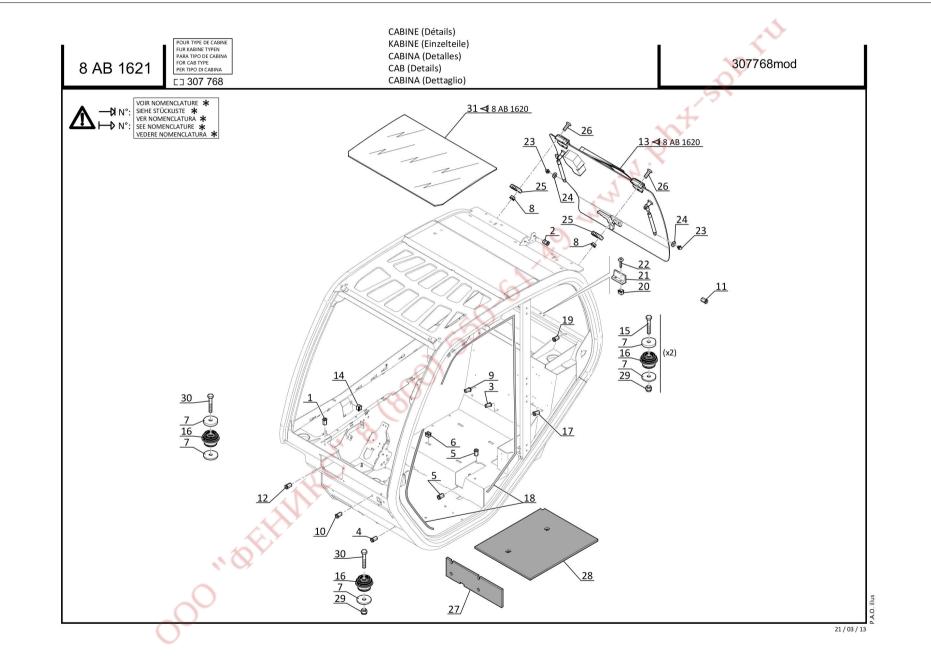



\_CAB

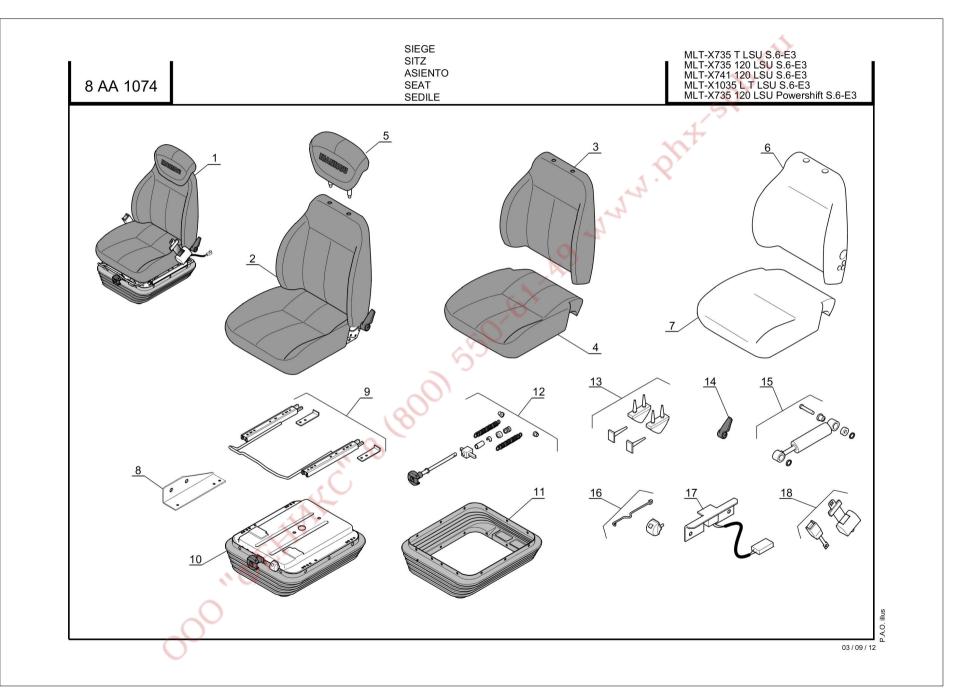


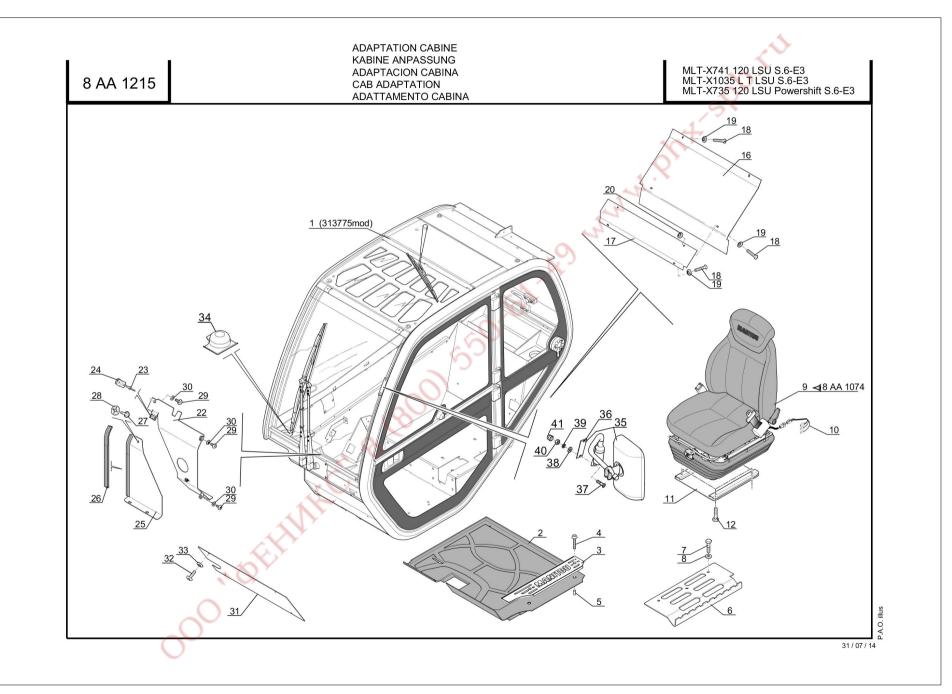



CAB

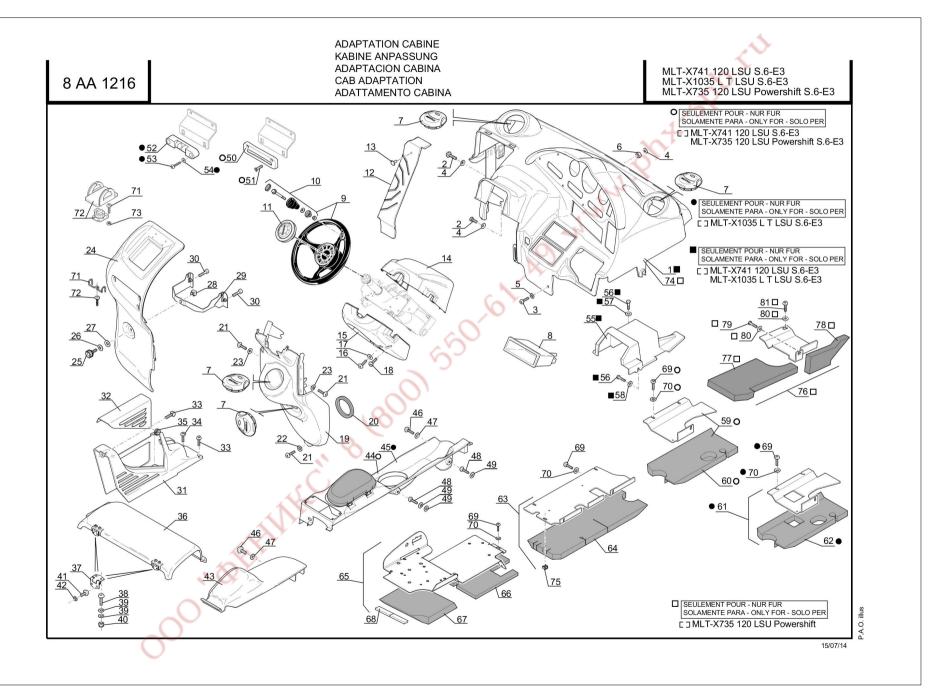


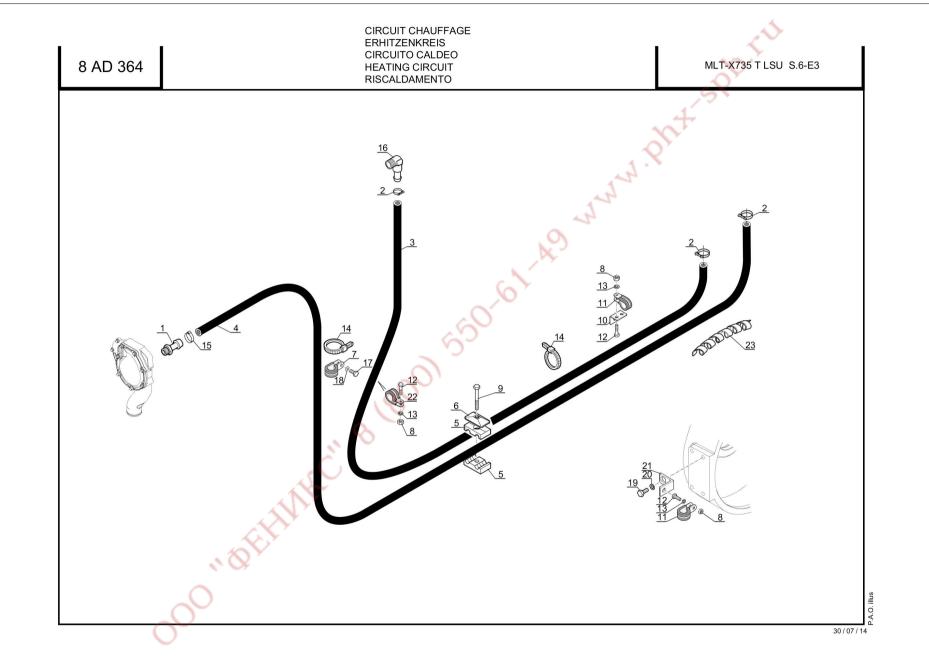


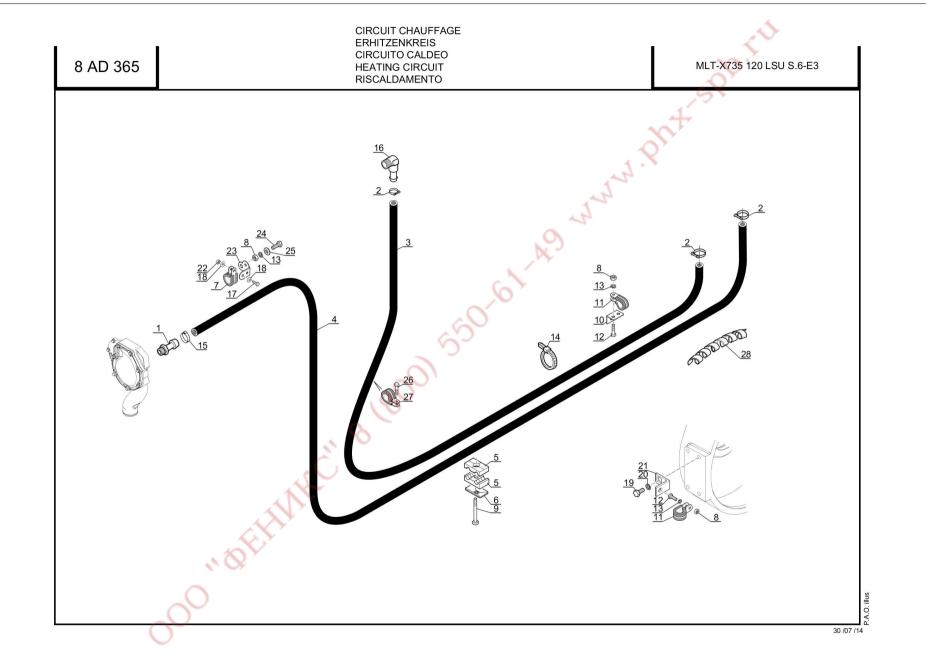


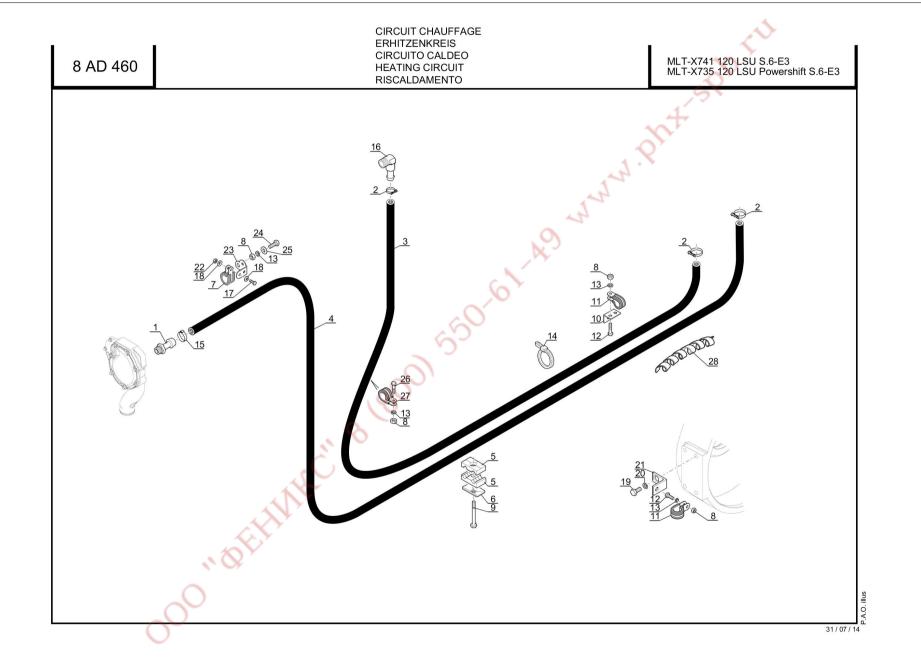


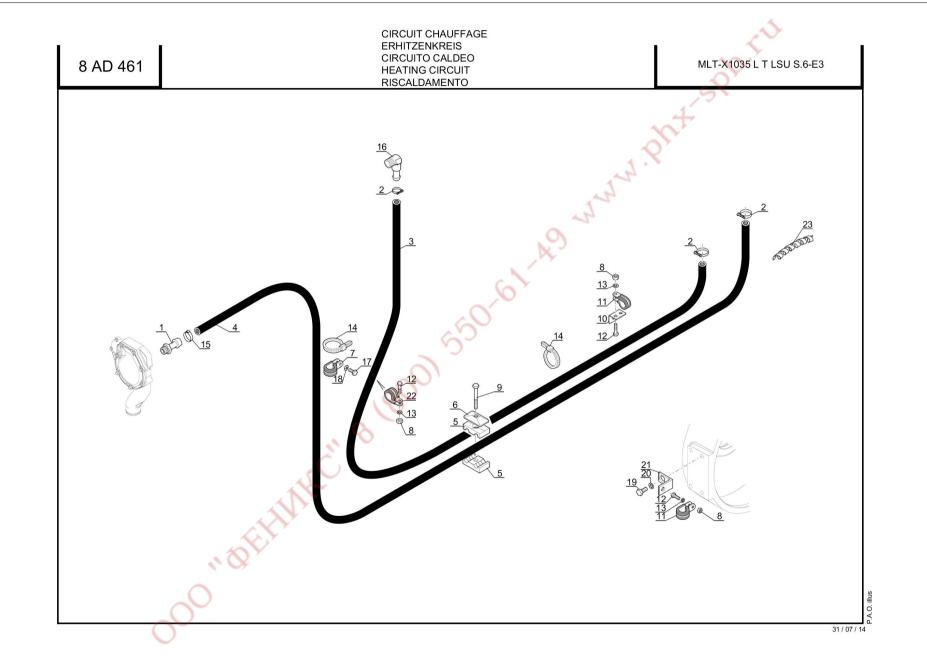


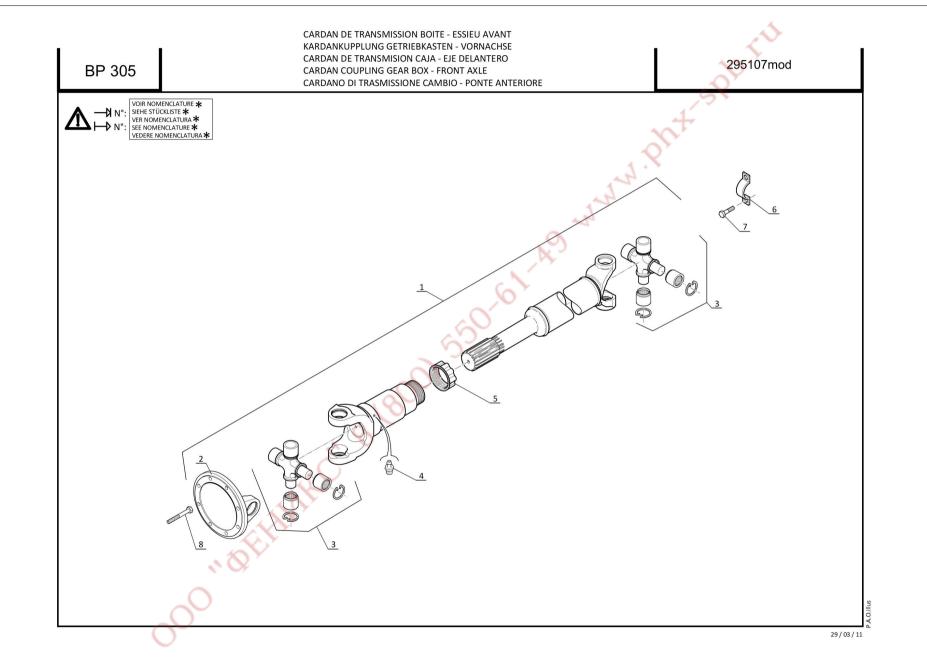


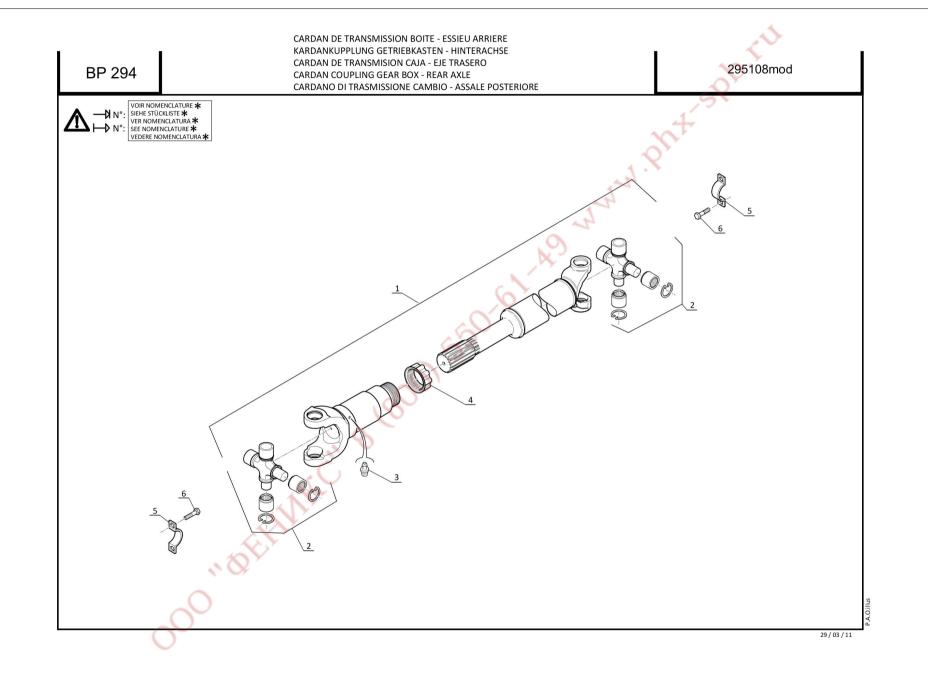


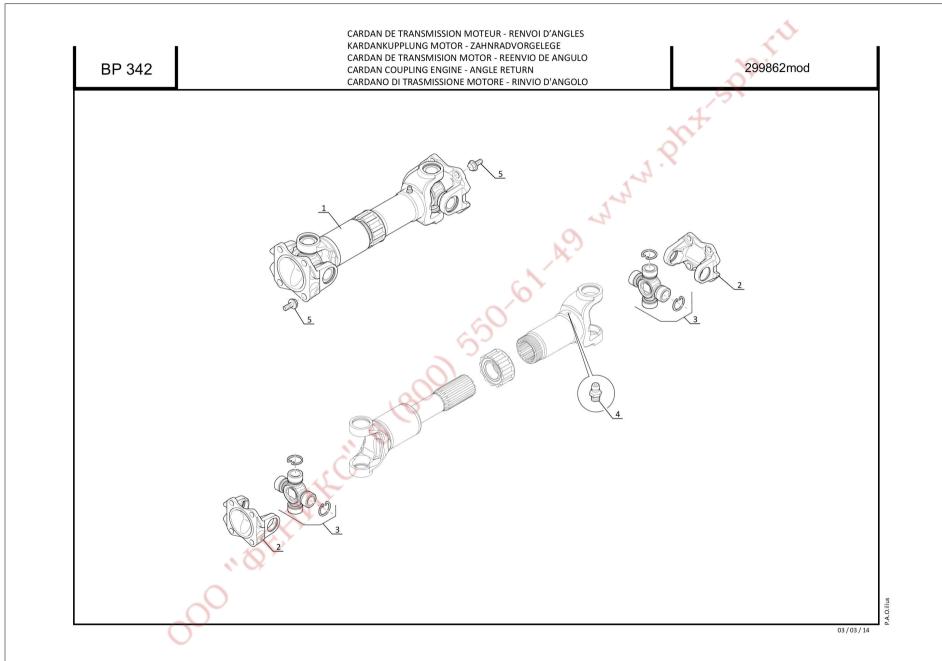

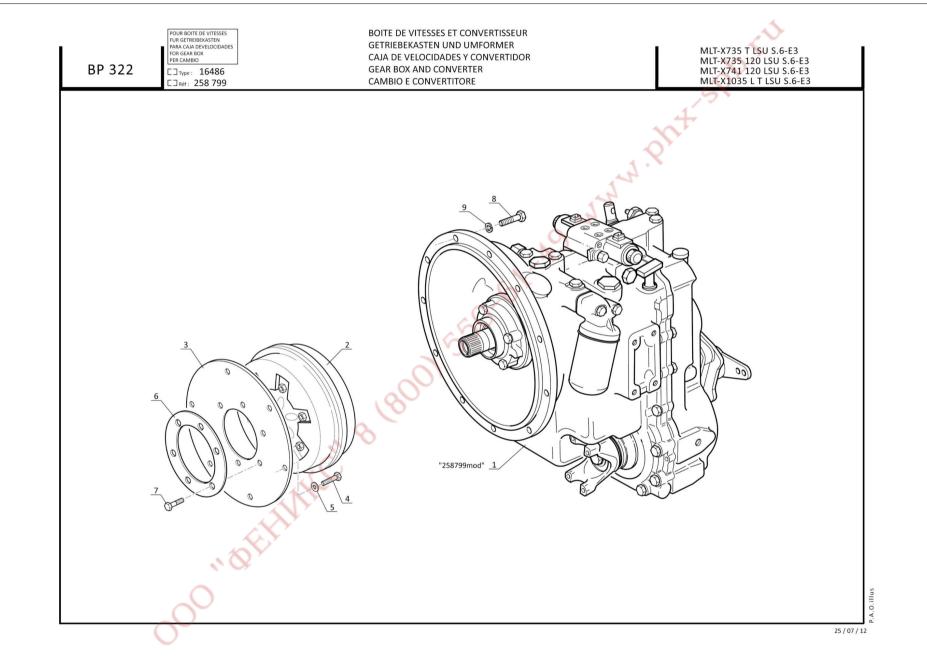

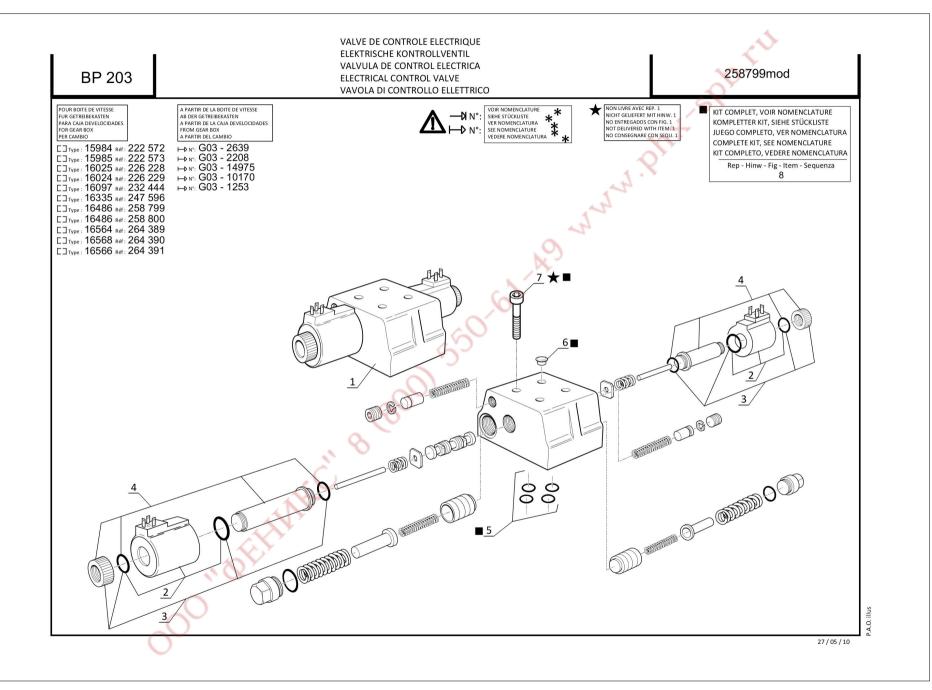

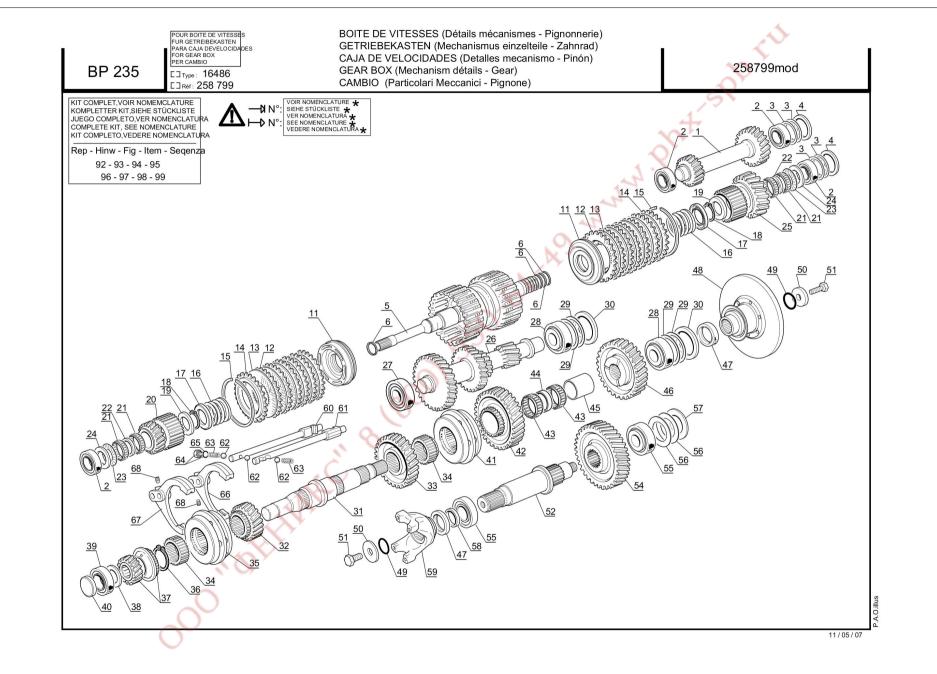

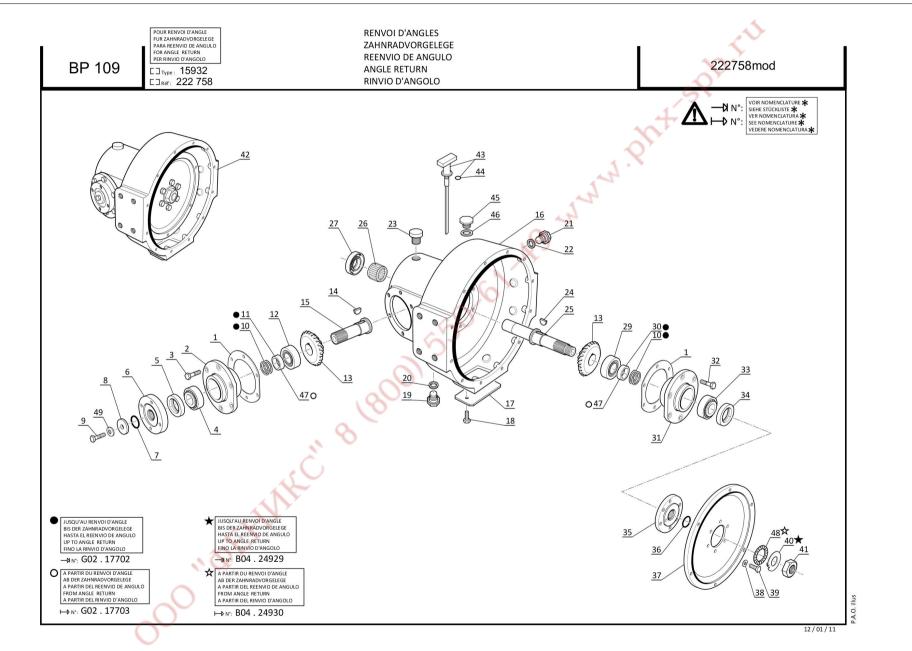

7

1	ZAHNRAI REENVIO BEVEL I	D'ANGLES DVORGELEGE D DE ANGULO DE ANGULO D'ANGOLO		Qté-Menge-Ca 1- 222758MOD 2- 3- 4- 5-		11- 12- 13- 14- 15-	109	
Rep Hinw Fig Item Rif	Numéro Teil-Nr Numero Part-Nr Part-Nr	Bez Des Des	ignation eichnung cripcion cription crizione	6- 7- 8- 9- 10- 1 2 3 4 5	- N	16- 17- 18- 19- 20- 0 11 12 13 14	15 16 17 18 19	20
1	550587	Cale d'épaisseur 0,50 mm Cala de espesor Spessore	– Ausgleichscheibe – Shim –	x	2 ch			
1	550588	Cale d'épaisseur 0,25 mm Cala de espesor Spessore	- Ausgleichscheibe - Shim -	x				
1	550589	Cale d'épaisseur 0,10 mm Cala de espesor Spessore	– Ausgleichscheibe – Shim –	x				
1	550590	Cale d'épaisseur 0,075 mm Cala de espesor Spessore	- Ausgleichscheibe - Shim -	x				
1	550591	Cale d'épaisseur 0,05 mm Cala de espesor Spessore	- Ausgleichscheibe - Shim -	x				
2	563783	Flasque Placa Flangia	- Flansch - Flange	1				
3	109730	Vis Tornillo Vite	- Schraube - Screw -	6				
4	109701	Roulement Rodamiento Cuscinetto	- Läger - Bearing -	1				
5	550597	Joint Junta Guarnizióne	- Dichtung - Seal	1				
6	705151	Flasque d'accouplement Placa de acoplamiento Flangia di accoppiamento	- Verbindung flansch - Coupling flange -	1				
7	550596	Joint torique Junta tórica Anello OR	- "0" ring - "0" ring -	1				
		8					25/02/2	201

	ZAHNRAI REENVIC BEVEL I	D'ANGLES VVORGELEGE ) DE ANGULO VRIVE D'ANGOLO		1- 222758MOD 2- 3- 4- 5-		11- 12- 13- 14- 15-		
Rep Hinw Fig Item Rif	Numéro Teil-Nr Numero Part-Nr Part-Nr	Bez Des Des	ignation eichnung cripcion cription crizione	6- 7- 8- 9- 10- 1 2 3 4 5	6 7 8 9	16- 17- 18- 19- 20- 10 11 12 13	14 15 16 17	18 19 20
8	109798	Rondelle Arandela Rondella	- Unterlegscheibe - Washer -	1	1			
9	561810	Vis Tornillo Vite	- Schraube - Screw -	1 3				
10	550599	Cale d'épaisseur 0,50 mm Cala de espesor Spessore	- Ausgleichscheibe - Shim -	x				
10	550600	Cale d'épaisseur 0,25 mm Cala de espesor Spessore	- Ausgleichscheibe - Shim -	x				
10	550601	Cale d'épaisseur 0,10 mm Cala de espesor Spessore	- Ausgleichscheibe - Shim -	x				
10	550602	Cale d'épaisseur 0,075 mm Cala de espesor Spessore	- Ausgleichscheibe - Shim -	x				
10	550603	Cale d'épaisseur 0,05 mm Cala de espesor Spessore	- Ausgleichscheibe - Shim -	x				
11	550604	Entretoise Separador Distanziale	- Querstrebe - Spacer -	1				
12	563792	Roulement Rodamiento Cuscinetto	- Läger - Bearing	1				
13	564032	Ensemble pignons coniques (2: Kegelrad-Kit (2STCK) Conpunto piñón conica Insieme ingranaggio	3 dents) - Bevel gear assy -	1				
14	550608	Clavette Chaveta Chiavetta	- Keil - Key -	1				

5	ZAHNRAI REENVIO BEVEL I	D'ANGLES )VORGELEGE ) DE ANGULO )RIVE D'ANGOLO		Qté-Menge-Car 1- 222758MOD 2- 3- 4- 5-		11- 12- 13- 14- 15-	109	
Rep Hinw Fig Item Rif	Numéro Teil-Nr Numero Part-Nr Part-Nr	Bez Des Des	ignation eichnung cripcion cription crizione	6- 7- 8- 9- 10- 1 2 3 4 5	6 7 8 9	16- 17- 18- 19- 20- 10 11 12 13	14 15 16 17	18 19 20
38	550616	Rondelle Arandela Rondella	- Unterlegscheibe - Washer -	6	14			
39	109824	Vis Tornillo Vite	- Schraube - Screw -	6				
40	550618	Rondelle frein Arandela freno Rondella	- Sicherungscheibe - Lock washer -	1				
41	550619	Ecrou Tuerca Dado	- Mutter - Nut -					
42	222758	Renvoi d'angles Reenvio de angulo Rinvio d'angolo	- Zahnradvorgelege - Bevel drive	1				
43	602308	Jauge Galga Livello	- Eichmass - Gauge -	1				
44	134677	Joint torique Junta tórica Anello OR	- "0" ring - "0" ring	1				
45	550614	Bouchon Tapón Tappo	- Stopfen Plug	1				
46	550613	Joint d'étanchéité Junta de estanqueidad Guarnizióne	Dichtungsring - Seal	1				
47	604774	Entretoise (11,63mm / 11,65mm Separador Distanziale	n)- Querstrebe - Spacer -	x				
47	604775	Entretoise (11,66mm / 11,68mm Separador Distanziale	n)- Querstrebe - Spacer -	x				
								25/02/2011

6	ZAHNRAI REENVIO BEVEL I	D'ANGOLO	Qté-Menge-Cant-Qty-Q.ta         BP         109           1-         222758MOD         11-           2-         12-         3-           3-         13-           4-         14-           5-         15-	
Rep Hinw Fig Item Rif	Numéro Teil-Nr Numero Part-Nr Part-Nr	Désignation Bezeichnung Descripcion Description Descrizione	6- 7- 8- 9- 10- 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18	3 19 20
47	604776	Entretoise (11,69mm / 11,71mm) - Querstrebe Separador - Spacer Distanziale -	x	
47	604777	Entretoise (11,72mm / 11,74mm) - Querstrebe Separador - Spacer Distanziale -	x	
47	604778	Entretoise (11,75mm / 11,77mm) - Querstrebe Separador - Spacer Distanziale -	x	
47	604779	Distanziale - Entretoise (11,78mm / 11,80mm) - Querstrebe Separador - Spacer Distanziale - Entretoise (11,81mm / 11,83mm) - Querstrebe Separador - Spacer		
47	604780	Entretoise (11,81mm / 11,83mm) - Querstrebe Separador - Spacer Distanziale -	x	
47	604781	Entretoise (11,84mm / 11,86mm) - Querstrebe Separador - Spacer Distanziale -	x	
47	604782	Entretoise (11,87mm / 11,89mm) - Querstrebe Separador - Spacer Distanziale -	x	
47	604783	Entretoise (11,90mm / 11,92mm) - Querstrebe Separador - Spacer Distanziale -	x	
47	604784	Entretoise (11,93mm / 11,95mm) - Querstrebe Separador - Spacer Distanziale -	x	
47	604785	Entretoise (11,96mm / 11,98mm) - Querstrebe Separador - Spacer Distanziale -	x	
47	702779	Entretoise (11,57mm / 11,59mm) - Querstrebe Separador - Spacer Distanziale -	x	

